

DDJ-200

Hardware Diagram for rekordbox di



Group	No.	Name	Function	+SHIFT	
1, DECK	*機能は左右デッキ共通です。				
	1	JOG DIAL	platter	Scratch (Vinyl mode on)	Search
			wheel side	Pitch bend (Vinyl mode off)*1	Pitch bend
	2	BEAT SYNC	Beat Sync on/off	Tempo range	
	3	TEMPO	Tempo control		
	4	PLAY/PAUSE	Play/Pause		--
5	CUE	Set/Call cue, Back cue	Jump to track start		
6	SHIFT	Shift		--	

Group	No.	Name	Function	+SHIFT
2, EFFECT	1	TRANSITION FX	--	--
	3, MIXER			
3, MIXER	1	EQ (HI, MID, LOW)	EQ (HI, MID, LOW)	
	2	CFX	SOUND COLOR FX parameter (CH1, CH2)	
	3	MASTER CUE	Master out monitor on/off	--
	4	CUE	Headphone monitor on/off	--
	5	CHANNEL FADER	Channel fader	Channel fader start
	6	CROSS FADER	Crossfader	Crossfader start

Group	No.	Name	Function	+SHIFT	
4, PERFORMANCE PADS	1	PAD 1-8	mode		
			HOT CUE	Set/Call Hot Cue	Delete Hot Cue
			BEAT LOOP	Auto Beat Loop on/off	
			PAD FX 1	Pad FX1 on*4	
			SAMPLER*2	Sampler slot playback	Sampler slot playback stop
			Load a sample to sampler slot		

- *1 Vinyl mode can not be turned on/off via the DDJ-400. But it can be turned on/off using keyboard shortcut of rekordbox.
- *2 Sampler slot 1 through slot 8 are assigned to left performance pads. Sampler slot 9 through slot 16 are assigned to right performance pads.
- *3 The number of beats assigned to each pad for BEAT LOOP mode is shown as follows.

1/4 beat	1/2 beat	1 beat	2 beat
4 beat	8 beat	16 beat	32 beat

- *4 The effect assigned to each pad for PAD FX mode 1 is shown as follows. When the [SHIFT] button is not pressed

Effect A	Effect B	Effect C	Effect D
Effect E	Effect F	Effect G	Effect H

When the [SHIFT] button is pressed

Effect I	Effect J	Effect K	Effect L
Effect M	Effect N	Effect O	Effect P