

# DDJ-SB2

## Hardware Diagram for rekordbox dj



GROUP	NAME	FUNCTION	+SHIFT
<b>TRANSPORT</b>			
1	PLAY/PAUSE	Play/Pause	
2	CUE	Cue Set/Play, Back Cue	Jump to track start
3	SYNC	Sync On/Off	Master
4	JOG	Top of jog	Scratch (Vinyl On)
		Side of jog	Pitch bend (Vinyl off)
5	TEMPO	Tempo control	Search
6	VINYL	Vinyl mode on/off	SLIP mode on/off
7	KEY LOCK	Master Tempo On/Off	Tempo range
8	SHIFT	Shift	-
9	DECK	Deck Change	-
<b>BROWSE</b>			
19	LOAD	Browse(files/folders/items)	Sort by BPM(CH1), Sort by artist(CH2)
20	BROWSE	Rotate	Move cursor
		Push	Open folder/Scroll layer
<b>MIXER</b>			
21	TRIM	Gain	
22	HI	EQ (High)	
23	MID	EQ (Mid)	
24	LOW	EQ (Low)	
25	FILTER	Channel filter	
26	CUE	Headphones monitor on/off	
27	MASTER LEVEL	Master out level	
28	MIX	Headphones monitor mixing	
29	VOL	Headphones monitor level	
30	CH FADER	Channel fader	Channel fader start
31	CROSSFADER	Cross fader	
32	FILTER FADE *1	Filter Fade On/Off	-
33	CHANNEL LEVEL METER	Channel Level Meter	
<b>EFFECT</b>			
34	1	FX1 On/Off	Select FX1
35	2	FX2 On/Off	Select FX2
36	3	FX3 On/Off	Select FX3
37	LEVEL	Adjust FX level	Select FX1/2 beat

GROUP	NAME	FUNCTION	+SHIFT
<b>PERFORMANCE Pads</b>			
10	HOT CUE	HOT CUE mode On/Off	HOT CUE 5-8 mode On/Off
11	AUTO LOOP	AUTO LOOP mode On/Off	PAD FX1 mode On/Off
12	MANUAL LOOP	MANUAL LOOP mode On/Off	Delete Hotcue 3
13	SAMPLER	SAMPLER mode On/Off	SAMPLER BANK mode On/Off
14	PAD TRANS	-	-
in HOT CUE mode			
15	Pad1	Hotcue 1	Delete Hotcue 1
16	Pad2	Hotcue 2	Delete Hotcue 2
17	Pad3	Hotcue 3	Delete Hotcue 3
18	Pad4	Hotcue 4	Delete Hotcue 4
in AUTO LOOP mode			
15	Pad1	Autoloop 1 Beat	AutoLoop 1/16 Beat
16	Pad2	Autoloop 2 Beat	AutoLoop 1/8 Beat
17	Pad3	Autoloop 4 Beat	AutoLoop 1/4 Beat
18	Pad4	Autoloop 8 Beat	AutoLoop 1/2 Beat
in MANUAL LOOP mode			
15	Pad1	Loop In/Loop In Adjust	Loop move (left)
16	Pad2	Loop Out/Loop Out Adjust	Loop move (right)
17	Pad3	Reloop/Exit	Retrigger
18	Pad4	Loop Half	Loop Double
in SAMPLER mode			
15	Pad1	Sampler 1 Play	Sampler 1 Stop
16	Pad2	Sampler 2 Play	Sampler 2 Stop
17	Pad3	Sampler 3 Play	Sampler 3 Stop
18	Pad4	Sampler 4 Play	Sampler 4 Stop
in HOT CUE 5-8 mode			
15	Pad1	Hotcue 5	Delete Hotcue 5
16	Pad2	Hotcue 6	Delete Hotcue 6
17	Pad3	Hotcue 7	Delete Hotcue 7
18	Pad4	Hotcue 8	Delete Hotcue 8
in PAD FX1 mode			
15	Pad1	Pad FX1 slot 1	Pad FX1 slot 5
16	Pad2	Pad FX1 slot 2	Pad FX1 slot 6
17	Pad3	Pad FX1 slot 3	Pad FX1 slot 7
18	Pad4	Pad FX1 slot 4	Pad FX1 slot 8
in PAD FX2 mode			
15	Pad1	Pad FX2 slot 1	Pad FX2 slot 5
16	Pad2	Pad FX2 slot 2	Pad FX2 slot 6
17	Pad3	Pad FX2 slot 3	Pad FX2 slot 7
18	Pad4	Pad FX2 slot 4	Pad FX2 slot 8
in SAMPLER BANK mode			
15	Pad1	Sampler Bank 1	-
16	Pad2	Sampler Bank 2	-
17	Pad3	Sampler Bank 3	-
18	Pad4	Sampler Bank 4	-

\*1 When FILTER FADE is on, some functions may not be used.  
 • You cannot monitor the audio from a deck on the other side of the current crossfader position.  
 • The FILTER knob cannot be used to control FILTER.

[Note] Please use your computer to control any features other than listed in the above hardware diagram.