## DDJ-SP1 Hardware Diagram for rekordbox dj



GROUP	No.	NAME		FUNCTION	+SHIFT			
1, DE	CK							
	1	DECK 1or3		Select Deck 1or3	Open FX Panel			
	2	DECK 2or4		Select Deck 2or4	Open FX Panel			
	3	SYNC		Sync on/off	Master			
	4	SLIP		Slip mode on/off				
	5	CENSOR (REVERSE)		Slip Reverse	Reverse			
	_	AUTO LOOP	Turn	Loop Half or Double (Left or Right)	Loop Move (Left or Right)			
	6		Press	Auto Loop, Manual Loop on/off	-			
	7	SHIFT		Shift				
2, EFI	FEC	Т						
	1	1		Adjust FX1/2-1 Level				
	2	2		Adjust FX1/2-2 Level				
	3	3		Adjust FX1/2-3 Level				
	4	BEATS	Turn	Select FX1/2 beat	Select Release FX			
	4		Press	Release FX On (Activated only by pressing)	·			
	5	ON		FX1/2-1 on/off	Select Effect FX1/2-1			
	6	ON		FX1/2-2 on/off	Select Effect FX1/2-2			
	7	ON		FX1/2-3 on/off	Select Effect FX1/2-3			
-	8	TAP		FX1/2 Effect Tap / FX1/2 Effect Auto Beat (long press)	Switch FX1/2 Single/Multi mode			
	9	FX1 ASSIGN		Assign FX1 to Deck1	Assign FX1 to Deck3			
	10	FX2 ASSIGN		Assign FX2 to Deck1	Assign FX2 to Deck3			
	11	FX1 ASSIGN		Assign FX1 to Deck2	Assign FX1 to Deck4			
	12	PX2 ASSIGN		Assign FX2 to Deck2	Assign FX2 to Deck4			
3, BR	<u>OW</u>	OWSER						
	1	ROTARY SELECTOR	Turn	Scroll	Enlarged waveform Zoom In/Out			
			Press	Jump between panels (counterclockwise)				
	2	BACK/UTILITY	Press	Jump between panels (clockwise)	Switch banks of Tag List/Playlist Palette			
			Long press	Enter ULITITY mode	-			
	3	LOAD PREPARE		Tag track	Related track			
	4	LOAD	Deck1/3	Load tracks to Deck/				
			Deck2/4	(Double-click) INSTANT DOUBLE				
4, PE	RFC	RMANCE PADS						
	9	HOT CUE		Hot Cue mode on/off	Beat Jump mode on/off			

	10	ROLL		Pad FX 1 mode on/off	Pad FX 2 mode on/off
	11	SLICER		Slicer mode on/off	Slicer Loop mode on/off
	12	SAMPLER		Sampler mode on/off	Velocity Sampler mode on/off
			mode		
			Hot Cue	HOT CUE 1	HOT CUE 1 Delete
			Pad FX 1	PAD FX 1 Slot 1 (Activated only by pressing)	
			Slicer	Play SLICER 1	
1	4	PERFORMANCE	Sampler	Play SAMPLER Slot 1	SAMPLER Slot 1 Pause
	1	PAD 1	Beat Jump	BEAT JUMP (REV1)	JAN IN LEIN SIGN I TOUGH
			Pad Fx 2	PAD FX 2 Slot 1 (Activated only by pressing)	
			Slicer Loop	SLICER LOOP	
				Play SAMPLER Slot 1 /	
			Velocity Sampler	SAMPLER Slot 1 Level (When using PAD Velocity)	SAMPLER Slot 1 Pause
			mode		
			Hot Cue	HOT CUE 2	HOT CUE 2 Delete
			Pad FX 1	PAD FX 1 Slot 2 (Activated only by pressing)	
			Slicer	Play SLICER 2	
	2	PERFORMANCE	Sampler	Play SAMPLER Slot 2	SAMPLER Slot 2 Pause
		PAD 2	Beat Jump	BEAT JUMP (FWD1)	
			Pad Fx 2	PAD FX 2 Slot 2 (Activated only by pressing)	
			Slicer Loop	SLICER LOOP	
			Velocity Sampler	Play SAMPLER Slot 2 / SAMPLER Slot 2 Level (When using PAD Velocity)	SAMPLER Slot 2 Pause
			l mode		
			Hot Cue	HOT CUE 3	HOT CUE 3 Delete
			Pad FX 1	PAD FX 1 Slot 3 (Activated only by pressing)	
			Slicer	Play SLICER 3	
	3	PERFORMANCE	Sampler	Play SAMPLER Slot 3	SAMPLER Slot 3 Pause
		PAD 3	Beat Jump Pad Fx 2	BEAT JUMP (REV2)  PAD FX 2 Slot 3 (Activated only by pressing)	
			Slicer Loop	SLICER LOOP	
			·	Play SAMPLER Slot 3 /	
			Velocity Sampler	SAMPLER Slot 3 Level (When using PAD Velocity)	SAMPLER Slot 3 Pause
			mode		
			Hot Cue	HOT CUE 4	HOT CUE 4 Delete
			Pad FX 1	PAD FX 1 Slot 4 (Activated only by pressing)	
		PERFORMANCE	Slicer Sampler	Play SLICER 4 Play SAMPLER Slot 4	SAMPLER Slot 4 Pause
	4	PAD 4	Beat Jump	BEAT JUMP (FWD2)	JAMI LEN SIOC 4 I dusc
			Pad Fx 2	PAD FX 2 Slot 4 (Activated only by pressing)	
			Slicer Loop	SLICER LOOP	
			Velocity Sampler	Play SAMPLER Slot 4 /	SAMPLER Slot 4 Pause
				SAMPLER Slot 4 Level (When using PAD Velocity)	
			mode Hot Cue	HOT CUE 5	HOT CUE 5 Delete
			Pad FX 1	PAD FX 1 Slot 5 (Activated only by pressing)	HOT COL 3 Delete
			Slicer	Play SLICER 5	SLICE Shift
	5	PERFORMANCE	Sampler	Play SAMPLER Slot 5	SAMPLER Slot 5 Pause
	5	PAD 5	Beat Jump	BEAT JUMP (REV3)	
			Pad Fx 2	PAD FX 2 Slot 5 (Activated only by pressing)	Tourse aus
			Slicer Loop	SLICER LOOP	SLICE Shift
			Velocity Sampler	Play SAMPLER Slot 5 / SAMPLER Slot 5 Level (When using PAD Velocity)	SAMPLER Slot 5 Pause
-			node		
			Hot Cue	HOT CUE 6	HOT CUE 6 Delete
			Pad FX 1	PAD FX 1 Slot 6 (Activated only by pressing)	
			Slicer	Play SLICER 6	SLICE Shift
	6	PERFORMANCE	Sampler	Play SAMPLER Slot 6	SAMPLER Slot 6 Pause
		PAD 6	Beat Jump	BEAT JUMP (FWD3)	
			Pad Fx 2 Slicer Loop	PAD FX 2 Slot 6 (Activated only by pressing) SLICER LOOP	SLICE Shift
			-	Play SAMPLER Slot 6 /	
			Velocity Sampler	SAMPLER Slot 6 Level (When using PAD Velocity)	SAMPLER Slot 6 Pause
			mode		
			Hot Cue	HOT CUE 7	HOT CUE 7 Delete
		DEDEODMANCE	Pad FX 1	PAD FX 1 Slot 7 (Activated only by pressing)	
			Slicer Sampler	Play SLICER 7 Play SAMPLER Slot 7	SAMPLER Slot 7 Pause
	7	PERFORMANCE PAD 7	Beat Jump	BEAT JUMP (REV4)	JAMIFLEN SIDE / Fause
			Pad Fx 2	PAD FX 2 Slot 7 (Activated only by pressing)	
			Slicer Loon	SLICER LOOP	

Slicer Loop

SLICER LOOP

	I			
		Velocity Sampler	Play SAMPLER Slot 7 / SAMPLER Slot 7 Level (When using PAD Velocity)	SAMPLER Slot 7 Pause
		mode		
	PERFORMANCE PAD 8	Hot Cue	HOT CUE 8	HOT CUE 8 Delete
		Pad FX 1	PAD FX 1 Slot 8 (Activated only by pressing)	•
		Slicer	Play SLICER 8	
		Sampler	Play SAMPLER Slot 8	SAMPLER Slot 8 Pause
8		Beat Jump	BEAT JUMP (FWD4)	
		Pad Fx 2	PAD FX 2 Slot 8 (Activated only by pressing)	
		Slicer Loop	SLICER LOOP	
		Velocity Sampler	Play SAMPLER Slot 8 / SAMPLER Slot 8 Level (When using PAD Velocity)	SAMPLER Slot 8 Pause
		mode		
	PARAMETER (◀)	Hot Cue	Call memory CUE (◀)	
		Pad FX 1	Adjust Beat (down)	
		Slicer	Change Roll (down)	Change length (down)
		Sampler	Change bank (down)	
13			Sequence MUTE mode on/off	
		Beat Jump	Change jump range (1/2x)	Change jump range (1/16x)
		Pad Fx 2	Adjust Beat (down)	
		Slicer Loop	Change roll (down)	Change length (down)
		Velocity Sampler	Change bank (down)	
			Sequence MUTE mode on/off	
		mode		
	PARAMETER (▶)	Hot Cue	Call memory CUE (▶)	
		Pad FX 1	Adjust beat (up)	
		Slicer	Change roll (up)	Change length (up)
		Sampler	Change bank (up)	
14			Sequence ERASE mode on/off	
		Beat Jump	Change jump range (2x)	Change jump range (16x)
		Pad Fx 2	Adjust beat (up)	
		Slicer Loop	Change roll (up)	Change length (up)
		Velocity Sampler	Change bank (up)	
			Sequence ERASE mode on/off	
15	SAMPLER VOLUME	-	Sampler volume	-
				•