

DDJ-SR

Hardware Diagram rekordbox DJ



GROUP	No.	NAME	FUNCTION	+SHIFT
1,DECK				
	1	PLAY/PAUSE	Play/Pause	
	2	CUE	Set Cue/Play, Back Cue	Jump to track start
	3	JOG	Scratch (Vinyl on)	Search
			Top of jog	
		Side of jog	Touch	Pitch bend
	4	TEMPO	Tempo control	
	5	KEYLOCK	Master tempo on/off	Tempo range
		Press and hold		
	6	DECK 1	Select deck 1	Adjust jog touch sensitivity
	7	DECK 2	Select deck 2	Adjust jog touch sensitivity
	8	DECK 3	Select deck 3	Adjust jog touch sensitivity
	9	DECK 4	Select deck 4	Adjust jog touch sensitivity
	10	SYNC	Sync on/off	Master
	11	AUTO LOOP	auto loop, manual loop on/off	Loop active on/off
	12	LOOP 1/2X	Select loop size (1/2X)	Loop in / Adjust loop in
	13	LOOP 2X	Select loop size (2X)	Loop out / Adjust loop out
	14	VINYL	Vinyl mode on/off	
	15	SLIP	SLIP mode on/off	
	16	PAD PLUS MODE TAP	*1	
	17	PAD PLUS MODE ON	*1	
	18	BEAT INDICATOR	PAD PLUS MODE : off	Beat of auto loop
			PAD PLUS MODE : on	
	19	SHIFT	Shift	
2,EFFECT				
	1	1	Adjust FX1/2-1 level	
	2	2	Adjust FX1/2-2 level	
	3	3	Adjust FX1/2-3 level	
	4	FX BEATS	Select FX1/2 beat	
	5	ON	FX1/2-1 on/off	Select FX1/2-1
	6	ON	FX1/2-2 on/off	Select FX1/2-2
	7	ON	FX1/2-3 on/off	Select FX1/2-3
	8	TAP	FX1/2 effect Tap / FX1/2 effect Auto Beat (press and hold)	Change FX1/2 mode, single mode or multi mode
	9	FX1 ASSIGN	FX1 on Deck 1 on/off	FX1 on Deck 3 on/off
	10		FX1 on Deck 2 on/off	FX1 on Deck 4 on/off
	11	FX2 ASSIGN	FX2 on Deck 1 on/off	FX2 on Deck 3 on/off
	12		FX2 on Deck 2 on/off	FX2 on Deck 4 on/off
	13	FILTER	Channel filter	
3,MIXER				
	1	CROSSFADER	Cross fader	
	2	CH FADER	Channel fader	Channel fader start (play): Zero → not Zero
			Channel fader start (CUE): not Zero → Zero	
	3	TRIM	Gain	
	4	EQ (HI)	EQ (High)	
	5	EQ (MID)	EQ (Mid)	
	6	EQ (LOW)	EQ (Low)	
	7	HEADPHONES CUE	Headphones monitor on/off	Tap BPM
	8	MASTER LEVEL	Master out level	
	9	HEADPHONES MIX	Headphones monitor mixing	
	10	SAMPLER VOLUME	Sampler volume	
	11	LEVEL INDICATOR SW	Select Master level indicator or Channel level indicator	
	12	Level Indicator	Master level indicator or Channel level indicator	
	13	CROSS F.REV. Indicator	Cross fader reverse indicator	
4,FRONT PANEL				
	1	CROSS FADER CURVE	Cross fader curve	
	2	CROSS FADER REVERSE	Cross fader reverse	
	3	HEADPHONES LEVEL	Headphones monitor level	
	4	MIC LEVEL	Mic level	

GROUP	No.	NAME	FUNCTION	+SHIFT	
5,BROWSER					
	1	ROTARY	Rotate	Track/Folder select	
			Push	Move to track list	Waveform Zoom In/Out
	2	BACK	Move to tree view	Change focus in browse area	
	3	LOAD PREPARE	Tag track	Related track	
	4	LOAD	Left	Load track to deck 1 or deck 3/ (Double click) INSTANT DOUBLE	
			Sort by BPM		
	5	LOAD	Right	Load track to deck 2 or deck 4/ (Double click) INSTANT DOUBLE	
			Sort by artist		
6,PERFORMANCE PADS					
	9	HOT CUE	Hot Cue mode on/off	Beat Jump mode on/off	
	10	ROLL	Pad FX 1 mode on/off	Pad FX 2 mode on/off	
	11	SLICER	Slicer mode on/off	Slicer Loop mode on/off	
	12	SAMPLER	Sampler mode on/off		
			Press and hold mode	Verocity Sampler mode on/off	
	13	PARAMETER (◀)	Hot Cue	Call memory CUE (◀)	
			Pad FX 1	Adjust beat (down)	
			Slicer	Change roll (down)	Change length (down)
			Sampler	Change bank (down)	
			Beat Jump	Sequence MUTE mode on/off	
			Pad FX 2	Change jump range (1/2X)	Change jump range (1/16X)
			Slicer Loop	Adjust beat (down)	
			Slicer Loop	Change roll (down)	Change length (down)
			Verocity Sampler	Change bank (down)	
			Verocity Sampler	Sequence MUTE mode on/off	
	14	PARAMETER (▶)	Hot Cue	Call memory CUE (▶)	
			Pad FX 1	Adjust beat (up)	
			Slicer	Change roll (up)	Change length (up)
			Sampler	Change bank (up)	
			Beat Jump	Sequence ERASE mode on/off	
			Pad FX 2	Change jump range (2X)	Change jump range (/16X)
			Slicer Loop	Adjust beat (up)	
			Slicer Loop	Change roll (up)	Change length (up)
			Verocity Sampler	Change bank (up)	
			Verocity Sampler	Sequence ERASE mode on/off	
	1	PERFORMANCE PAD n n=1,3,5,7	Hot Cue	HOT CUE n	
			Pad FX 1	PAD FX 1 slot n (Only during pressing)	Delete HOT CUE n
			Slicer	Play SLICER n	Slice Shift (only for Pad 5)
			Sampler	Play SAMPLER Slot n	Stop SAMPLER slot n
			Beat Jump	BEAT JUMP (REV 1,2,3,4)	
			Pad FX 2	PAD FX 2 slot n (Only during pressing)	
			Slicer Loop	SLICER LOOP	Slice Shift (only for Pad 5)
	7	Verocity Sampler	Play SAMPLER slot n / SAMPLER slot n level (when using PAD)	Stop SAMPLER Slot n	
	2	PERFORMANCE PAD n n=2,4,6,8	Hot Cue	HOT CUE n	
			Pad FX 1	PAD FX 1 slot n (Only during pressing)	Delete HOT CUE n
			Slicer	Play SLICER n	Slice Shift (only for Pad 6)
			Sampler	Play SAMPLER slot n	Stop SAMPLER slot n
			Beat Jump	BEAT JUMP (FWD 1,2,3,4)	
			Pad FX 2	PAD FX 2 slot n (Only during pressing)	
			Slicer Loop	SLICER LOOP	Slice Shift (only for Pad 6)
	8	Verocity Sampler	Play SAMPLER slot n / SAMPLER slot n level (when using PAD)	Stop SAMPLER slot n	

*1 : PAD PLUS does not work properly.