


DDJ-WeGO

Hardware Diagram for rekordbox dj

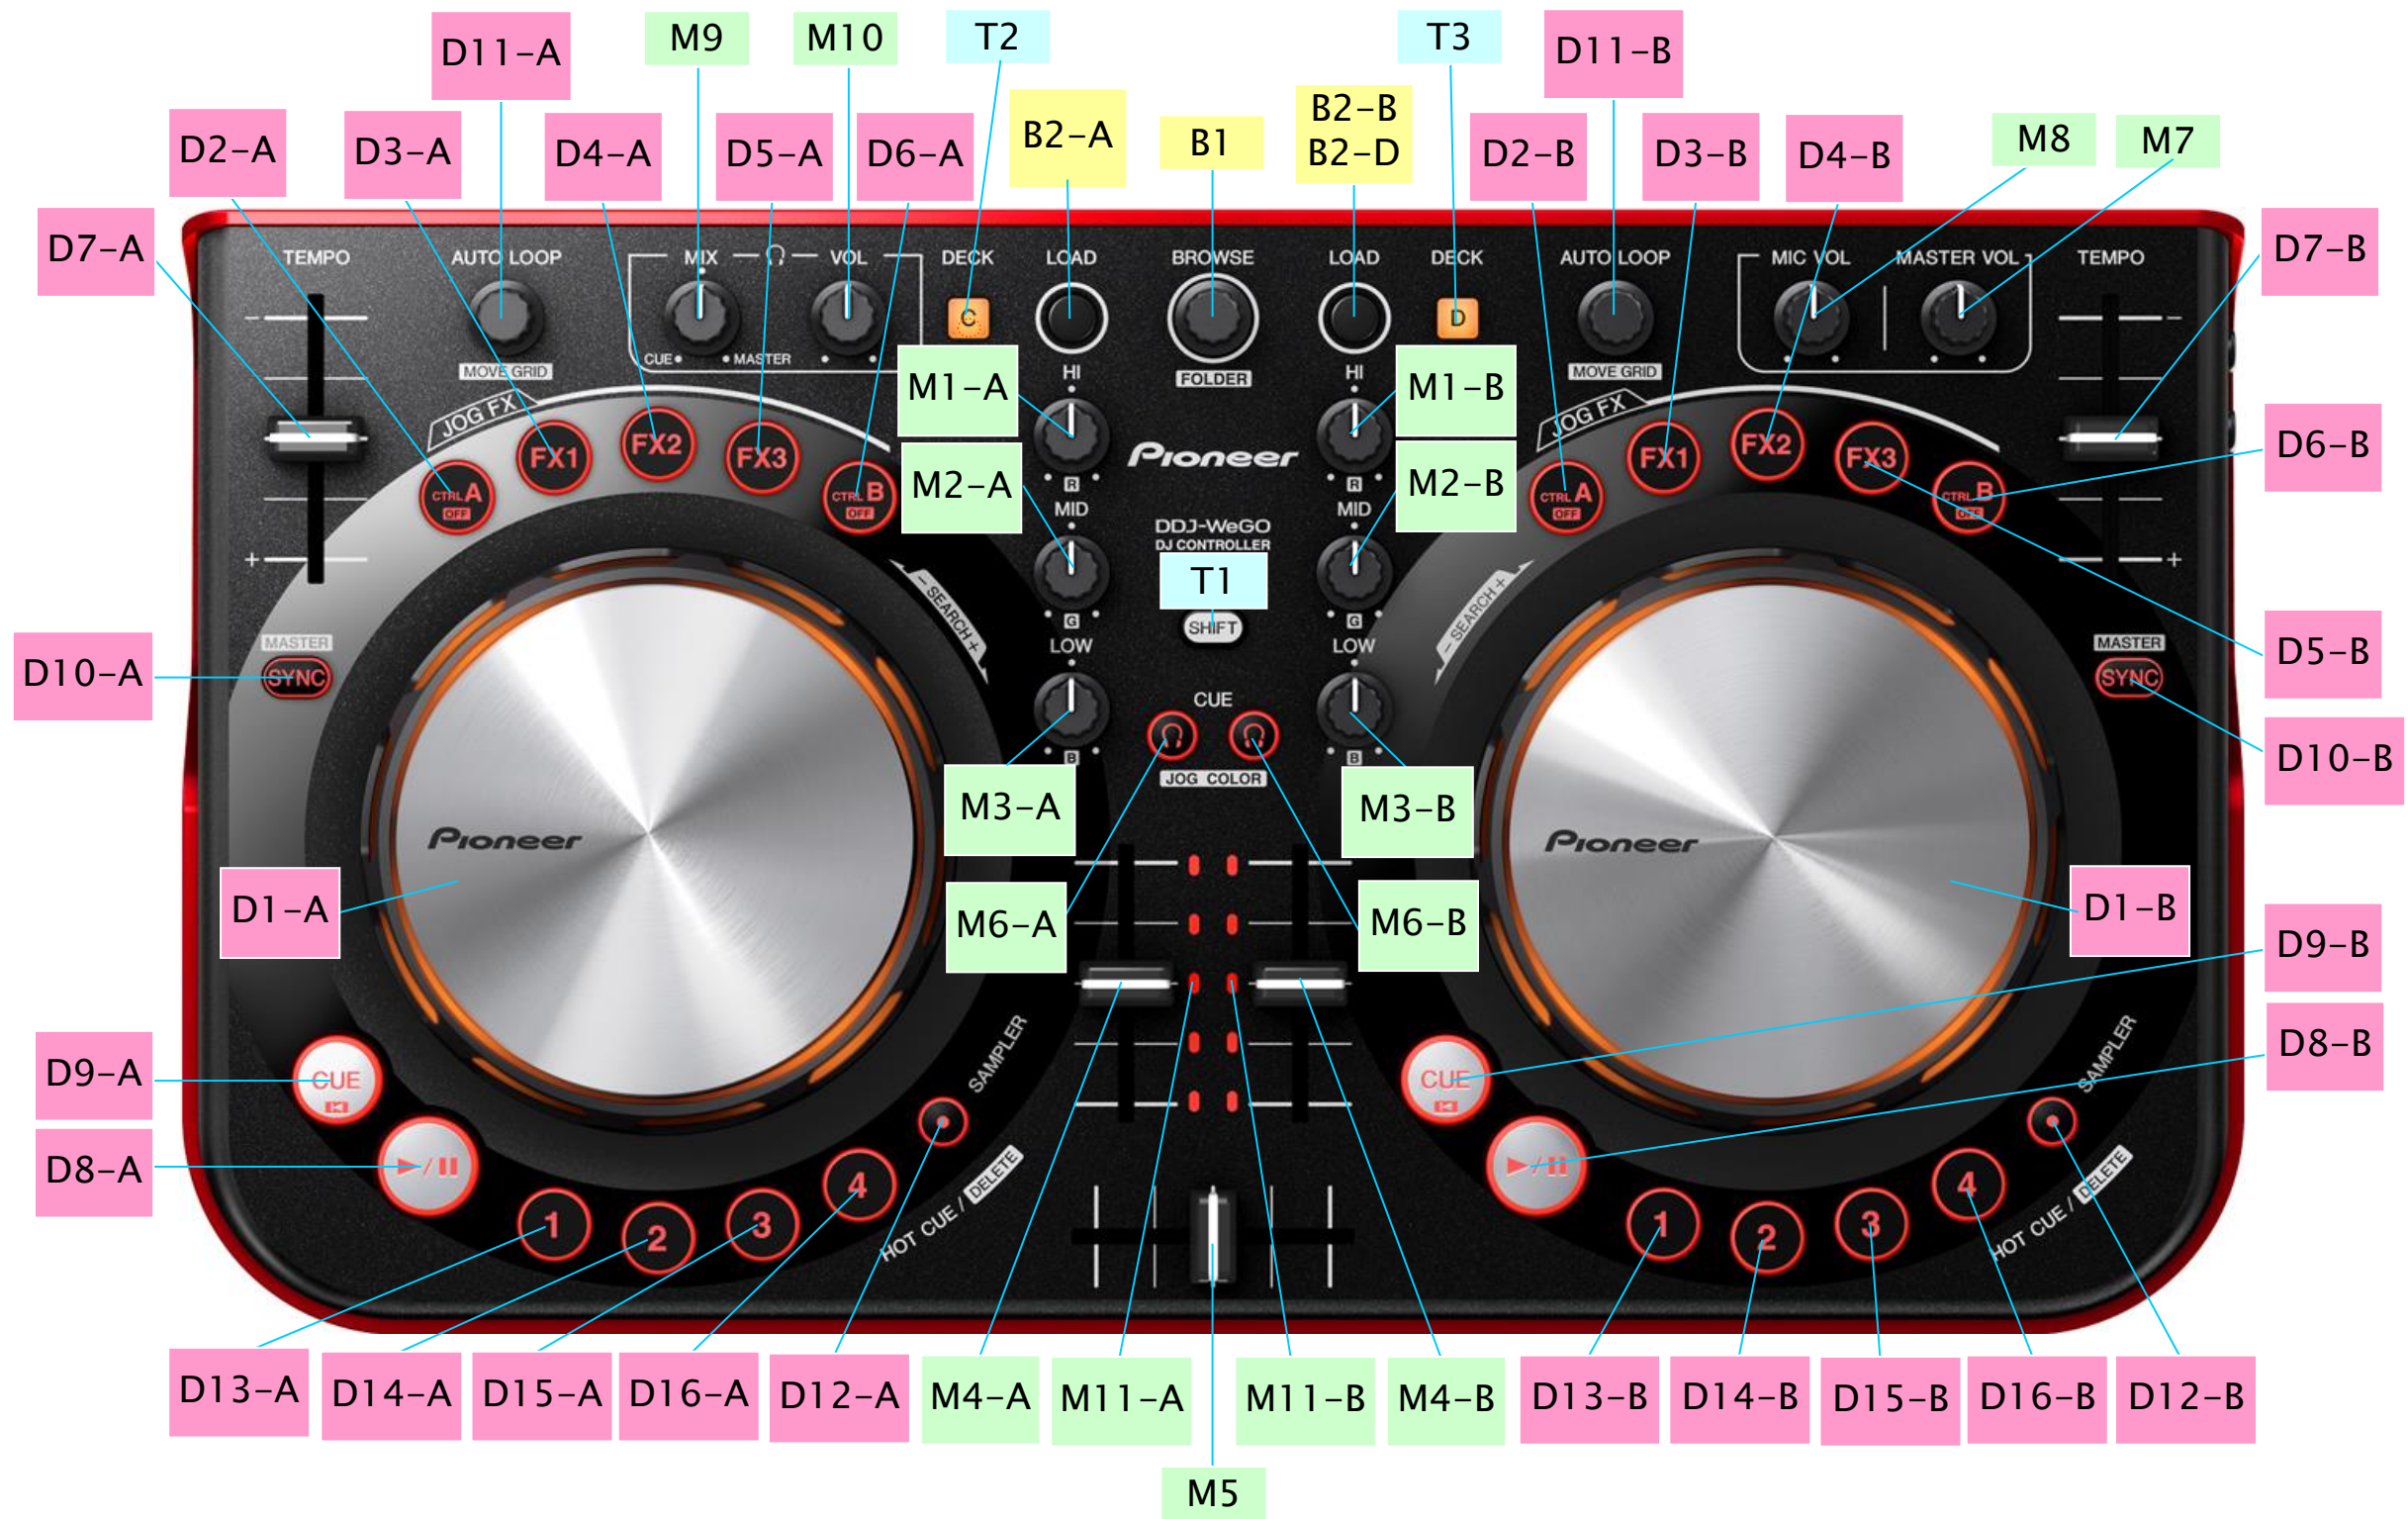

Group	No.	Name	Operation	Function	+SHIFT		
Browse	B1	BROWSE	Turn	Browse(files/folders/items)	Waveform Zoom In/Out		
	B2	LOAD	Press	Open folder/Scroll layer	Close folder/Scroll layer		
Mixer	M1	HI	Turn	EQ (High)	Adjust luminance of red LED on 4 sides of the JOG		
	M2	MID	Turn	EQ (Mid)	Adjust luminance of green LED on 4 sides of the JOG		
	M3	LOW	Turn	EQ (Low)	Adjust luminance of blue LED on 4 sides of the JOG		
	M4	CH Fader	Move the slider	Channel fader	-		
	M5	Cross Fader	Move the slider	Cross fader	-		
	M6	CUE	Press	Headphones monitor on/off	Change colors of LED on 4 sides of the JOG		
	M7	MASTER VOL	Turn	Master out level	-		
	M8	MIC VOL	Turn	MIC input level	-		
	M9	MIX	Turn	HEADPHONES MIX	HEADPHONES MIX		
	M10	HEADPHONES VOL	Turn	HEADPHONES LEVEL	-		
	M11	CH Input Level Meter	-	Channel Input Level Indicator	-		
Deck	D1	JOG	Top of jog	-	Turn	Scratch	Seek
		Side of jog	-	Turn	Pitch bend	Pitch bend	
		Top of jog	CTRL A / FX1 / FX2	Turn	Adjust Parameter	-	
		Side of jog	/ FX3 / CTRL B	-	-	-	
	D2	CTRL A	Press	FILTER	All JOGFX Mode is off		
	D3	FX1	Press	JOGFX FX1 Mode on	Select Effect1		
	D4	FX2	Press	JOGFX FX2 Mode on	Select Effect2		
	D5	FX3	Press	JOGFX FX3 Mode on	Select Effect3		
	D6	CTRL B	Press	Select Beats	All JOGFX Mode is off		
	D7	TEMPO	Move the slider	TEMPO control	-		
	D8	PLAY/PAUSE	Press	PLAY/PAUSE	-		
	D9	CUE	Press	Set Cue/Play, Back Cue	Jump to track start		
	D10	SYNC	Press	SYNC On/Off	Master		
	D11	AUTO LOOP	-	Turn	Loop Size Select	Loop Move	
			LOOP OFF	Press	Auto Loop On	Reloop	
			LOOP ON	Press	Loop Off	Loop Off	
-			Press	Sampler Mode ON/OFF	-		
D12	SAMPLER	Press	Sampler Mode ON/OFF	-			
D13	Hot CUE 1	-	Press	Hot Cue Point 1	Delete Hot Cue Point 1		
		SAMPLER 1	SAMPLER Mode	Sampler 1 Play	Sampler 1 Stop / (Slot is Empty) Load from List		
D14	Hot CUE 2	-	Press	Hot Cue Point 2	Delete Hot Cue Point 2		
		SAMPLER 2	SAMPLER Mode	Sampler 2 Play	Sampler 2 Stop / (Slot is Empty) Load from List		
D15	Hot CUE 3	-	Press	Hot Cue Point 3	Delete Hot Cue Point 3		
		SAMPLER 3	SAMPLER Mode	Sampler 3 Play	Sampler 3 Stop / (Slot is Empty) Load from List		
D16	Hot CUE 4	-	Press	Hot Cue Point 4	Delete Hot Cue Point 4		
		SAMPLER 4	SAMPLER Mode	Sampler 4 Play	Sampler 4 Stop / (Slot is Empty) Load from List		
Others	T1	SHIFT	Press	Shift	-		
	T2	DECK C	Press	Switch Deck A and Deck C	-		
	T3	DECK D	Press	Switch Deck B and Deck D	-		