


XDJ-RR

Hardware Diagram for rekordbox dj

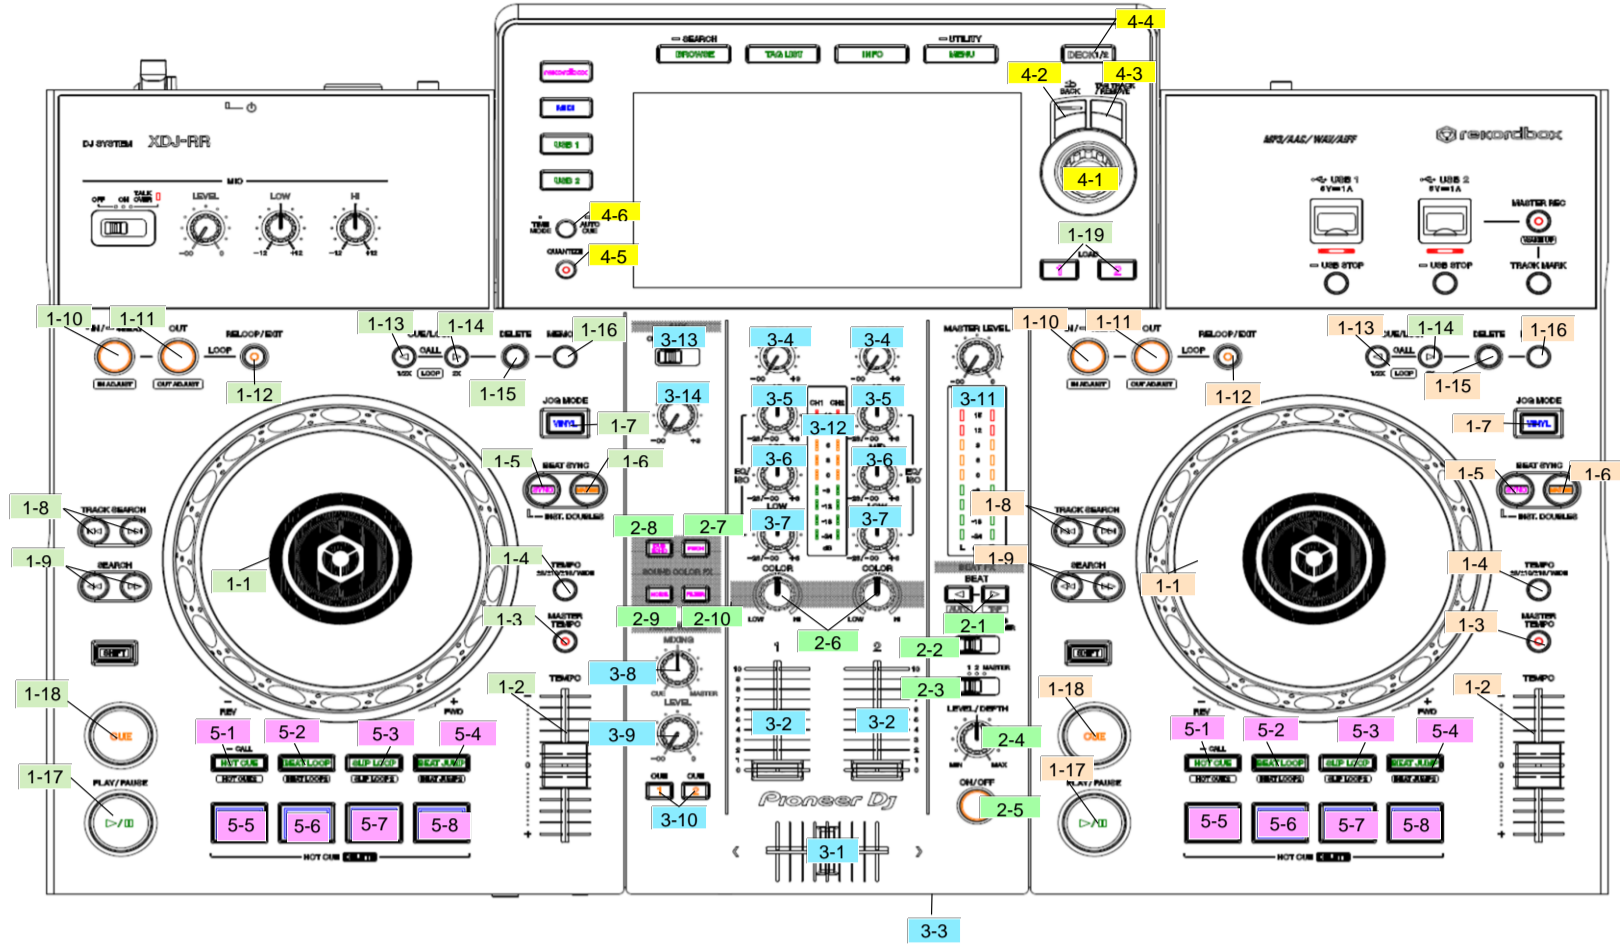

GROUP	No.	NAME	FUNCTION	+SHIFT		
1, DECK						
1	1	JOG	<i>platter</i>	Scratch (Vinyl On)	Search (SKIP mode)	
					Pitch bend (Vinyl Off)	
			<i>wheel side</i>		Pitch bend	
	2	TEMPO		Tempo control		
	3	MASTER TEMPO		Master Tempo On/Off		
	4	TEMPO RANGE		Tempo Range		
	5	SYNC		Sync On/Off		
	6	MASTER	<i>long press</i>	INSTANT DOUBLES	Master	
	7	JOG MODE		Vinyl On/Off		
	8	TRACK SEARCH		PREV / NEXT TRACK		
	9	SEARCH		BEAT JUMP (While Play: BEAT JUMP 8, While Pause: BEAT JUMP FINE)		
	10	LOOP IN	<i>long press</i>	Loop in / Loop in adjust	4 BEAT Loop	
	11	LOOP OUT		Loop out / Loop out adjust		
	12	RELOOP/EXIT		Reloop/Exit		
	13	CALL NEXT / 2X		CUE/LOOP CALL, FWD	Loop Size Select (Double)	
	14	CALL PREV / 1/2X	<i>During loop playback</i>	CUE/LOOP CALL, REV	Loop Size Select (Half)	
	15	DELETE		DELETE		
	16	MEMORY		MEMORY		
	17	PLAY/PAUSE		Play/Pause		
18	CUE		Set/call cue, Back cue			
19	LOAD	<i>Press twice</i>	Load tracks	INSTANT DOUBLES		
2, EFFECT						
2	1	BEAT	<i>RIGHT</i>	FX beat up	TAP	
			<i>LEFT</i>	FX beat down	AUTO	
	2	EFFECT SELECT	<i>ECHO</i>	FX1: ECHO		
			<i>REVERB</i>	FX1: REVERB		
			<i>FLANGER</i>	FX1: FLANGER		
	3	CH SELECT	<i>1CH</i>	FX CH1: On (others: Off)		
			<i>2CH</i>	FX CH2: On (others: Off)		
			<i>MASTER</i>	MASTER: On (others: Off)		
	4	LEVEL DEPTH		FX1 level control		
	5	EFFECT ON/OFF		FX1 On/Off	Select FX1	
6	COLOR		SOUND COLOR FX parameter control (CH1 ~ 4)			
7	CFX PITCH		SOUND COLOR FX (PITCH) On/Off			
8	CFX DUB ECO		SOUND COLOR FX (DUB ECO) On/Off			
9	CFX NOISE		SOUND COLOR FX (NOISE) On/Off			
10	CFX FILTER		SOUND COLOR FX (FILTER) On/Off			
3, MIXER						
3	1	CROSSFADER	CROSSFADER			
	2	CH FADER	CHANNEL FADER			
	3	CROSS FADER CURVE	CROSS FADER CURVE			
	4	TRIM	Gain			
	5	HI	EQ (High)			
	6	MID	EQ (Mid)			
	7	LOW	EQ (Low)			
	8	HEADPHONES MIXING	No function assigned here			
	9	HEADPHONES LEVEL	No function assigned here			
	10	CUE (Headphone)	Headphone CUE On/Off			
	11	MASTER LEVEL	No function assigned here			
	11	CH LEVEL	No function assigned here			
	13	AUX SELECT	No function assigned here			
	14	AUX TRIM	No function assigned here			
4, BROWSER						
4	1	Rotary Selector	<i>rotate</i>	Browse (Track/Folder Select)	Enlarged waveform Zoom In/Out	
			<i>press</i>	Jump between panels (forward)		
	2	BACK	Jump between tree view/panels (backward)	Switch banks of Tag List/Playlist Palette		
	3	TAG TRACK/REMOVE	Add/delete track to/from TAG LIST	Show Related Tracks		
	4	DECK 1/2	Change from Deck 1/2 to/from Deck 3/4	Switch only the deck where SHIFT is pressed.		
	5	QUANTIZE	Quantize on/off			
6	TIME MODE / AUTO CUE		TIME MODE (REMAINING / ELAPSED TIME)			
		<i>long press</i>	A.Cue On/Off			

GROUP	No.	NAME	FUNCTION	+SHIFT	
5, PERFORMANCE PADS					
5	1	HOT CUE	HOT CUE	HOT CUE (EXTENSION1)	
	2	BEAT LOOP	BEAT LOOP	BEAT LOOP (EXTENSION2)	
	3	SLIP LOOP	PAD FX	PAD FX (EXTENSION3)	
	4	BEAT JUMP	BEAT JUMP	BEAT JUMP (EXTENSION4)	
	5	PERFORMANCE PAD A		<i>mode</i>	
			HOT CUE	Set/call Hot Cue A	Delete HOT CUE A
			HOT CUE (EXTENSION1)	Set/call Hot Cue E	Delete HOT CUE E
			BEAT LOOP	4 BEAT LOOP	4 BEAT LOOP
			BEAT LOOP (EXTENSION2)	1/4 BEAT LOOP	1/4 BEAT LOOP
			SLIP LOOP	PAD FX1(Pad1)	PAD FX1(Pad5)
			SLIP LOOP (EXTENSION3)	PAD FX1(Pad9)	PAD FX1(Pad13)
			BEAT JUMP	BEAT JUMP	No function assigned here
		BEAT JUMP (EXTENSION4)	BEAT JUMP	No function assigned here	
	6	PERFORMANCE PAD B		<i>mode</i>	
			HOT CUE	Set/call Hot Cue B	Delete HOT CUE B
			HOT CUE (EXTENSION1)	Set/call Hot Cue F	Delete HOT CUE F
		BEAT LOOP	8 BEAT LOOP	8 BEAT LOOP	
		BEAT LOOP (EXTENSION2)	1/2 BEAT LOOP	1/2 BEAT LOOP	
		SLIP LOOP	PAD FX1(Pad2)	PAD FX1(Pad6)	
		SLIP LOOP (EXTENSION3)	PAD FX1(Pad10)	PAD FX1(Pad14)	
		BEAT JUMP	BEAT JUMP	No function assigned here	
	BEAT JUMP (EXTENSION3)	BEAT JUMP	No function assigned here		
7	PERFORMANCE PAD C		<i>mode</i>		
		HOT CUE	Set/call Hot Cue C	Delete HOT CUE C	
		HOT CUE (EXTENSION1)	Set/call Hot Cue G	Delete HOT CUE G	
		BEAT LOOP	16 BEAT LOOP	16 BEAT LOOP	
		BEAT LOOP (EXTENSION2)	1 BEAT LOOP	1 BEAT LOOP	
		SLIP LOOP	PAD FX1(Pad3)	PAD FX1(Pad7)	
		SLIP LOOP (EXTENSION3)	PAD FX1(Pad11)	PAD FX1(Pad15)	
		BEAT JUMP	BEAT JUMP	BEAT JUMP Previous Page	
	BEAT JUMP (EXTENSION3)	BEAT JUMP	BEAT JUMP Previous Page		
8	PERFORMANCE PAD D		<i>mode</i>		
		HOT CUE	Set/call Hot Cue D	Delete HOT CUE D	
		HOT CUE (EXTENSION1)	Set/call Hot Cue H	Delete HOT CUE H	
		BEAT LOOP	32 BEAT LOOP	2 BEAT LOOP	
		BEAT LOOP (EXTENSION2)	2 BEAT LOOP	2 BEAT LOOP	
		SLIP LOOP	PAD FX1(Pad4)	PAD FX1(Pad8)	
		SLIP LOOP (EXTENSION3)	PAD FX1(Pad12)	PAD FX1(Pad16)	
		BEAT JUMP	BEAT JUMP	BEAT JUMP Next Page	
	BEAT JUMP (EXTENSION3)	BEAT JUMP	BEAT JUMP Next Page		

Note: LED on/off status and GUI may not match.