



CDJ/XDJのボタンで「rekordbox dj」を操作する デフォルトの設定は次の通りです。

■ CDJ-TOUR1

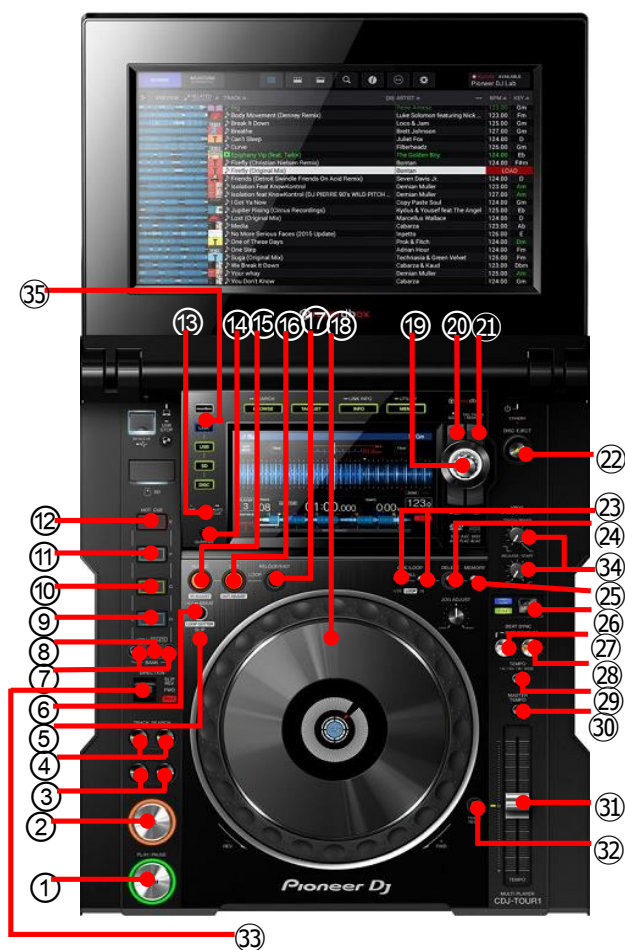


No.	CDJ-TOUR1	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 18 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE
22	DISC EJECT	PLAYER UNLOAD

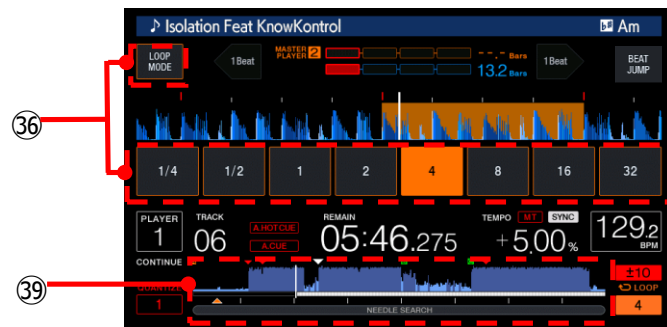


23	CUE / LOOP CALL	CUE/ LOOP CALL
24	DELETE	DELETE
25	MEMORY	MEMORY
26	JOG MODE	JOG MODE
27	BEAT SYNC / INST. DOUBLES	BEAT SYNC Long press: INST. DOUBLES
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST
35	LINK	CONNECT TO rekordbox dj
36	LOOP MODE	-
	AUTO LOOP 1/4, 1/2, 1, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
37	1 BEAT	BEAT JUMP (1)
38	BEAT JUMP	-
	2,4,8,16 BEAT	BEAT JUMP (2),(4),(8),(16)
39	WAVEFORM	Needle Search

CDJ-2000NXS2

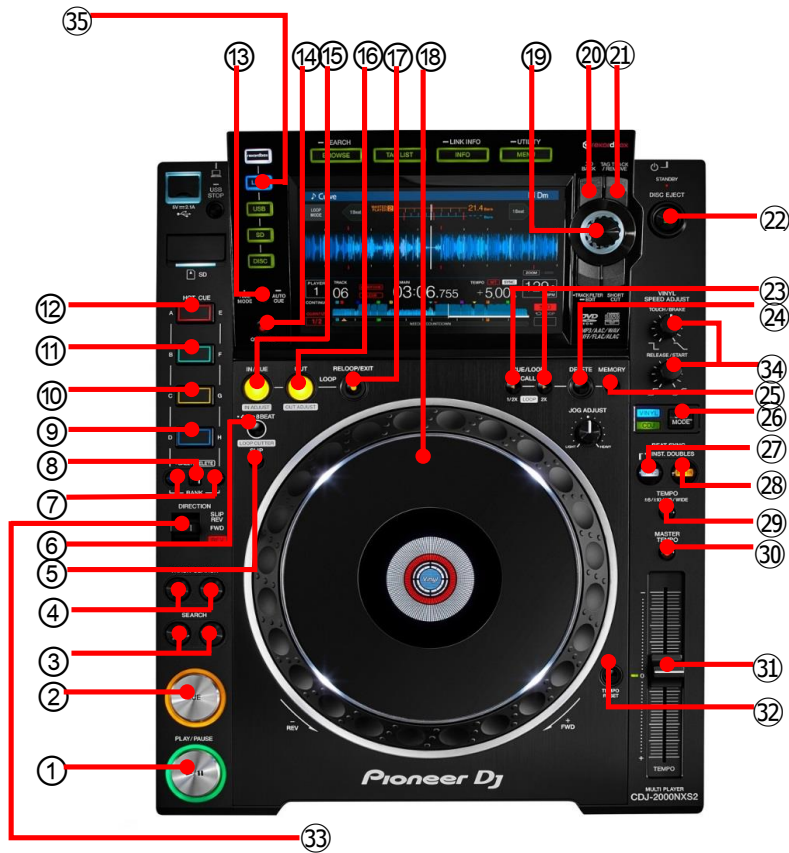


No.	CDJ-2000NXS2	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 18 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE
22	DISC EJECT	PLAYER UNLOAD
23	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
24	DELETE	DELETE
25	MEMORY	MEMORY
26	JOG MODE	JOG MODE

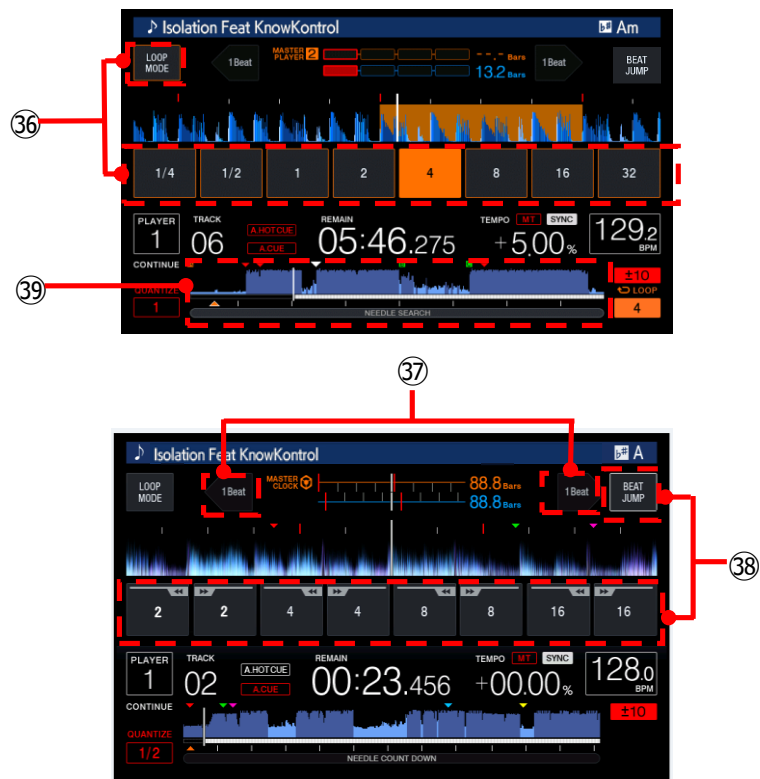

27	BEAT SYNC / INST. DOUBLES	BEAT SYNC Long press: INST. DOUBLES
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST
35	LINK	CONNECT TO rekordbox dj
36	LOOP MODE	-
37	AUTO LOOP 1/4, 1/2, 1, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
38	1 BEAT	BEAT JUMP (1)
39	BEAT JUMP 2,4,8,16 BEAT	BEAT JUMP (2),(4),(8),(16)
39	WAVEFORM	Needle Search

CDJ-2000NXS

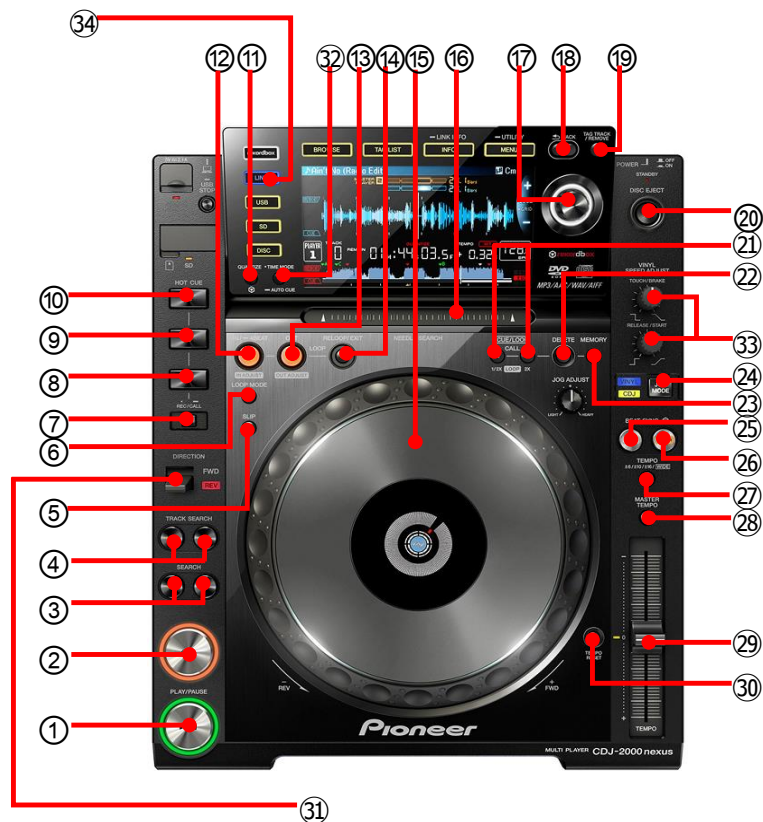


※ 拡大波形は、rekordbox djコントロール時には表示されません。

No.	CDJ-2000NXS	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	LOOP MODE	AUTO LOOP 4
7	HOT CUE REC/CALL	HOT CUE REC / CALL
8	HOT CUE C	SELECT / SET + STORE HOTCUE C
9	HOT CUE B	SELECT / SET + STORE HOTCUE B
10	HOT CUE A	SELECT / SET + STORE HOTCUE A
11	QUANTIZE	QUANTIZE
12	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
13	LOOP OUT	LOOP OUT / OUT ADJUST
14	RELOOP / EXIT	RELOOP / EXIT
15	JOG DIAL	JOG DIAL
3+15	Press 3 and turn 15 simultaneously	SEARCH
16	NEEDLE SEARCH	NEEDLE SEARCH
17	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
18	BACK	BACK
19	TAG TRACK / REMOVE	TAG TRACK / REMOVE
20	DISC EJECT	PLAYER UNLOAD
21	CUE / LOOP CALL	CUE / LOOP CALL While Loop: Loop Size 1/2, 2x
22	DELETE	DELETE
23	MEMORY	MEMORY
24	JOG MODE	JOG MODE

25	BEAT SYNC	BEAT SYNC
		Long press: INST. DOUBLES
26	BEAT SYNC MASTER	BEAT SYNC MASTER
27	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
28	MASTER TEMPO	MASTER TEMPO
29	TEMPO	TEMPO
30	TEMPO RESET	TEMPO RESET
31	DIRECTION	FWD. / REV.
32	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Long press: Auto Cue
33	VINYL SPEED ADJUST	VINYL SPEED ADJUST
34	LINK	CONNECT TO rekordbox dj

CDJ-900NXS

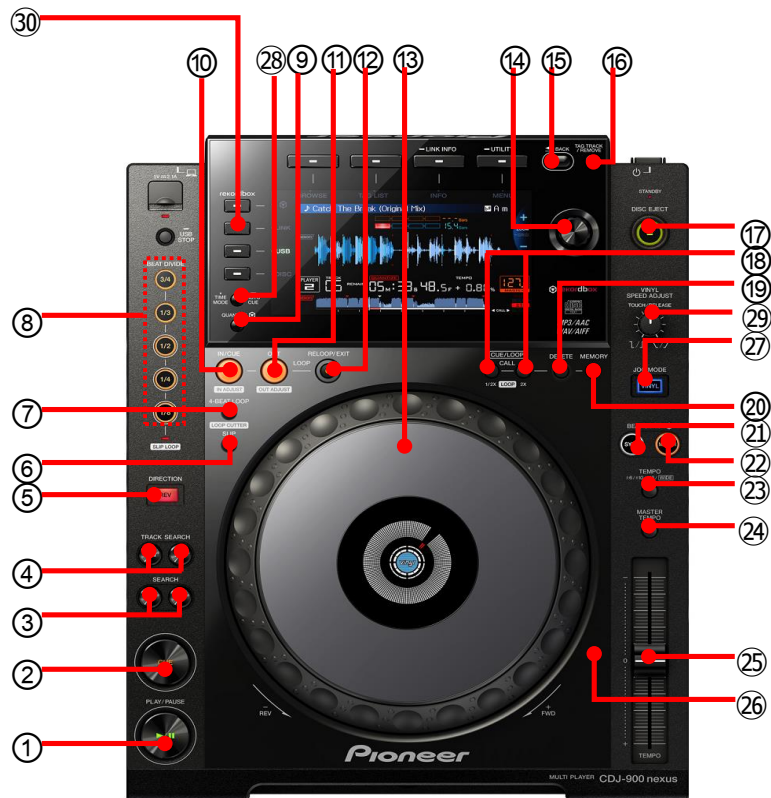


※ 拡大波形は、rekordbox djコントロール時には表示されません。

No.	CDJ-900NXS	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	DIRECTION	FWD. / REV.
6	SLIP	SLIP
7	4-BEAT LOOP	4 BEAT AUTO LOOP
8	BEAT DIVIDE 3/4	AUTO BEAT LOOP 3/4
	BEAT DIVIDE 1/3	AUTO BEAT LOOP 1/3
	BEAT DIVIDE 1/2	AUTO BEAT LOOP 1/2
	BEAT DIVIDE 1/4	AUTO BEAT LOOP 1/4
	BEAT DIVIDE 1/8	AUTO BEAT LOOP 1/8
9	QUANTIZE	QUANTIZE
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 and turn 13 simultaneously	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	BEAT SYNC	BEAT SYNC
		Long press: INST. DOUBLES



22	BEAT SYNC MASTER	BEAT SYNC MASTER
23	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	JOG MODE	JOG MODE
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Long press: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox dj

■ XDJ-1000mk2

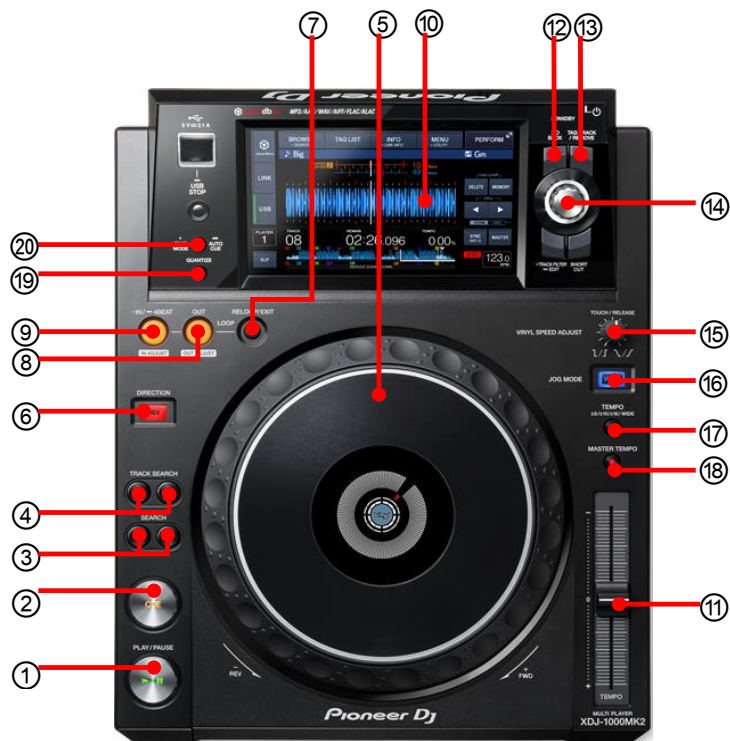

※ 拡大波形は、rekordbox djコントロール時には表示されません。

No.	XDJ-1000mk2	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO
19	QUANTIZE	QUANTIZE
20	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue

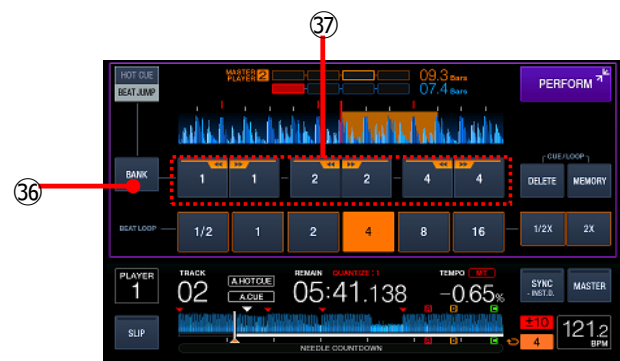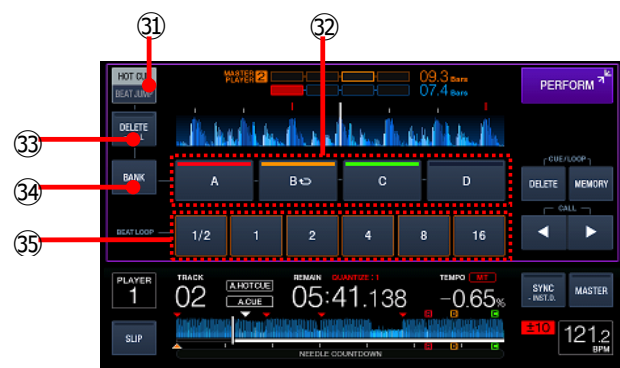

21	PERFORM	PERFORM
22	BROWSE	BROWSE
23	INFO	INFO
24	SOUCE SELECT - LINK	CONNECT TO rekordbox
25	SLIP	SLIP
26	BEAT SYNC	BEAT SYNC
27	BEAT SYNC MASTER	BEAT SYNC MASTER
28	CUE / LOOP CALL	CUE/ LOOP CALL
29	MEMORY	MEMORY
30	DELETE	DELETE
31	HOT CUE/BEAT JUMP	HOT CUE/BEAT JUMP
32	HOT CUE A/E HTO CUE B/F HTO CUE C/G HOT CUE D/H	SELECT HOTCUE A~H/ SET + STORE HOTCUE A~H
33	DELETE / CALL	HOT CUE DELETE Long press: HOT CUE CALL
34	BANK	HOT CUE BANK
35	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8, 16
36	BANK	BEAT JUMP BANK
37	BEAT JUMP	BEAT JUMP 1, 2, 4, 8, 16, 32

※ 拡大波形は、rekordbox djコントロール時には表示されません。

■ XDJ-1000



No.	XDJ-1000	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED Long press: ---
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO

※ 拡大波形は、rekordbox djコントロール時には表示されません。




20	WAVEFORM	Needle Search
21	SLIP	SLIP
22	LOOP MODE	LOOP MODE
	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8, 16
23	SOURCE SELECT - LINK	CONNECT TO rekordbox
24	BROWSE	BROWSE
25	INFO	INFO
26	PERFORM	PERFORM
27	CUE / LOOP CALL	CUE/ LOOP CALL
		While Loop: Loop Size 1/2, 2x
28	MEMORY / DELETE	MEMORY /
		Long press: DELETE
29	QUANTIZE	QUANTIZE
30	BEAT SYNC	BEAT SYNC
		Long press: INST. DOUBLES
	BEAT SYNC MASTER	BEAT SYNC MASTER
31	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Long press: Auto Cue
32	HOT CUE C	SELECT / SET + STORE HOTCUE C
	HOT CUE B	SELECT / SET + STORE HOTCUE B
	HOT CUE A	SELECT / SET + STORE HOTCUE A
33	HALF / DOUBLE LOOP	HALF / DOUBLE LOOP
34	HOT CUE REC	HOT CUE REC
35	BEAT JUMP	BEAT JUMP (1, 2, 4)

■ XDJ-700



※ 拡大波形は、rekordbox djコントロール時には表示されません。


No.	XDJ-700	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5	SEARCH
6	RELOOP / EXIT	RELOOP / EXIT
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
9	TOUCH DISPLAY	---
10	TEMPO	TEMPO
11	BACK	BACK
12	TAG TRACK / REMOVE	TAG TRACK / REMOVE
13	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
14	VINYL MODE	JOG MODE
15	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO

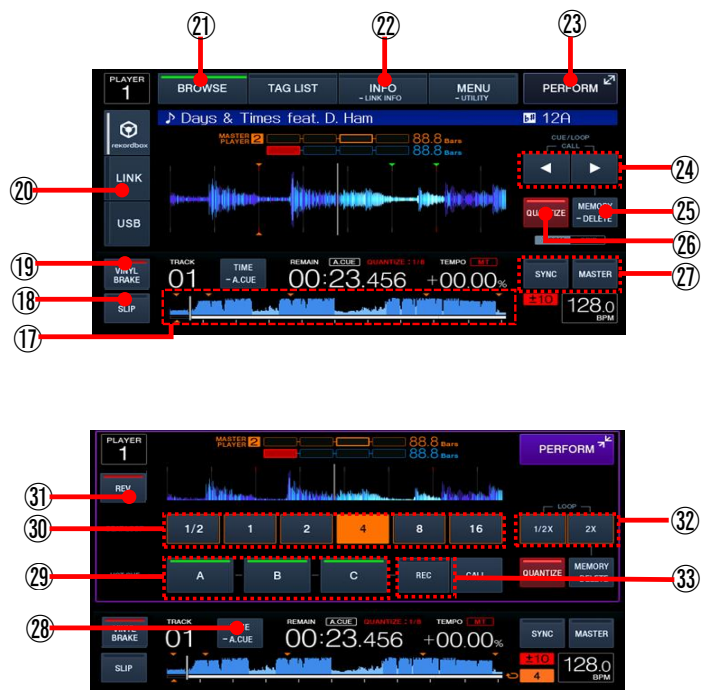

17	WAVEFORM	Needle Search
18	SLIP	SLIP
19	VINYL BRAKE	VINYL SPEED ADJUST - TOUCH/BRAKE
20	SOURCE SELECT - LINK	CONNECT TO rekordbox
21	BROWSE	BROWSE
22	INFO	INFO
23	PERFORM	PERFORM
24	CUE / LOOP CALL	CUE/ LOOP CALL
25	MEMORY / DELETE	While Loop: Loop Size 1/2, 2x
26	QUANTIZE	MEMORY /
27	BEAT SYNC	QUANTIZE
	BEAT SYNC MASTER	BEAT SYNC
28	TIME MODE / AUTO CUE	Long press: INST. DOUBLES
		BEAT SYNC MASTER
		REMAINING / ELAPSED TIME
		Long press: Auto Cue
29	HOT CUE C	SELECT / SET + STORE HOTCUE C
	HOT CUE B	SELECT / SET + STORE HOTCUE B
	HOT CUE A	SELECT / SET + STORE HOTCUE A
30	AUTO LOOP 1/2, 1, 4, 8, 16	AUTO LOOP 1/2, 1, 4, 8, 16
31	REV	REV
32	HALF / DOUBLE LOOP	HALF / DOUBLE LOOP
33	HOT CUE REC	HOT CUE REC


※ 拡大波形は、rekordbox djコントロール時には表示されません。

CDJ-2000

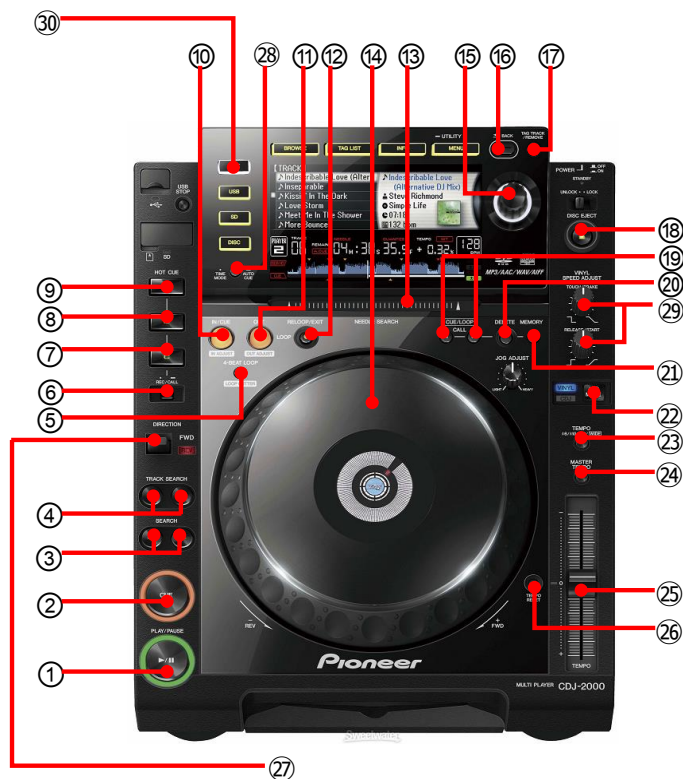


No.	CDJ-2000	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	4 BEAT LOOP / LOOP CUTTER	AUTO LOOP 4 LOOP SIZE /2
6	HOT CUE REC/CALL	HOT CUE REC / CALL
7	HOT CUE C	SELECT / SET + STORE HOTCUE C
8	HOT CUE B	SELECT / SET + STORE HOTCUE B
9	HOT CUE A	SELECT / SET + STORE HOTCUE A
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE Long press: AUTO LOOP 4
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	NEEDLE SEARCH	NEEDLE SEARCH
3+14	Press 3 and turn 14 simultaneously	SEARCH
14	JOG DIAL	JOG DIAL
15	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
16	BACK	BACK
17	TAG TRACK / REMOVE	TAG TRACK / REMOVE
18	DISC EJECT	PLAYER UNLOAD
19	CUE / LOOP CALL	CUE / LOOP CALL While Loop: Loop Size 1/2, 2x
20	DELETE	DELETE
21	MEMORY	MEMORY
22	JOG MODE	JOG MODE
23	TEMPO ±6/±10/	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	DIRECTION	FWD. / REV.
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox dj

CDJ-900

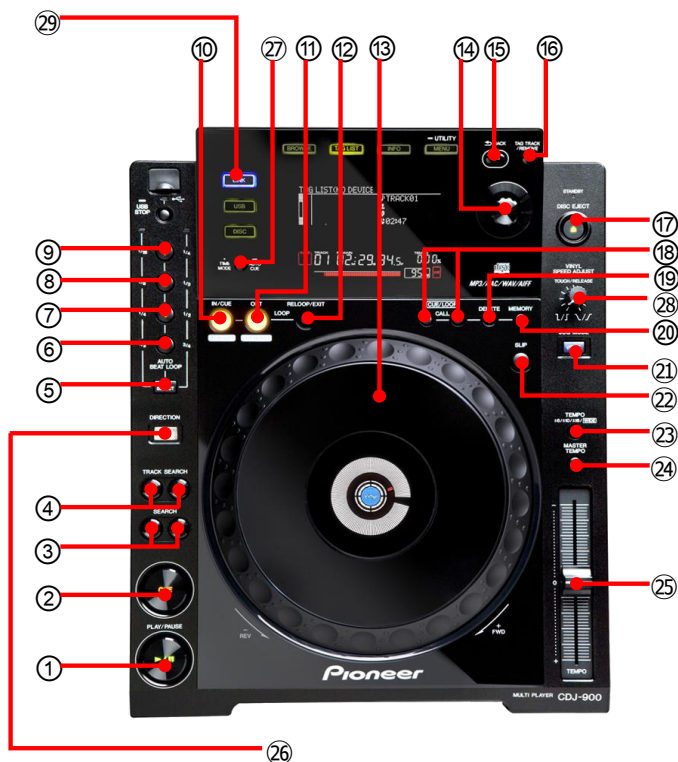


No.	CDJ-900	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2, 8, 3/4
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4, 4, 1/2
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8, 2, 1/3
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16, 1, 1/4
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	SLIP	SLIP
23	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	DIRECTION	FWD. / REV.
27	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
28	VINYL SPEED ADJUST	VINYL SPEED ADJUST
29	LINK	CONNECT TO rekordbox dj

■ CDJ-850

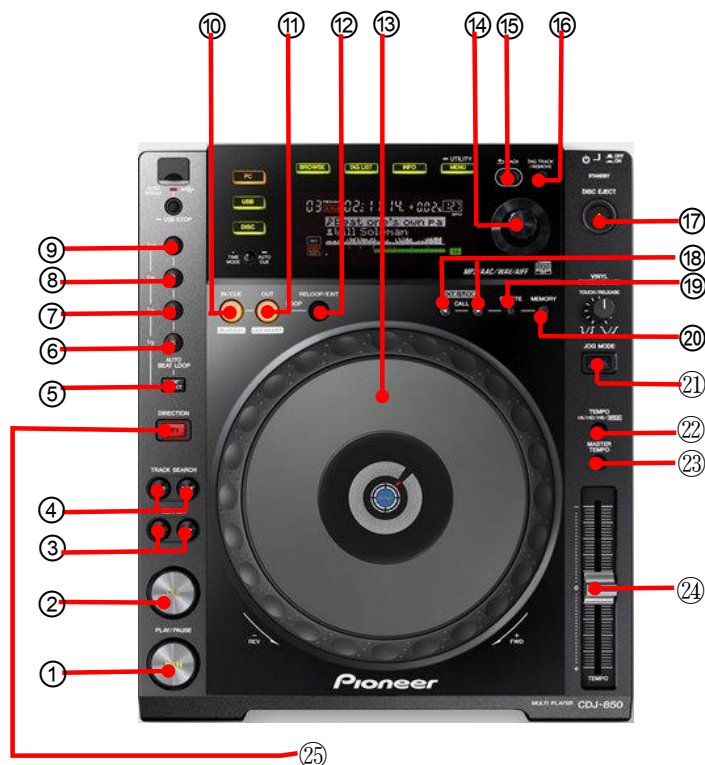

No.	CDJ-850	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2, AUTO BEAT LOOP 8
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4, AUTO BEAT LOOP 4
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8, AUTO BEAT LOOP 2
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16, AUTO BEAT LOOP 1
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL While Loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
23	MASTER TEMPO	MASTER TEMPO
24	TEMPO	TEMPO
25	DIRECTION	FWD. / REV.

CDJ-400

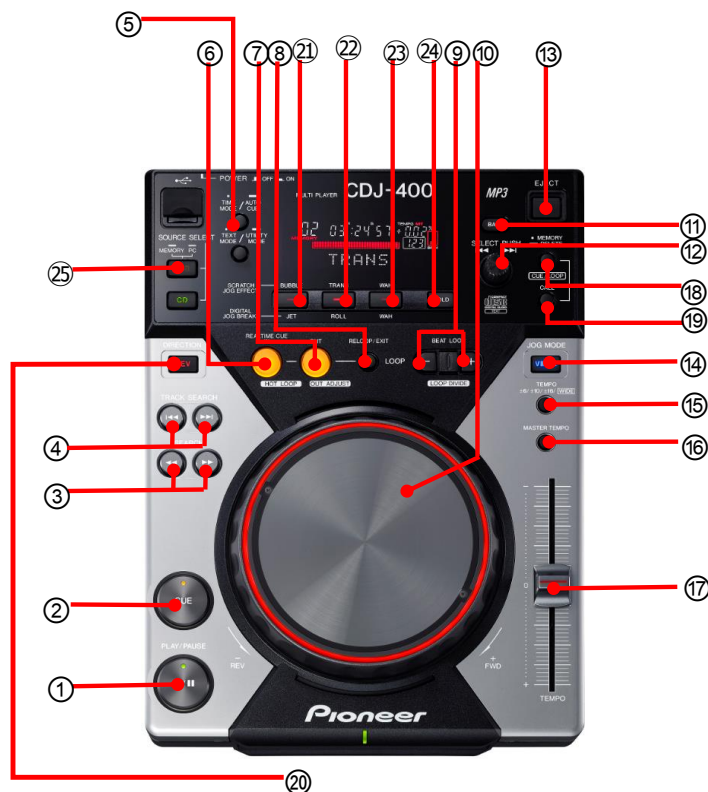


No.	CDJ-400	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	MEMORY / DELETE	MEMORY Long press:DELETE
19	CUE / LOOP CALL (※1)	Call Next Memory Cue/Loop
20	DIRECTION	FWD. / REV.
21	BUBBLE/JET (※2)	FX1 ON/OFF
22	TRANS/ROLL (※2)	FX2 ON/OFF
23	WAH/WAH (※2)	FX3 ON/OFF
24	HOLD (※2)	RELEASE FX
25	USB SELECT (PC)	CONNECT TO rekordbox dj

※1 次のMemory Cueを呼び出します。前のMemory Cueの呼び出しは出来ません。
複数のMemory Cueの呼び出しをする場合は、TRACK SEARCH(PREV)を1回押して曲頭に戻した後で
CUE / LOOP CALLボタンを押すことで順番に呼び出すことが可能です。

※2 DECK1およびDECK3に設定したCDJは、FXユニット1をコントロールします。
DECK2およびDECK4に設定したCDJは、FXユニット2をコントロールします。

CDJ-350

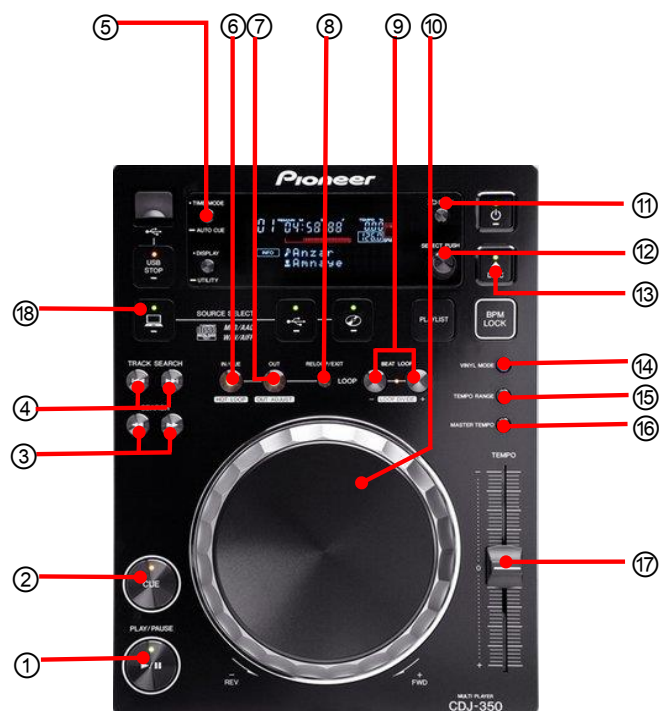

No.	CDJ-350	rekordbox dj
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Play: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Long press: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	COMPUTER	CONNECT TO rekordbox dj