

XDJ-XZ

Hardware Diagram for rekordbox dj



GROUP	No.	NAME	FUNCTION	+SHIFT
1, DECK *機能は左右デッキ共通です。				
1	1	JOG 天面	スクラッチ (Vinyl On)	Search
	2	TEMPO 側面	ビッチベンド (Vinyl Off)	
	3	TEMPO RESET	テンポ調整	
	4	MASTER TEMPO	テンポリセット	
	5	TEMPO RANGE	Master Tempo On/Off	
	6	SYNC	Tempo Range Sync On/Off	
	7	MASTER 長押し	INSTANT DOUBLES	
	8	JOG ADJUST	Master	
	9	JOG MODE	JOG ADJUST	
	10	VINYL SPEED ADJUST	Vinyl On/Off	
	11	TRACK SEARCH	Vinyl Speed Adjust	
	12	SEARCH	PREV / NEXT TRACK	
	13	SHIFT	BEAT JUMP(再生中:8拍, 停止中:微調整)	
	14	REVERSE	Shift	
	15	SLIP	Reverse	
	16	4/8 BEAT	SLIP mode On/Off	
	17	LOOP IN 長押し	8 BEAT Loop	
	18	LOOP OUT 長押し	Loop in / Loop in adjust	
	19	RELOOP/EXIT	4 BEAT Loop	
	20	CALL NEXT / 2X	Loop out / Loop out adjust	
	21	DELETE ループ再生中	Re-loop/Exit	
	22	MEMORY	CUE/LOOP CALL, FWD	
	23	PLAY/PAUSE	Loop Size Select (Double)	
	24	CUE	CUE/LOOP CALL, REV	
	25	JOG RING	Loop Size Select (Half)	
	26	LOAD	DELETE	
	27	NEEDLE SEARCH 2回押し	MEMORY	
2, EFFECT				
3, MIXER				
4, BROWSER	1	AUX TRIM	SAMPLER volume when AUX SELECT off	
	1	Rotary Selector 回す	Browse(Track/Folder Select)	拡大波形 Zoom In/Out
	2	BACK 押す	エリア移動 (順周り)	
	3	TAG TRACK/REMOVE	階層移動, エリア移動 (逆周り)	リスト表示切替
	4	TRACK FILTER	Tag Listへの登録, 解除	Related Tracks 表示切替
	5	DECK QUANTIZE	TRACK FILTER OPEN/CLOSE	
	6	TIME MODE / AUTO CUE	Deck Quantize on/off	
	7	DECK 1/3 (SHORT CUT画面)	TIME MODE切替(Remain/Elapse)	
5, PERFORMANCE PADS	1	HOT CUE	A.Cue On/Off	
	2	BEAT LOOP	Deck 1とDeck 3の切替	
	3	SLIP LOOP	Deck 2とDeck 4の切替	
	4	BEAT JUMP		

GROUP	No.	NAME	FUNCTION	+SHIFT
5, PERFORMANCE PADS				
5	PERFORMANCE PAD A	HOT CUE	HOT CUE A設定/再生	Delete HOT CUE A
		BETAT LOOP	1/4 BEAT LOOP	1/4 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
	PERFORMANCE PAD B	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot1再生	SAMPLER slot1停止
	PERFORMANCE PAD C	HOT CUE	HOT CUE B設定/再生	Delete HOT CUE B
		BETAT LOOP	1/2 BEAT LOOP	1/2 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
6	PERFORMANCE PAD D	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot2再生	SAMPLER slot2停止
	PERFORMANCE PAD E	HOT CUE	HOT CUE C設定/再生	Delete HOT CUE C
		BETAT LOOP	1 BEAT LOOP	1 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
7	PERFORMANCE PAD F	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot3再生	SAMPLER slot3停止
	PERFORMANCE PAD G	HOT CUE	HOT CUE D設定/再生	Delete HOT CUE D
		BETAT LOOP	2 BEAT LOOP	2 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
8	PERFORMANCE PAD H	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot4再生	SAMPLER slot4停止
	PERFORMANCE PAD I	HOT CUE	HOT CUE E設定/再生	Delete HOT CUE E
		BETAT LOOP	4 BEAT LOOP	4 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
9	PERFORMANCE PAD J	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot5再生	SAMPLER slot5停止
	PERFORMANCE PAD K	HOT CUE	HOT CUE F設定/再生	Delete HOT CUE F
		BETAT LOOP	8 BEAT LOOP	8 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
10	PERFORMANCE PAD L	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot6再生	SAMPLER slot6停止
	PERFORMANCE PAD M	HOT CUE	HOT CUE G設定/再生	Delete HOT CUE G
		BETAT LOOP	16 BEAT LOOP	16 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
11	PERFORMANCE PAD N	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot7再生	SAMPLER slot7停止
	PERFORMANCE PAD O	HOT CUE	HOT CUE H設定/再生	Delete HOT CUE H
		BETAT LOOP	32 BEAT LOOP	32 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	
12	PERFORMANCE PAD P	KEYBOARD	HOT CUE選択/KEY SHIFT	Delete HOT CUE
		KEY SHIFT	KEY SHIFT	
		PAD FX2	PAD FX2 (page1)	PAD FX2 (page2)
		SAMPLER	SAMPLER slot8再生	SAMPLER slot8停止
	PERFORMANCE PAD Q	HOT CUE	HOT CUE I設定/再生	Delete HOT CUE I
		BETAT LOOP	16 BEAT LOOP	16 BEAT LOOP
		PAD FX1	PAD FX1 (page1)	PAD FX1 (page2)
		BEAT JUMP	BEAT JUMP	