

Pioneer Dj

rekordbox™

Video function Operation Guide



Contents

1	Before Start.....	3
1.1	Before getting started.....	3
1.2	Overview of Video functions	3
1.3	System requirements	3
1.4	Supported Formats	3
2	Activation	4
3	Enjoy DJ performance with DJ units	4
3.1	Using rekordbox with a controller	5
4	Part names	5
4.1	Global section	5
4.2	Browse section.....	6
4.3	Video panel	7
4.4	TEXT section.....	10
4.5	IMAGE section	12
4.6	CAMERA section	14
4.7	SLIDESHOW section	15
5	Basic operation	16
5.1	Display the video panel.....	16
5.2	Importing video/image files	16
5.2.1	Import of video files	16
5.2.2	Import of image files	17
5.3	Loading a video.....	19
5.4	Playing a video.....	19
5.5	TOUCH FX.....	19
5.6	LINK	21
5.7	TRANSITION FX.....	22
5.8	TEXT	23
5.9	IMAGE.....	24
5.10	CAMERA.....	25
5.11	SLIDESHOW.....	26
6	Other features.....	27
6.1	Delay Compensation.....	27
6.2	Video Mute	27
6.3	Visualizer.....	27

6.4	Karaoke	28
6.5	Syphon Out	28
7	Preferences	29
8	Using the online support site	31

1 Before Start

1.1 Before getting started

This manual explains the Video functions for rekordbox ver.6.0 or later.

If you use an earlier rekordbox version than ver. 6.0, please download the suitable manual from the FAQ on the rekordbox website.

For instructions on rekordbox in general, see the Instruction Manual of rekordbox.

rekordbox Instruction Manual rekordbox.com

1.2 Overview of Video functions

You can start DJ performance using videos and images by activating Video functions.

For overview of Video functions, please refer to rekordbox.com .

1.3 System requirements

Regarding the supported OS and required system (minimum operating environment), please refer to rekordbox.com .

1.4 Supported Formats

Supported file formats are as follows:

Video:

Extension: mpg, mp4, m4v, mov, avi (Windows)

mpg, mp4, m4v, mov (Mac)

• **Video format**

Codec: h.264, mpeg-4, mpeg-2

Resolution: up to 1920 x 1080

• **Audio format**

Lpcm (aiff), aac, mp3

Image:

Jpeg, png, gif(animated GIFs not currently supported)

Note: Some contents may not be reproduced or imported on certain OS.

2 Activation

Video functions can be used in one of the four following situations:

- (1) When you subscribe to the Creative Plan: all video functions are available.
- (2) When you subscribe to the Core Plan: video output is limited.
- (3) When you do not have a subscription plan: video output is limited.
- (4) DJ controller: When using rekordbox connected to DDJ-RZX: all video functions are available.

You can contract to a subscription plan on the rekordbox website.

rekordbox.com

To use the Video function, first go to [Preferences] > [Video], then checkmark [Enable Video Function].

3 Enjoy DJ performance with DJ units

You can use rekordbox with DJ units (e.g.DJ controllers and CDJ/XDJ) by plugging it with your computer using USB cable.

For rekordbox compatible DJ units, check our website:

rekordbox.com

For more information, see Instruction Manual of each DJ unit.

You may be unable to properly operate the device depending on USB connection status. This could be due to band width of USB port and USB hub on your computer. Changing USB hub or port could solve the problem

3.1 Using rekordbox with a controller

■ Standard settings with a controller



For instructions on how to operate your DJ equipment, visit pioneerdj.com and see the [Instruction Manuals] .

4 Part names


4.1 Global section

- Video button





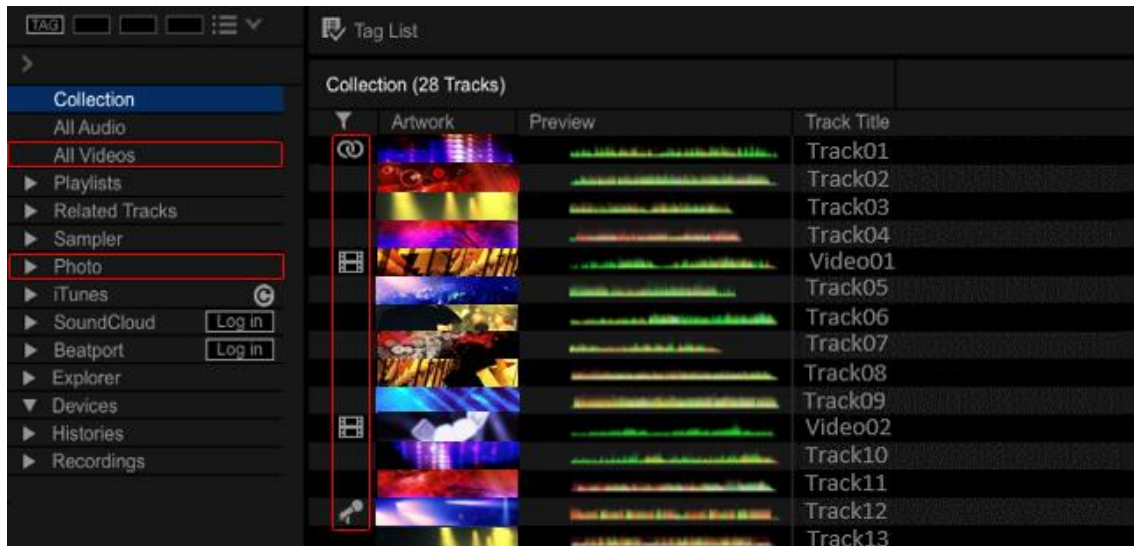

Show/Hide video panel.

4.2 Browse section



The following icons are shown on video, image, LINK and karaoke files.

-  : Video file
-  : Image file
-  : LINK file (an audio file linked to a video file)
-  : Karaoke file

• All Videos (Tree View)

All Videos


Imported video files are displayed.

• Photo category (Tree View)

Photo


Imported image files are displayed.

4.3 Video panel

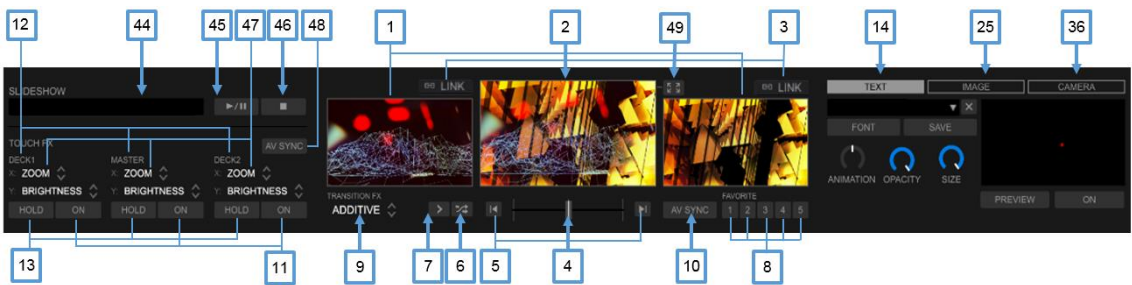


[1] VIDEO DECK

DECK1 DECK2

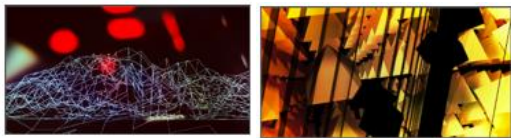

You can load and preview video files.

[2] Preview (MASTER)

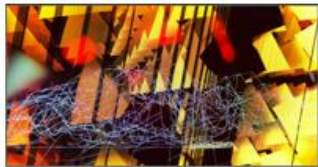

This is the Video preview for Output Window.

[49] Full screen button



Click this button to make the Output Window full size.

[3] LINK button



Links an audio file and a video file on the same numbered DECKs. When the audio file is loaded next time, the linked video will also be loaded.

[4] VIDEO CROSSFADER



Crossfades VIDEO DECK1 and DECK2.

[5] AUTO TRANSITION



Moves the VIDEO CROSSFADER automatically.

[6] RANDOM button



 
Selects TRANSITION FX randomly.

[7] NEXT button



Selects next TRANSITION FX in the drop-down menu.

[8] FAVORITE button




Directly calls Transition FX in the FAVORITE set at the Preferences.

[9] TRANSITION FX drop-down menu



Selects a TRANSITION FX.

 [10] AV SYNC(CROSSFADER) button



Syncs the VIDEO CROSSFADER and the audio CROSSFADER.

[11] TOUCH FX On/Off button



Turns on/off GRID, parameter and name of selected TOUCH FX.

[12] TOUCH FX drop-down menu (X)



Selects a TOUCH FX.

[47] TOUCH FX drop-down menu(Y)



Selects visual effects.

[13] HOLD button

 


Turns on/off the HOLD button for TOUCH FX.

OFF: FX is turned on only when pressing and holding the mouse on the screen.

ON: Selected FX continues even after the mouse is released. Click HOLD again to cancel the FX.

[48] AV SYNC button (Effect)



Turns on/off relations between TOUCH FX and audio effects.

[14] TEXT button



Displays TEXT section.

[25] IMAGE button



Displays IMAGE section.

[36] CAMERA button



Displays CAMERA section.


*Output Window

This is a window to display video. Double-click Preview (MASTER) window to display it.



4.4 TEXT section

You can overlay a text on the video. (Preview (MASTER) only).

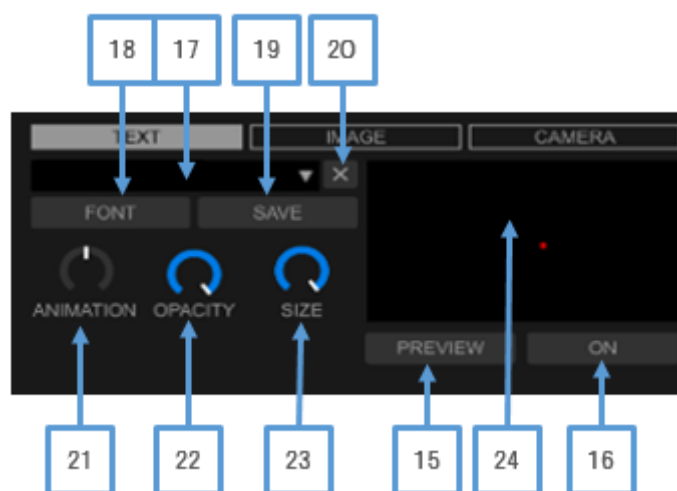


[15] TEXT preview button



Displays the text on the output video and the Preview (MASTER) screen.

 [16] TEXT output button



Displays the text on the outputted video.

[17] TEXT field



 
Inputs a text.

[18] FONT button



Selects text font, and color. *Use the TEXT size knob to adjust text size.

[19] SAVE button




Saves the text to a list.

[20] CLEAR button




Clears the inputted text in the field.

 [21] TEXT animation knob



Adjusts text animation speed.

 [22] TEXT opacity knob




Adjusts text opacity.

[23] TEXT size knob



Adjusts text size.

 
[24] Text alignment field



Adjusts the position of the text.

4.5 IMAGE section

You can overlay an image on the video. (Preview (MASTER) only).

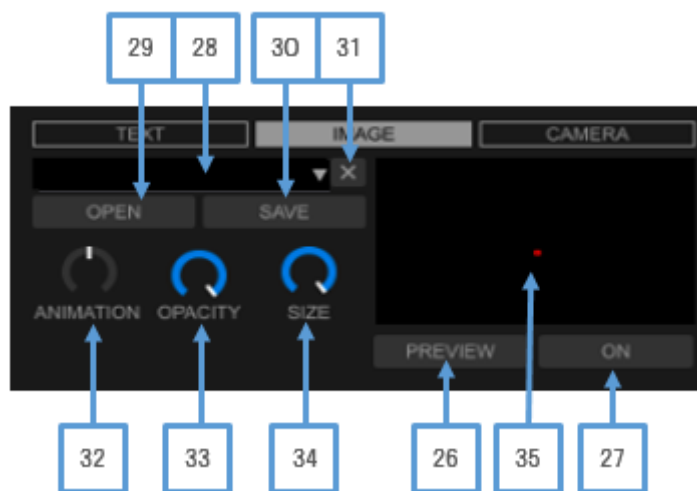


[26] IMAGE preview button



Displays the image on Preview (MASTER).

 [27] IMAGE output button



Displays the image on the output video and the Preview (MASTER) screen.

[28] IMAGE field



Displays the name of the selected image file.

[29] OPEN button



Opens a folder to select an image.

[30] IMAGE save button




Saves the image displayed in the IMAGE field to a list.

[31] IMAGE clear button



Clears the image displayed in the IMAGE field.

 [32] IMAGE animation knob



Adjusts image animation speed.

[33] IMAGE opacity knob



 
Adjusts image opacity.

[34] IMAGE size knob



Adjusts image size.


[35] IMAGE alignment field



Adjusts position of the image.

4.6 CAMERA section

You can overlay output from camera (Available only for Preview (MASTER)).

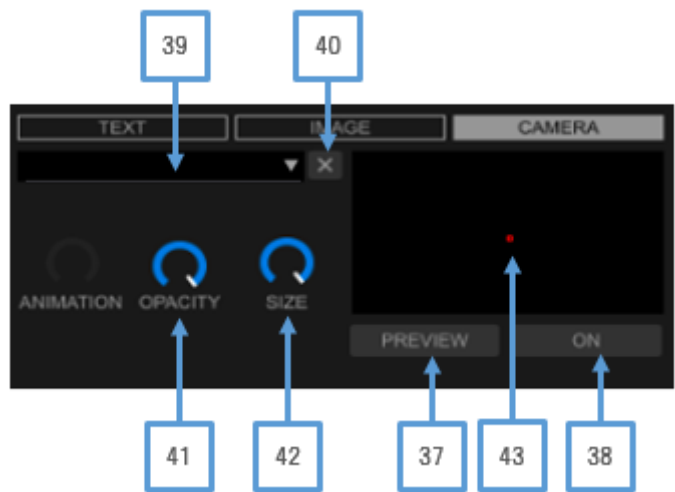

[37] CAMERA preview button



Displays output from a camera on Preview (MASTER).

[38] CAMERA output button



Displays output from the camera on the output video and the Preview (MASTER) screen.

[39] CAMERA DEVICE field



How to use: Click the ▼ button to display the name of camera device(s) connected with USB cables in a drop-down menu.

Select one to use. The selected CAMERA DEVICE will be shown in the field.

(Please connect a UVC (USB Video Class) type camera. Otherwise, it is not recognized.)

[40] CAMERA DEVICE clear button



Clears the name of the camera device displayed in the CAMERA DEVICE field.

[41] CAMERA opacity knob



 
Adjusts opacity of live feed from the camera.

[42] CAMERA size knob



Adjusts size of live feed from the camera.

[43] CAMERA alignment field



Adjusts position of the live feed from the camera in the output video.

4.7 SLIDESHOW section

[44] SLIDESHOW Playlist field



How to use: Drag and drop a slideshow playlist from the SLIDESHOW Playlist in the Tree View.
The name of the slideshow playlist will be displayed.

[45] PLAY/PAUSE SLIDESHOW button



Plays/Pauses the SLIDESHOW.

[46] STOP SLIDESHOW button



Stops the SLIDESHOW.

5 Basic operation

5.1 Display the video panel

Click the Video button in the Global Section.



Video Panel will appear as bellow.



* If it does not appear, open [Preferences] > [Video] and tick [Enable Video Function] and the Panel will appear on the screen.

5.2 Importing video/image files

5.2.1 Import of video files


Drag and drop video files from outside the rekordbox screen to one of the following on rekordbox:

Drag and drop to [Collection] or [Playlists] of TreeView



* You can also drag and drop a folder with video files to the [Playlists] folder to add it as a playlist.

Drag and drop to the track list of [Collection] or [Playlists]

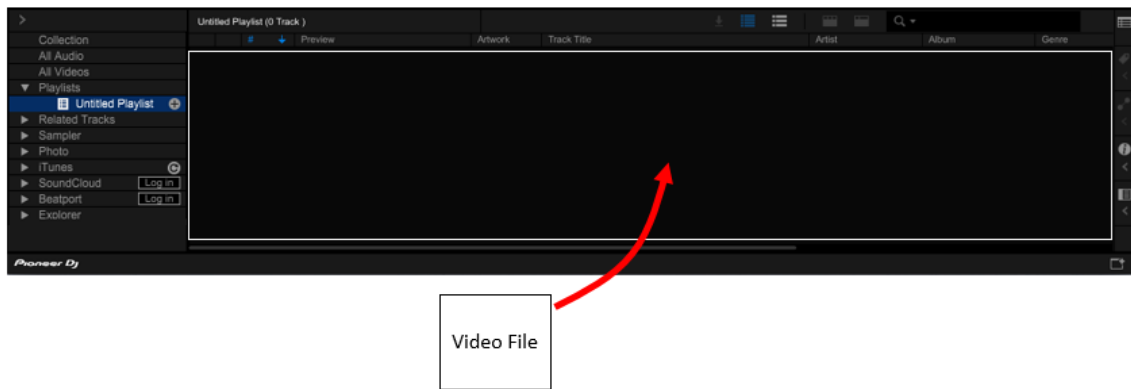

*You can also drag and drop a folder including video files.

The video files will be imported and appear in [Collection] or [Playlists].


*Video files will also be imported by dragging and dropping them to the deck. In this case, the video files will be displayed in [Collection].

(If you drag and drop a video file to the Video Deck, it will be loaded but not imported.)

5.2.2 Import of image files

Creating a Playlist for image files

- 1 Select the Photo category **Photo** in the Tree View in the Browse Section.
- 2 Select Photo Playlists **Photo Playlists** from the Photo category and click **+** button.

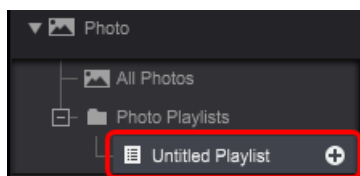


A playlist for images is created.

- To change the playlist name, click it and enter the name.

Import of image files


To import an image file, drag and drop it located outside of the rekordbox screen to either of the following Playlists in rekordbox.

 - Drag and drop an image file to a playlist created in the Photo category in Tree View.



*You can also drag and drop a folder including image files to Photo Playlists or a lower tier to add it as a playlist.

- Drag and drop an image file to a track list of either [All Photos] or a Playlist created in the Video category in Tree View.

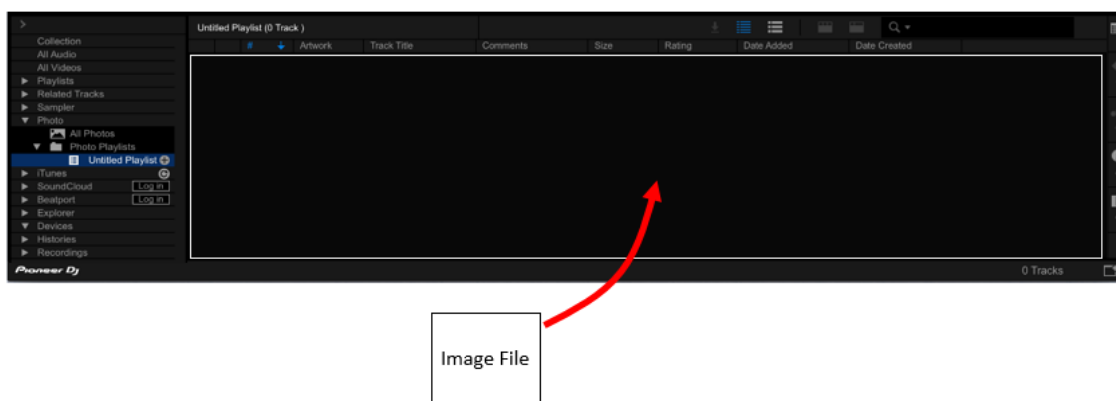

* You can also drag and drop a folder including image files.

The image file will be imported and displayed in the created Playlists.

5.3 Loading a video

- 1 Select [Collection] or [All Videos] in TreeView.
- 2 Select video files from [Collection] or [All Videos], and drag and drop them to Deck 1 or Deck 2.

The video is loaded.

If you wish to load a video file without audio or only the video part of a video file including audio, drag and drop it to VIDEO DECK1 or VIDEO DECK2.


5.4 Playing a video

- 1 Turn on the PLAY/PAUSE button  on the DECK you loaded a video.


The loaded video starts.

You cannot play only a video file without audio or only video part of a video file including audio. Load an audio file on to the same DECK.

5.5 TOUCH FX

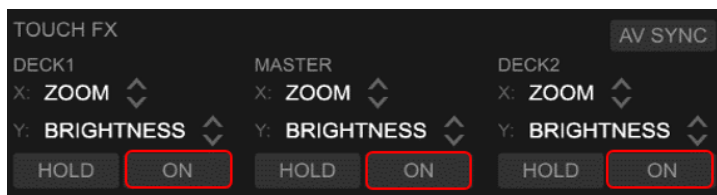

When you turn on the TOUCH FX in each DECK, GRID, parameter and name of the selected TOUCH FX are displayed on the deck.

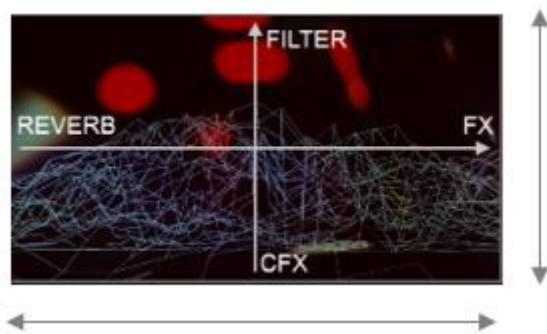

When swipe horizontally, the effect of TOUCH FX is changed.

You can select the following TOUCH FX from the TOUCH FX drop-down menu (X) **ZOOM** to apply the effect on the video.

ZOOM: Zooms in and out the image.

KALEIDO: Applies kaleidoscope effect.

STROBE: Applies strobe effect.

EDGES: Applies edge effect.

BLUR: Applies blur effect.

BLOCK: Splits into blocks.

SPLIT SCROLL: Splits into blocks, and scrolls right to left.

LIGHTBEAM: Increases the brightness, giving light beam effect like god rays.

EXPOSE: Increases exposure, with dark areas appear light or light areas appear dark.

FEEDBACK: Creates numeric concentric layers twisting from the center to the fringe of the screen.

STRIPE: Replaces pixels at the edge of the video with colored strips.

FLOOD: Distorts and blurs the image to horizontal direction.

BEN DAY: Splits the image into small dots.

INCREMENT: Displays the video multiple times in fragments.

DOT: Displays the video as a grid of dots.

RGB TRIP: Repeats zooming in and out while changing red, green and blue (RGB) color component of the video.

RGB LOOP: Changes the color of the video to red, green and blue (RGB).

LUMINOUS: Becomes luminous periodically.

NEON: Highlights the outline of visual images, applying neon-sign effects.

SMUDGE : Applies ink-smudging effect to make the image dissolving with residual image.

THERMO: Applies thermal camera effect.

MOSAIC: Reduces resolution of the video, applying mosaic effects.

SPIN: Spins the image horizontally.


TWIST: Splits the image vertically and twisting spirally.

When AV SYNC is turned on, you can change the effect of BEAT FX by touching the screen and moving the point horizontally.

* You cannot use TOUCH FX with BEAT FX on the FX panel at the same time. (While TOUCH FX is turned on, BEAT FX on the FX panel is turned off.)

You can change the combination of TOUCH FX and BEAT FX at the Preferences.

When you move the point vertically by touching the screen, video effects will change.

You can select one of the below video effects at the TOUCH FX drop-down menu (Y) .

BRIGHTNESS: Adjusts brightness.

CONTRAST: Controls contrast.

COLOR EXTRACTOR: Makes the video monochrome with some colors remaining.

FILTER: Adjusts filter.

SATURATION: Adjusts saturation.


SHARPEN: Sharpens the image.

When you move the point vertically by touching the screen, the effect of CFX is also changed.


* You cannot use TOUCH FX with CFX on the CFX panel at the same time. (While TOUCH FX is turned on, CFX on the CFX panel is turned off.)


You can change the combination of TOUCH FX and CFX at the Preferences.

5.6 LINK

- 1 Load a video file and an audio file on the same numbered DECK. Click the LINK button  to link the audio file and the video file. When the audio file is loaded next time, the linked video will also be loaded.
- 2 To cancel the LINK, click again the LINK button.

5.7 TRANSITION FX

You can apply TRANSITION FX using the video CROSSFADER  when crossfading the videos.

Select the following TRANSITION FXs from the TRANSITION FX drop-down menu  to apply while crossfading the two videos.

ADDITIVE: Switches the two videos while maintaining lighter part of the two.

FADE: Switches the two videos while mixing them.

DIFFERENCE: Switches the two videos while displaying the differences of them.

LUMA KEY DARK: Gradually changes the videos from the portion where luminance level is low in the outgoing image.

LUMA KEY BRIGHT: Gradually changes the videos from the portion where luminance level is high in the outgoing image.

RGB: Switches the two videos as RGB changes.

PUSH: Switches the two with the incoming video pushing the outgoing video horizontally off screen.

WIPE H: The incoming video wipes the outgoing video horizontally off screen.

WIPE V: The incoming video wipes the outgoing video vertically off screen.

SQUEEZE H: The incoming video squeezes the outgoing video horizontally off screen.

SQUEEZE V: The incoming video squeezes the outgoing video vertically off screen.

GRID: Splits the videos into blocks and switching the two videos.

CUBE: Switches the two videos while projecting them onto horizontally adjacent face of a cube.

SPIN H: Turns over the two videos projected onto front and back sides of a sheet (horizontally).

SPIN V: Turns over the two videos projected onto front and back sides of a sheet (vertically).

SWITCH: Instantly switches the two videos at the center of the CROSSFADER.

EXTREME CUT: Instantly switches the two videos immediately when the fader starts moving from the edge of the CROSSFADER.

EXTREME HOLD: Instantly switches the two videos when the CROSSFADER finally reaches the opposite side.

SWAP: Switches the two videos horizontally while changing the size and opacity.

FLIP: Switches the two videos with one projected onto a smaller window while changing its size and the horizontal to vertical ratio of it.

BLINK: Blinks transition of the two videos in a short time like strobe lights.

ELLIPSE: Transition of the two videos with an expanding ellipse from the center to the fringe of the screen, just like an opening iris.

GRID 2: Random transition of small grid pieces of the two videos one after another.

PIXEL FADE: Transition of the two videos with mosaic effects.

DOOR: Transition of the two videos as follows: the active (outgoing) video splits in two like a door and folds it away, whilst presenting the next (incoming) video in the middle.

BLINDS: Switches the two videos just as vertical blinds sliding horizontally.

DROP: Switches the two videos as the outgoing video dropping down.

LATTICE: Switches the two videos as both displayed in small lattice pieces.


WAVE: Switches the two videos as they wave.






BURST: Switches the two videos bursting from the center.

DISPLACE: Switches the two videos with the outgoing video blurring.

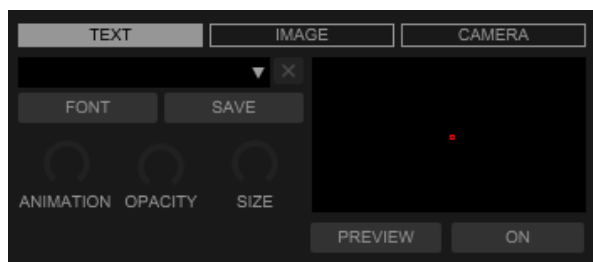GLOW FADE: Switches the two videos with the outgoing video glowing.

 
5.8 TEXT




- 1 Input a text on the TEXT field .
- 2 Click the CLEAR button  to clear the field.
- 3 Click the SAVE button  to save the input text to a list.
- 4 Click the PREVIEW button  to display the text in the Preview (MASTER) window.
- 5 Click the FONT button  to select text font, size, color, etc.




 
- 6 Use the SIZE knob  to adjust the size.




- 7 Use the OPACITY knob  to adjust the opacity.

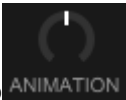
- 8 Use the ANIMATION knob  to adjust the animation speed. (You can change the type of the animation at [Preferences].)



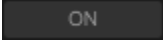


- 9 To stop animation, double-click the ANIMATION knob . (The knob position is automatically set to 12 o'clock.)


- 10 Click the alignment field  to adjust position of the text.

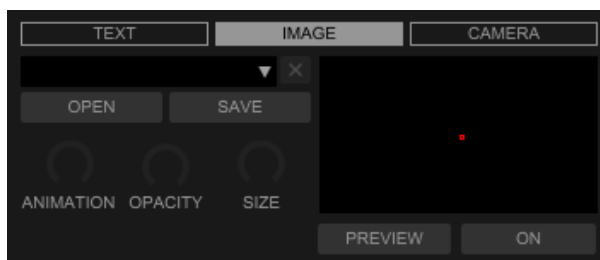
- 11 Click the output button  ("ON") to display the text on the output video (Output Window) and the Preview (MASTER) screen.


5.9 IMAGE





- 1 Click the OPEN button  to open an image file in the computer. Select an image from it. The name of the selected image file is shown on IMAGE field. 
- 2 Click the CLEAR  button to clear the field.
- 3 Click the SAVE button  to save the image file to a list.
- 4 Click the PREVIEW button  to display the text in the Preview (MASTER) window.

- 5 Use the SIZE knob  to adjust the size.

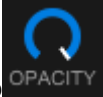- 6 Use the OPACITY knob  to adjust the opacity.

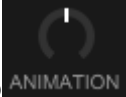 
- 7 Use the ANIMATION knob  to adjust the text animation speed. (You can change the type of the animation at [Preferences].)

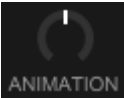

- 8 To stop animation, double-click the ANIMATION knob.  (The knob position is automatically set to 12 o'clock.)


- 9 Click the alignment field  to adjust position of the image.

- 10 Click the output button  ("ON") to display the image on the output video (Output Window) and the Preview (MASTER) screen.

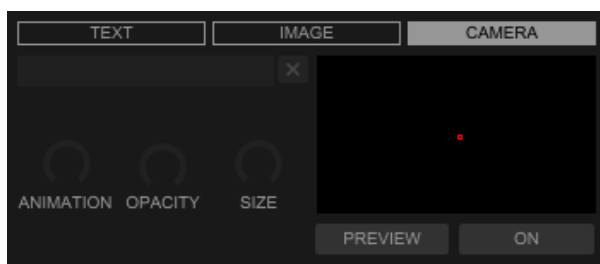5.10 CAMERA



- 1 Click the button  next to the CAMERA DEVICE field. A drop-down menu appears to show camera device(s) connected using USB cable(s). Select one from the drop-down menu. The name of the selected camera is shown in the CAMERA DEVICE field. (To use a camera for Video functions, connect it using a USB cable.)
- 2 Click the CLEAR button  to clear the field.

 
- 3 Click the PREVIEW button  to display live feed from the camera on the Preview (MASTER).



- 4 Use the SIZE knob  to adjust the size.




- 5 Use the OPACITY knob  to adjust the opacity.



- 6 Click the alignment field  to adjust position of the live feed from the camera.


- 7 Click the CAMERA output button  ("ON") to display the live feed from the camera on the output video (Output Window) and the Preview (MASTER) screen.

5.11 SLIDESHOW

- 1 Select a Slideshow Playlist from the Photo category  in the Tree View and drag and drop it on to the SLIDESHOW Playlist field.



The name of the slideshow playlist is displayed.

- 2 Click the SLIDESHOW PLAY/PAUSE button  to start the slideshow.
You can change display duration, slide order and repeat setting at the Preferences.

6 Other features

6.1 Delay Compensation

You can adjust and compensate for the delay between audio (MASTER) and video (MASTER) at the Preferences.

Move the slider to + direction to move the video forward.

Move the slider to – direction to move the video backward.

The compensation range is from – 500 msec to + 500 msec.

6.2 Video Mute

You can mute video (MASTER) when you are not playing audio (e.g. during pause).

Click On or Off at the Preferences.

6.3 Visualizer

When content without video is loaded on DECK1 or DECK2, you can display visualizer on the VIDEO DECK. You can choose from visualizers described below.

[Mac]

- rekordbox preset visualizer
- Video file
- Artwork of the track

[Windows]

- Video file
- Artwork of the track

See 7. *Preferences* for details.

6.4 Karaoke

You can play karaoke files consisting of two files: a music file (extension: mp3) and a separate file (extension: cdg).

- 1 Locate the two files in the same folder on your computer: an mp3 file and a cdg file.

*The two files must have the same file name.

- 2 Load the mp3 file to DECK1 or DECK2.

- 3 Play the mp3 file on DECK1 or DECK2.

The cdg file will be displayed on VIDEO DECK1 or VIDEO DECK2.

* Some files may not be played successfully depending on the contents.

6.5 Syphon Out

You can output video (MASTER) to applications that support Syphon.

*Mac users only.

You can turn on/off output at the Preferences.

7 Preferences

- Enable Video Function

Check the box when using video function.

When not using video function, uncheck the box.

This helps reduce CPU load.

- Output Setting

Video Quality : Set the video quality to [High/Middle/Low].

- TRANSITION FX Setting

FAVORITE : Select up to five TRANSITION FX options from ALL and register them by clicking ADD.

Click DEL to delete a selection.

AUTO TRANSITION : Set [Speed].

- TEXT Setting

Animation : Set the TEXT animation to [Scroll/Rotate].

- IMAGE Setting

Animation : Set the IMAGE animation to [Scroll/Rotate/Box*].

*BOX: Images are shown onto the surfaces of a horizontally rotating box.

- Camera Setting

USB Camera Connection Monitoring : Set USB Camera Connection monitoring to [On/Off].

- SLIDESHOW Setting

Slide Order : Set the display to [Preset Order/Shuffle].

Repeat : Set the SLIDESHOW repeat setting to [On/Off].

Display Duration : Set the display duration for each image.

- Delay Compensation

You can adjust the value to prevent audio and video from becoming out of sync.

- Video Mute

Deck 1, Deck 2: Select whether video mute is On or Off for each deck when audio is not played.

- Channel Fader

Deck1, Deck2: Set [Video brightness changes along with the channel fader] depending on the deck.

- TOUCH FX X-axis settings: You can relate TOUCH FX to BEAT FX.

- TOUCH FX Y-axis settings: You can relate TOUCH FX to CFX.

• TOUCH FX X-axis direction settings: You can select either of them: [FX effect is stronger to the right./FX effect is stronger to the left.]

• When loading a track without video: When loading a track without video to DECK1 or DECK2, you can choose a visualizer to display on the VIDEO DECK

Mac users can choose from below:

[Select a visualizer and display it./

Select a visualizer and display it randomly./

Select a visualizer when loading a track and display it./

Select video in a specified folder and display it./

Select video in a specified folder and display it randomly./

Select video in a specified folder when loading a track and display it./

Display an artwork of the track./

Do nothing.]

Windows users can choose from below:

[Select video in a specified folder and display it. /

Select video in a specified folder and display it randomly./

Select video in a specified folder when loading a track and display it./

Display an artwork of the track./

Do nothing.]

• Download Sample Video:

You can download sample video from our website.

*"visualizer.zip" file is downloaded to the download folder (the folder name may defer depending on OS) .

After the download, you can use it as a visualizer by copying it to the specified folder below.

<Specified folder (default)>

Windows: <user home>/video/PioneerDJ

Mac: <user home>/movie/PioneerDJ

*When you copy the downloaded file "visualizer.zip" as is, the application will unzip the file automatically when opening [Preferences] > [Video], and delete the file after unzip.

*When the downloaded file "visualizer.zip" is unzipped by the browser, etc., please copy each file to a specified folder. (Sub-folders will not be recognized.)

- Syphon Out Setting: You can select to turn [On/Off].

8 Using the online support site

Before making inquiries on rekordbox operating procedures or technical issues, read the rekordbox manual and check the FAQ provided on the rekordbox website (rekordbox.com).

-
- rekordbox™ is a registered trademark of AlphaTheta Corporation.
 - Microsoft and Windows® are registered trademarks or trademarks of Microsoft Corporation in the U.S. and other countries.
 - Mac and macOS are registered trademarks of Apple Inc. in the U.S. and other countries.
 - Intel® is a registered trademark of Intel Corporation in the U.S. and other countries.
 - Other product, technology and company names, etc. mentioned herein are the trade names or registered trademarks of their respective owners.

©2020 AlphaTheta Corporation.