

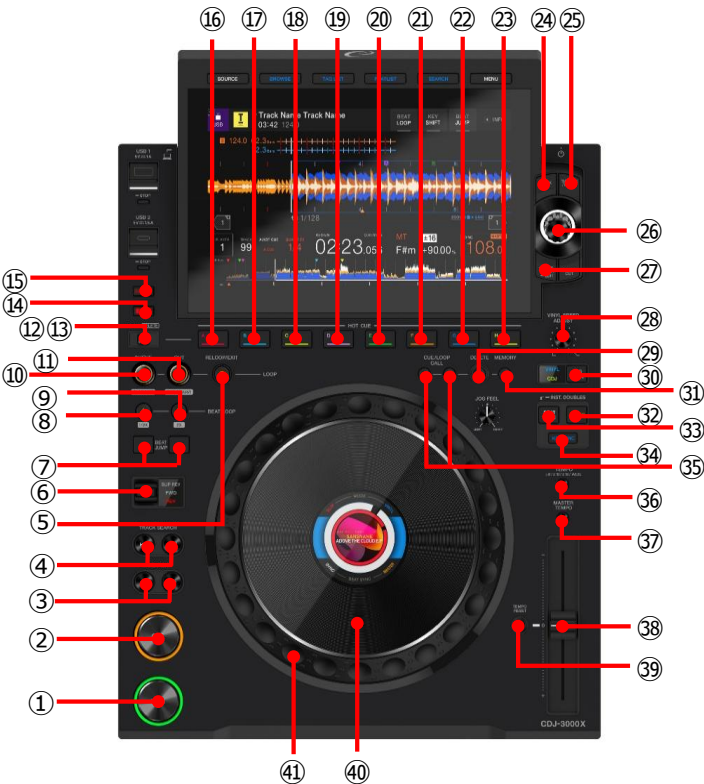
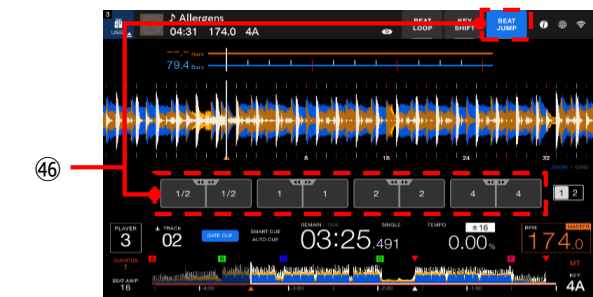


Hardware Diagram for rekordbox

■ CDJ-3000X

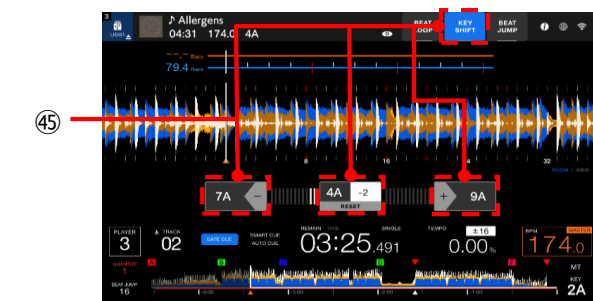

No.	CDJ-3000X	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	Cue設定 / 再生, BackCue
3	SEARCH FWD / REV	再生中: SEARCH 停止中: SEARCH (微調整)
4	TRACK SEARCH FWD / REV	PREV / NEXT TRACK
5	RELOOP / EXIT	Reloop / Exit
6	DIRECTION	SLIP REVERSE / REVERSE
7	BEAT JUMP FWD / REV	BEAT JUMP
8	4 BEAT	4 BEAT Loop ループ再生中: Select Loop Size (Half)
9	8 BEAT	8 BEAT Loop ループ再生中: Select Loop Size (Double)
10	LOOP IN	Loop in / Loop in adjustment 長押し: 4 BEAT Loop
11	LOOP OUT	Loop out / Loop out adjustment
12	HOT CUE CALL / DELETE	HOT CUE CALL / DELETE
13	HOT CUE CALL / DELETE + BEAT JUMP FWD / REV	BEAT JUMP BEAT VALUE *1
14	SLIP	SLIP ON/OFF
15	QUANTIZE	Quantize on/off
16	HOT CUE A	HOT CUE A設定 / 再生
17	HOT CUE B	HOT CUE B設定 / 再生
18	HOT CUE C	HOT CUE C設定 / 再生
19	HOT CUE D	HOT CUE D設定 / 再生
20	HOT CUE E	HOT CUE E設定 / 再生
21	HOT CUE F	HOT CUE F設定 / 再生
22	HOT CUE G	HOT CUE G設定 / 再生
23	HOT CUE H	HOT CUE H設定 / 再生

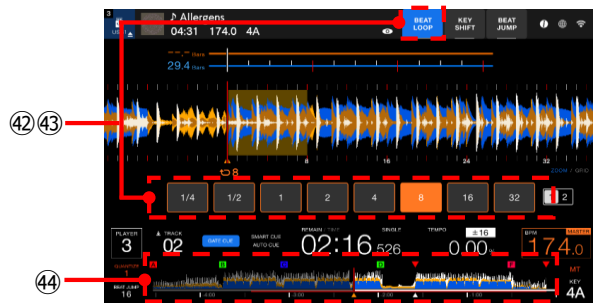


24	BACK	階層移動, エリア移動
25	TAG TRACK / REMOVE	Tag Listへの登録, 解除
26	ROTARY SELECTOR	回す: Browse(Select Track/Folder) 押す: 階層移動/曲LOAD
27	TRACK FILTER	TRACK FILTER OPEN/CLOSE
28	VINYL SPEED ADJUST	VINYL SPEED ADJUST
29	CUE/LOOP DELETE	CUE/LOOP DELETE
30	JOG MODE	Vinyl On/Off
31	CUE/LOOP MEMORY	CUE/LOOP MEMORY
32	MASTER	Master
33	SYNC	Sync On/Off 長押し: INSTANT DOUBLES
34	KEY SYNC	Key Sync On/Off
35	CUE/LOOP CALL NEXT/PREV	CUE/LOOP CALL ループ再生中: Select Loop Size (Double/Half)
36	TEMPO RANGE	Tempo Range
37	MASTER TEMPO	Master Tempo On/Off
38	TEMPO	テンポ調整
39	TEMPO RESET	テンポリセット
40	ジョグダイヤル (天面)	スクラッチ (Vinyl On) ピッチベンド (Vinyl Off)
41	ジョグダイヤル (側面)	ピッチベンド
42	BEAT LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32	BEAT LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
43	BEAT LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9	BEAT LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9
44	SLIP LOOP	SLIP LOOP 1/16, 1/8, 1/4, 1/2, 1, 2, 1/3, 3/4 *2
45	NEEDLE POSITION(全体波形)	NEEDLE SEARCH
46	KEY SHIFT +1/ -1	KEY SHIFT +1/ -1
47	KEY RESET	KEY RESET
48	BEAT JUMP FWD/REV (1/2),(1),(2),(4)	BEAT JUMP FWD/REV (1/2),(1),(2),(4)
49	BEAT JUMP FWD/REV (8),(16),(32),(64)	BEAT JUMP FWD/REV (8),(16),(32),(64)


*1 対応拍数 : 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64, 128拍。

*2 rekordbox側では、BEAT LOOPの拍数が変化します。(1/16, 1/8, 1/4, 1/2, 1, 2)

CDJ-3000

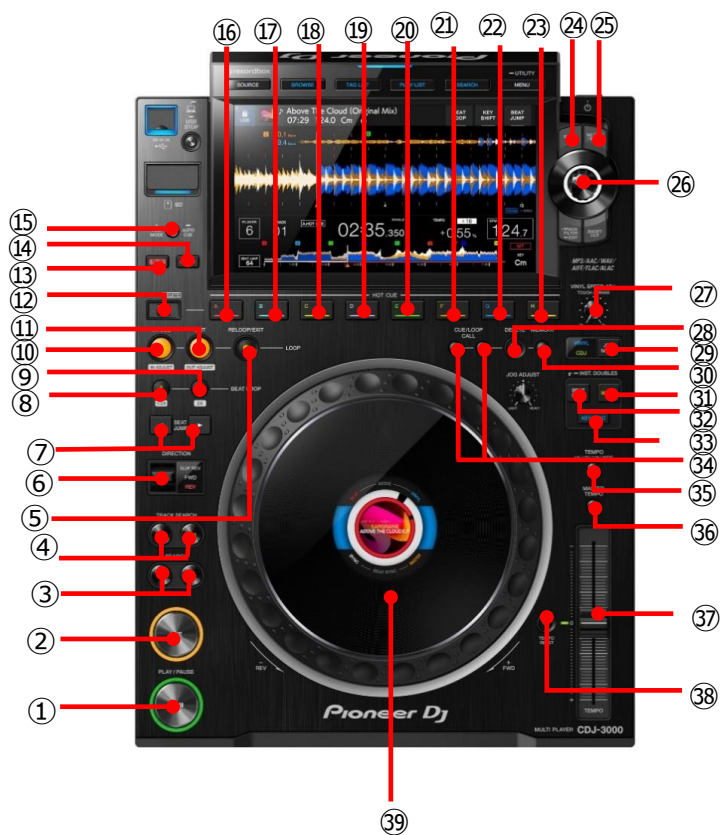


No.	CDJ-3000	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: SEARCH While Pause: FRAME SEARCH
4	TRACK SEARCH	PREV / NEXT TRACK
5	RELOOP / EXIT	RELOOP / EXIT
6	DIRECTION	FWD. / REV. / SLIP REV
7	BEAT JUMP	BEAT JUMP(16)
8	4 BEAT / LOOP CUTTER	AUTO LOOP 4 / LOOP CUTTER
9	8 BEAT / LOOP DOUBLE	AUTO LOOP 8 / LOOP DOUBLE
10	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	CALL / DELETE	CALL / DELETE
13	SLIP	SLIP
14	QUANTIZE	QUANTIZE
15	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
16	HOT CUE A	HOT CUE A
17	HOT CUE B	HOT CUE B
18	HOT CUE C	HOT CUE C
19	HOT CUE D	HOT CUE D
20	HOT CUE E	HOT CUE E
21	HOT CUE F	HOT CUE F
22	HOT CUE G	HOT CUE G
23	HOT CUE H	HOT CUE H
24	BACK	BACK
25	TAG TRACK / REMOVE	TAG TRACK / REMOVE
26	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED

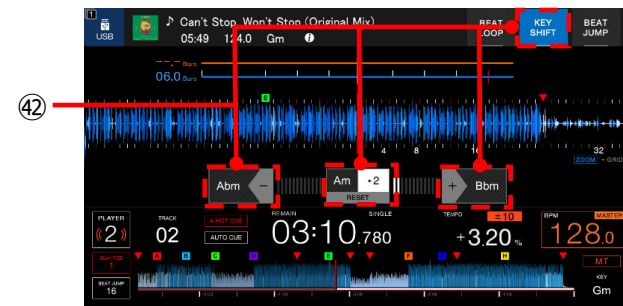


27	VINYL SPEED ADJUST	VINYL SPEED ADJUST
28	DELETE	DELETE
29	JOG MODE	JOG MODE
30	MEMORY	MEMORY
31	BEAT SYNC MASTER	BEAT SYNC MASTER
32	BEAT SYNC / INST. DOUBLES	BEAT SYNC Press and hold: INST. DOUBLES
33	KEY SYNC	KEY SYNC
34	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
35	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
36	MASTER TEMPO	MASTER TEMPO
37	TEMPO	TEMPO
38	TEMPO RESET	TEMPO RESET
39	JOG DIAL	JOG DIAL
3+39	Press 3 and turn 39 simultaneously	SEARCH
	BEAT LOOP	-
40	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
	AUTO LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9	AUTO LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9
41	WAVEFORM	Needle Search
	KEY SHIFT	KEY SHIFT
42	KEY +	KEY +
	KEY -	KEY -
	KEY RESET	KEY RESET
	BEAT JUMP	-
43	1/2, 1, 2, 4 BEAT	BEAT JUMP (1/2), (1), (2), (4)
	8, 16, 32, 64 BEAT	BEAT JUMP (8), (16), (32), (64)

■ CDJ-TOUR1

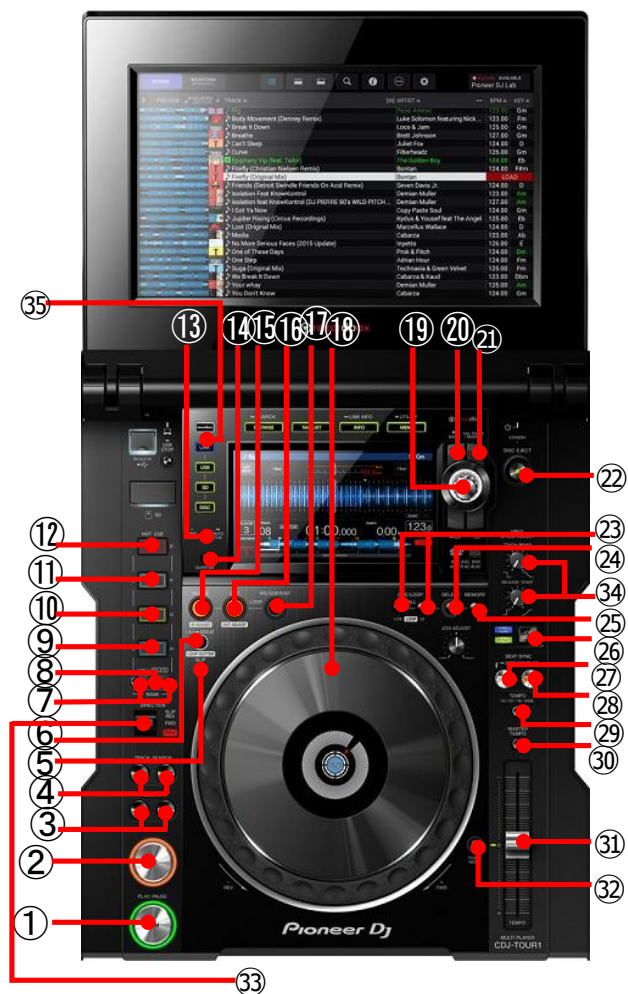


No.	CDJ-TOUR1	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 18 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE

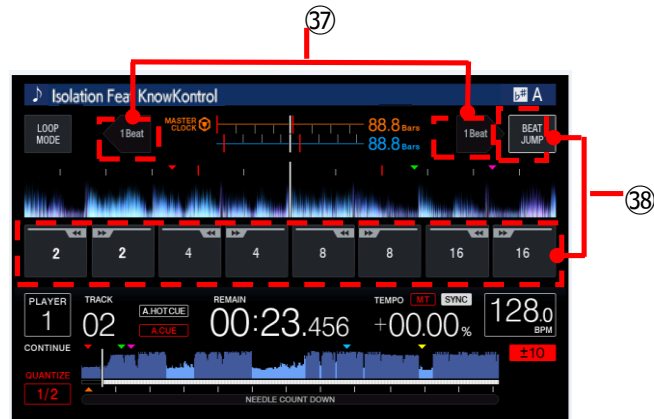


22	DISC EJECT	PLAYER UNLOAD
23	CUE / LOOP CALL	CUE/ LOOP CALL
		During loop: Loop Size 1/2, 2x
24	DELETE	DELETE
25	MEMORY	MEMORY
26	JOG MODE	JOG MODE
27	BEAT SYNC / INST. DOUBLES	BEAT SYNC
		Press and hold: INST. DOUBLES
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST
35	LINK	CONNECT TO rekordbox
36	LOOP MODE	-
	AUTO LOOP 1/4, 1/2, 1, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
37	1 BEAT	BEAT JUMP (1)
38	BEAT JUMP	-
	2,4,8,16 BEAT	BEAT JUMP (2),(4),(8),(16)
39	WAVEFORM	Needle Search

CDJ-2000NXS2

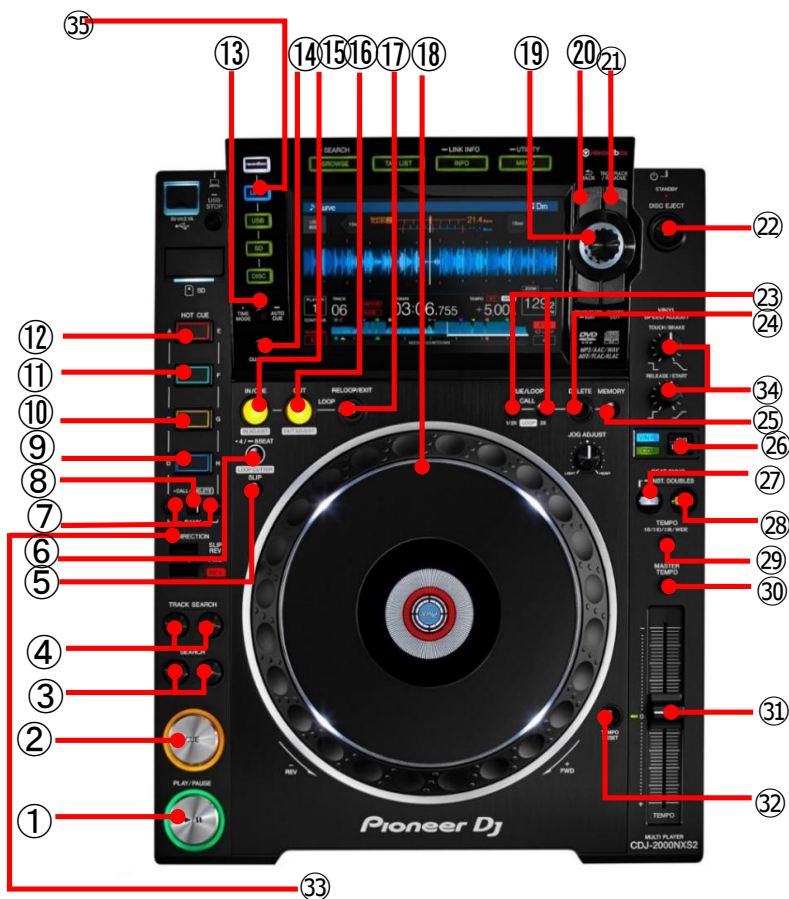


No.	CDJ-2000NXS2	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 18 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE
22	DISC EJECT	PLAYER UNLOAD
23	CUE / LOOP CALL	CUE / LOOP CALL During loop: Loop Size 1/2, 2x
24	DELETE	DELETE
25	MEMORY	MEMORY

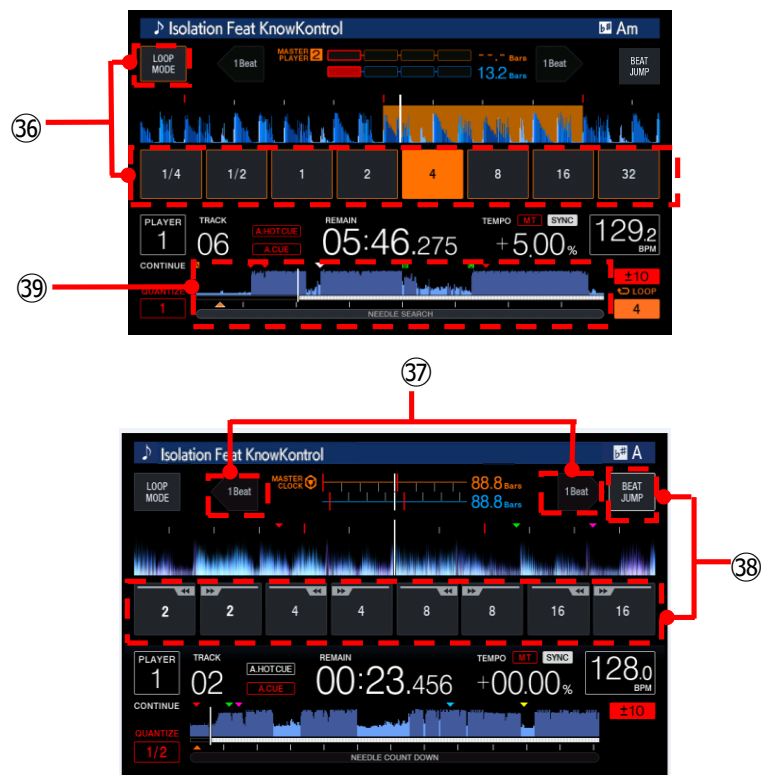

26	JOG MODE	JOG MODE
27	BEAT SYNC / INST. DOUBLES	BEAT SYNC Press and hold: INST. DOUBLES
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST
35	LINK	CONNECT TO rekordbox
36	LOOP MODE	-
	AUTO LOOP 1/4, 1/2, 1, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
37	1 BEAT	BEAT JUMP (1)
38	BEAT JUMP	-
	2,4,8,16 BEAT	BEAT JUMP (2),(4),(8),(16)
39	WAVEFORM	Needle Search

CDJ-2000NXS

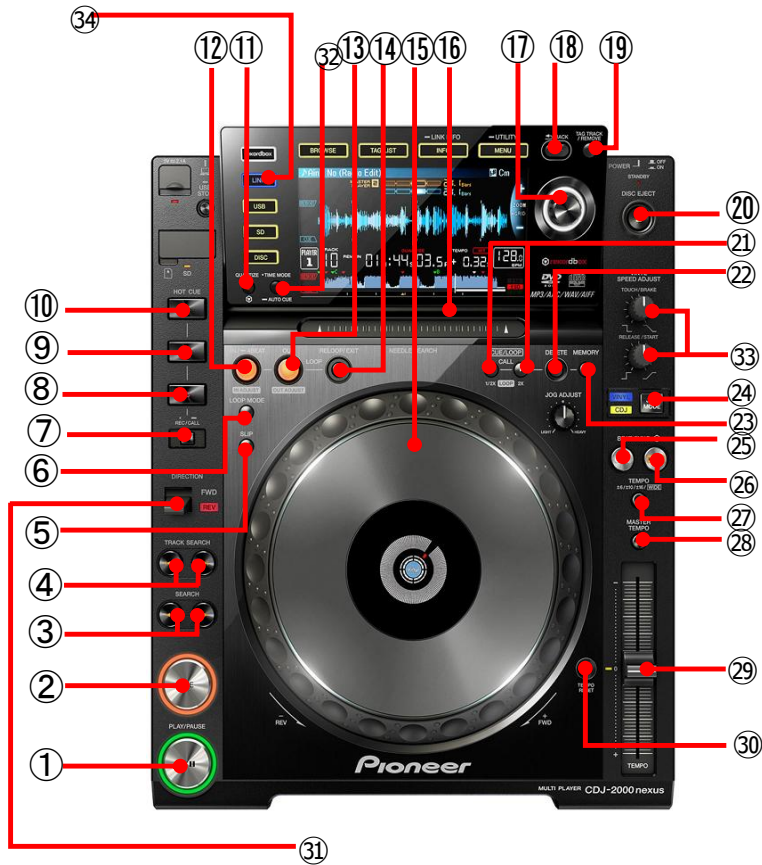


※ 拡大波形は、rekordboxコントロール時には表示されません。

No.	CDJ-2000NXS	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	LOOP MODE	AUTO LOOP 4
7	HOT CUE REC/CALL	HOT CUE REC / CALL
8	HOT CUE C	SELECT / SET + STORE HOTCUE C
9	HOT CUE B	SELECT / SET + STORE HOTCUE B
10	HOT CUE A	SELECT / SET + STORE HOTCUE A
11	QUANTIZE	QUANTIZE
12	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
13	LOOP OUT	LOOP OUT / OUT ADJUST
14	RELOOP / EXIT	RELOOP / EXIT
15	JOG DIAL	JOG DIAL
3+15	Press 3 and turn 15 simultaneously	SEARCH
16	NEEDLE SEARCH	NEEDLE SEARCH
17	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
18	BACK	BACK
19	TAG TRACK / REMOVE	TAG TRACK / REMOVE
20	DISC EJECT	PLAYER UNLOAD
21	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
22	DELETE	DELETE
23	MEMORY	MEMORY
24	JOG MODE	JOG MODE

25	BEAT SYNC	BEAT SYNC
		Press and hold: INST. DOUBLES
26	BEAT SYNC MASTER	BEAT SYNC MASTER
27	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
28	MASTER TEMPO	MASTER TEMPO
29	TEMPO	TEMPO
30	TEMPO RESET	TEMPO RESET
31	DIRECTION	FWD. / REV.
32	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Press and hold: Auto Cue
33	VINYL SPEED ADJUST	VINYL SPEED ADJUST
34	LINK	CONNECT TO rekordbox

CDJ-900NXS

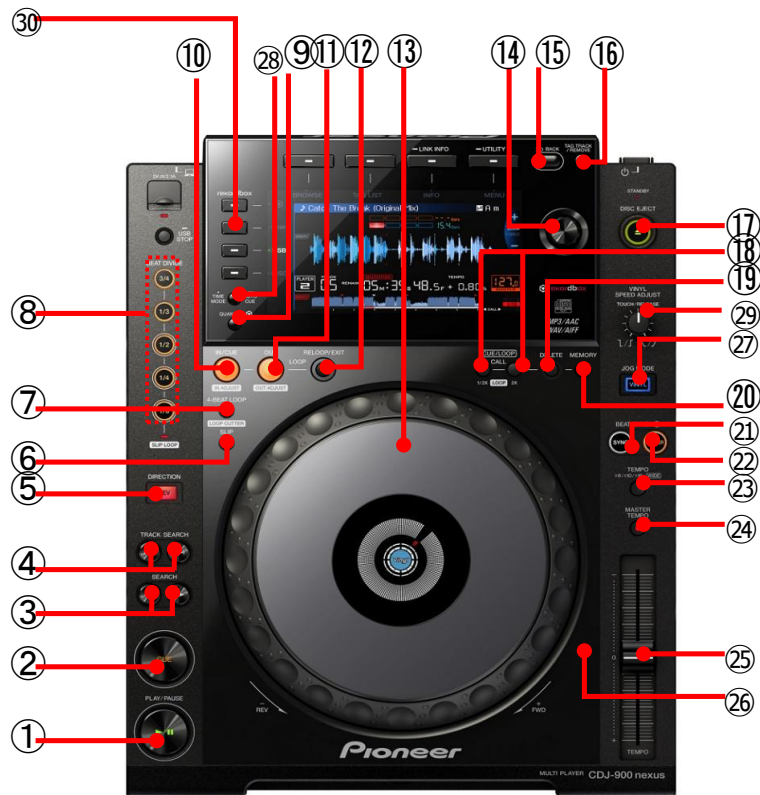


※ 拡大波形は、rekordboxコントロール時には表示されません。




No.	CDJ-900NXS	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	DIRECTION	FWD. / REV.
6	SLIP	SLIP
7	4-BEAT LOOP	4 BEAT AUTO LOOP
8	BEAT DIVIDE 3/4	AUTO BEAT LOOP 3/4
	BEAT DIVIDE 1/3	AUTO BEAT LOOP 1/3
	BEAT DIVIDE 1/2	AUTO BEAT LOOP 1/2
	BEAT DIVIDE 1/4	AUTO BEAT LOOP 1/4
	BEAT DIVIDE 1/8	AUTO BEAT LOOP 1/8
9	QUANTIZE	QUANTIZE
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 and turn 13 simultaneously	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	BEAT SYNC	BEAT SYNC Press and hold: INST. DOUBLES

22	BEAT SYNC MASTER	BEAT SYNC MASTER
23	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE ± 16 /WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	JOG MODE	JOG MODE
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox

■ XDJ-1000MK2

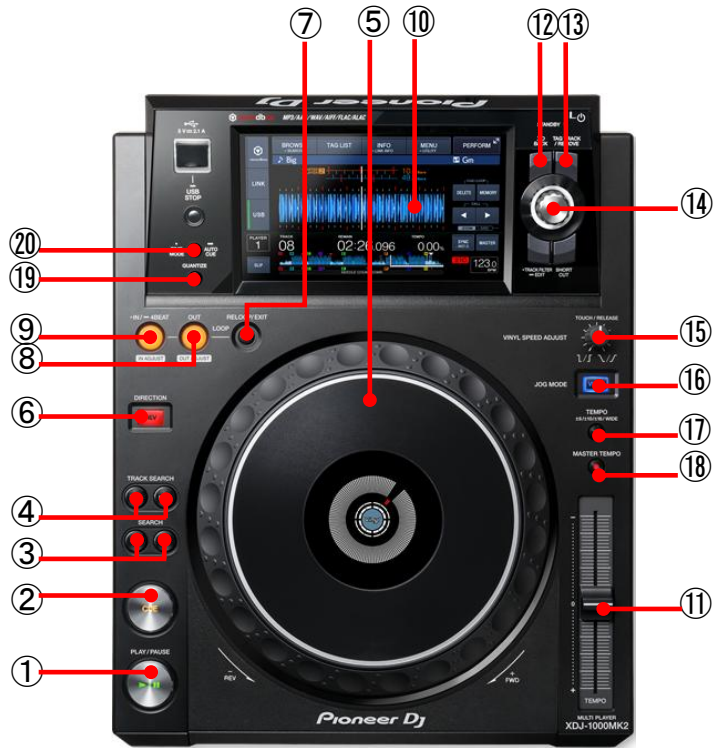

No.	XDJ-1000mk2	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO
19	QUANTIZE	QUANTIZE
20	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue

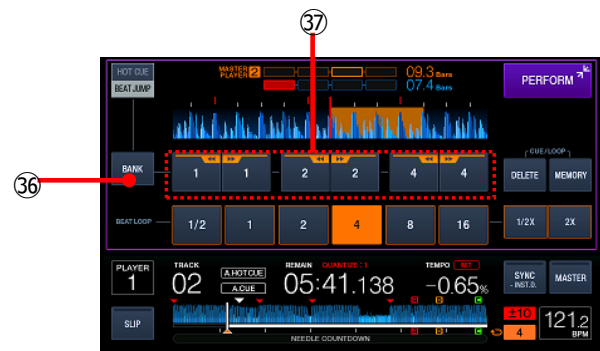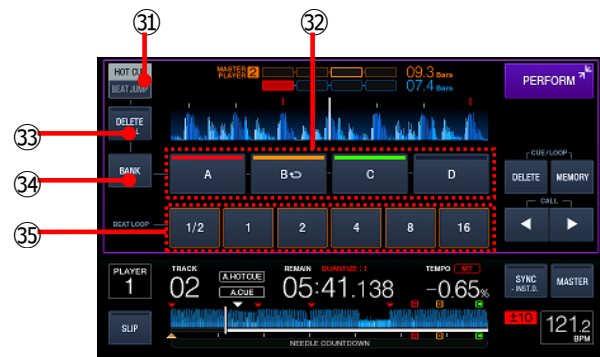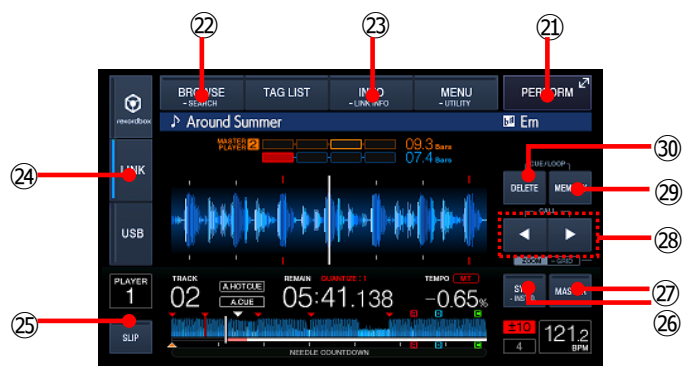

21	PERFORM	PERFORM
22	BROWSE	BROWSE
23	INFO	INFO
24	SOURCE SELECT - LINK	CONNECT TO rekordbox
25	SLIP	SLIP
26	BEAT SYNC	BEAT SYNC
27	BEAT SYNC MASTER	BEAT SYNC MASTER
28	CUE / LOOP CALL	CUE/ LOOP CALL
		During loop: Loop Size 1/2, 2x
29	MEMORY	MEMORY
30	DELETE	DELETE
31	HOT CUE/BEAT JUMP	HOT CUE/BEAT JUMP
32	HOT CUE A/E HOT CUE B/F HOT CUE C/G HOT CUE D/H	SELECT HOTCUE A~H/ SET + STORE HOTCUE A~H
33	DELETE / CALL	HOT CUE DELETE
		Press and hold: HOT CUE CALL
34	BANK	HOT CUE BANK
35	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8, 16
36	BANK	BEAT JUMP BANK
37	BEAT JUMP	BEAT JUMP 1, 2, 4, 8, 16, 32

■ XDJ-1000



No.	XDJ-1000	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED Press and hold: ---
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO

※ 拡大波形は、rekordboxコントロール時には表示されません。




20	WAVEFORM	Needle Search
21	SLIP	SLIP
22	LOOP MODE	LOOP MODE
	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8, 16
23	SOURCE SELECT - LINK	CONNECT TO rekordbox
24	BROWSE	BROWSE
25	INFO	INFO
26	PERFORM	PERFORM
27	CUE / LOOP CALL	CUE/ LOOP CALL
		During loop: Loop Size 1/2, 2x
28	MEMORY / DELETE	MEMORY /
		Press and hold: DELETE
29	QUANTIZE	QUANTIZE
30	BEAT SYNC	BEAT SYNC
		Press and hold: INST. DOUBLES
	BEAT SYNC MASTER	BEAT SYNC MASTER
31	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Press and hold: Auto Cue
32	HOT CUE C	SELECT / SET + STORE HOTCUE C
	HTO CUE B	SELECT / SET + STORE HOTCUE B
	HOT CUE A	SELECT / SET + STORE HOTCUE A
33	HALF / DOUBLE LOOP	HALF / DOUBLE LOOP
34	HOT CUE REC	HOT CUE REC
35	BEAT JUMP	BEAT JUMP (1, 2, 4)

■ XDJ-700



※ 拡大波形は、rekordboxコントロール時には表示されません。

No.	XDJ-700	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	RELOOP / EXIT	RELOOP / EXIT
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
9	TOUCH DISPLAY	---
10	TEMPO	TEMPO
11	BACK	BACK
12	TAG TRACK / REMOVE	TAG TRACK / REMOVE
13	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
14	VINYL MODE	JOG MODE
15	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO

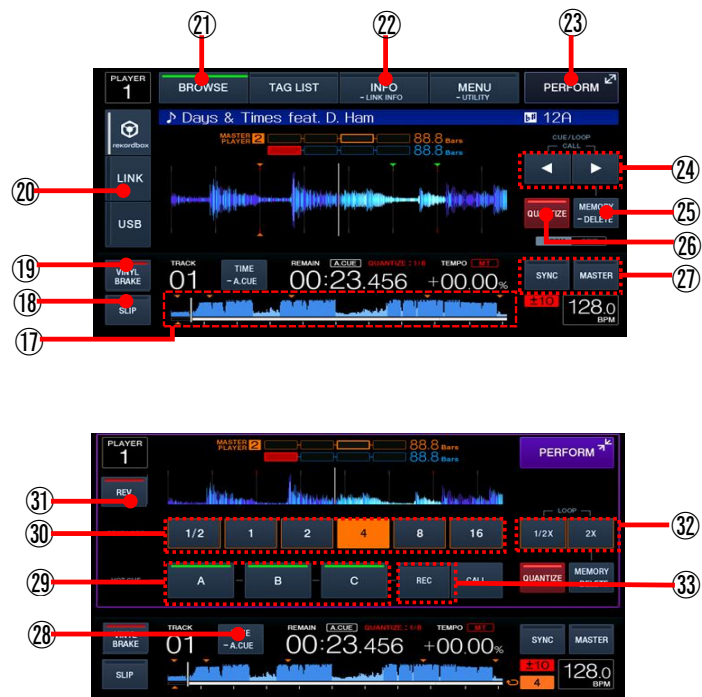

17	WAVEFORM	Needle Search
18	SLIP	SLIP
19	VINYL BRAKE	VINYL SPEED ADJUST - TOUCH/BRAKE
20	SOUCE SELECT - LINK	CONNECT TO rekordbox
21	BROWSE	BROWSE
22	INFO	INFO
23	PERFORM	PERFORM
24	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
25	MEMORY / DELETE	MEMORY / Press and hold: DELETE
26	QUANTIZE	QUANTIZE
27	BEAT SYNC	BEAT SYNC Press and hold: INST. DOUBLES
	BEAT SYNC MASTER	BEAT SYNC MASTER
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
29	HOT CUE C	SELECT / SET + STORE HOTCUE C
	HTO CUE B	SELECT / SET + STORE HOTCUE B
	HOT CUE A	SELECT / SET + STORE HOTCUE A
30	AUTO LOOP 1/2, 1, 4, 8, 16	AUTO LOOP 1/2, 1, 4, 8,16
31	REV	REV
32	HALF / DOUBLE LOOP	HALF / DOUBLE LOOP
33	HOT CUE REC	HOT CUE REC


※ 拡大波形は、rekordboxコントロール時には表示されません。

CDJ-2000




No.	CDJ-2000	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	4 BEAT LOOP / LOOP CUTTER	AUTO LOOP 4 LOOP SIZE /2
6	HOT CUE REC/CALL	HOT CUE REC / CALL
7	HOT CUE C	SELECT / SET + STORE HOTCUE C
8	HTO CUE B	SELECT / SET + STORE HOTCUE B
9	HOT CUE A	SELECT / SET + STORE HOTCUE A
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	NEEDLE SEARCH	NEEDLE SERACH
3+14	Press 3 and turn 14 simultaneously	SEARCH
14	JOG DIAL	JOG DIAL
15	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
16	BACK	BACK
17	TAG TRACK / REMOVE	TAG TRACK / REMOVE
18	DISC EJECT	PLAYER UNLOAD
19	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
20	DELETE	DELETE
21	MEMORY	MEMORY
22	JOG MODE	JOG MODE
23	TEMPO ±6/±10/ ±16/WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	DIRECTION	FWD. / REV.
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox

CDJ-900

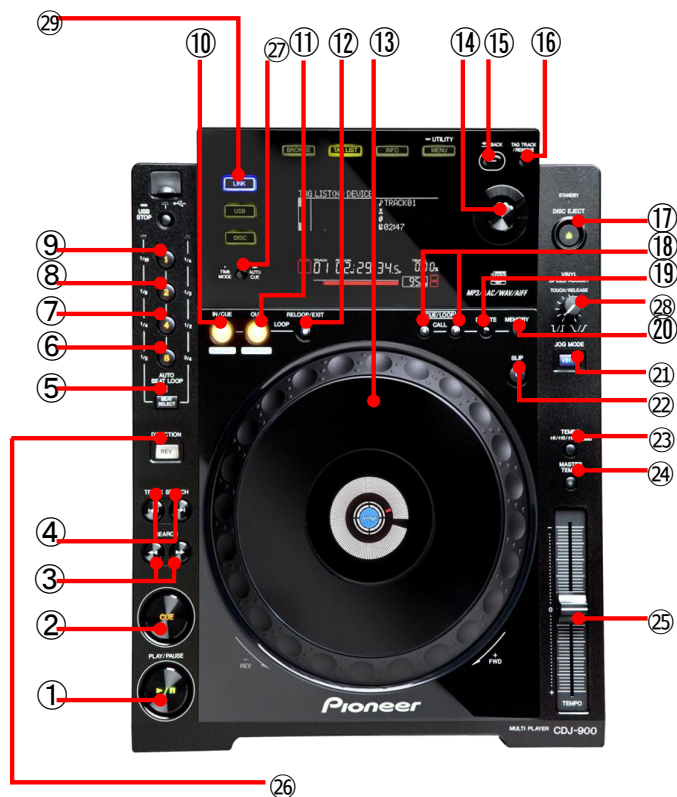


No.	CDJ-900	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2, 8, 3/4
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4, 4, 1/2
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8, 2, 1/3
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16, 1, 1/4
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	SLIP	SLIP
23	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	DIRECTION	FWD. / REV.
27	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
28	VINYL SPEED ADJUST	VINYL SPEED ADJUST
29	LINK	CONNECT TO rekordbox

■ CDJ-850

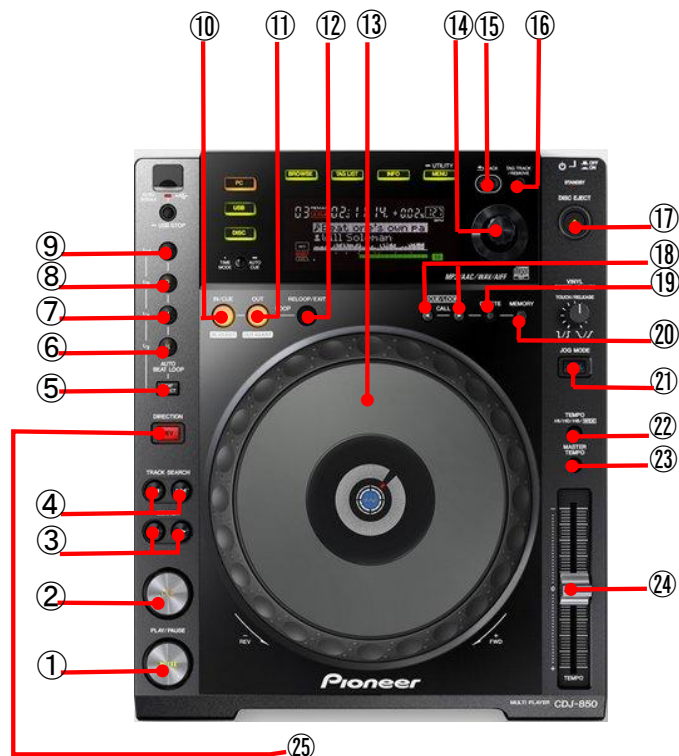

No.	CDJ-850	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2, AUTO BEAT LOOP 8
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4, AUTO BEAT LOOP 4
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8, AUTO BEAT LOOP 2
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16, AUTO BEAT LOOP 1
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
23	MASTER TEMPO	MASTER TEMPO
24	TEMPO	TEMPO
25	DIRECTION	FWD. / REV.

CDJ-400

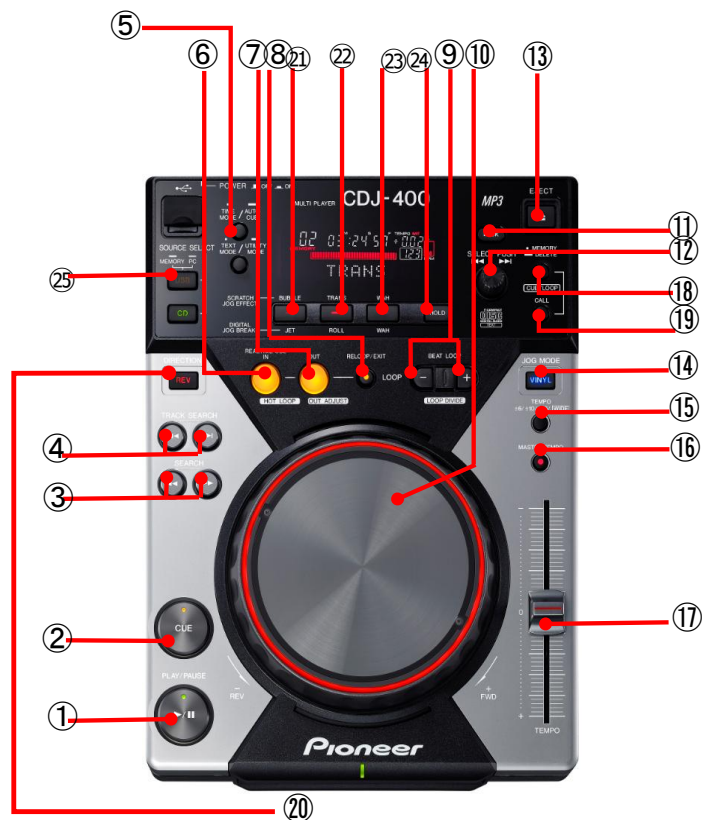


No.	CDJ-400	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	MEMORY / DELETE	MEMORY Press and hold:DELETE
19	CUE / LOOP CALL ^(※1)	Call Next Memory Cue/Loop
20	DIRECTION	FWD. / REV.
21	BUBBLE/JET ^(※2)	FX1 ON/OFF
22	TRANS/ROLL ^(※2)	FX2 ON/OFF
23	WAH/WAH ^(※2)	FX3 ON/OFF
24	HOLD ^(※2)	RELEASE FX
25	USB SELECT (PC)	CONNECT TO rekordbox

※1 次のMemory Cueを呼び出します。前のMemory Cueの呼び出しは出来ません。
複数のMemory Cueの呼び出しをする場合は、TRACK SEARCH(PREV)を1回押して曲頭に戻した後で
CUE / LOOP CALLボタンを押すことで順番に呼び出すことが可能です。

※2 DECK1およびDECK3に設定したCDJは、FXユニット1をコントロールします。
DECK2およびDECK4に設定したCDJは、FXユニット2をコントロールします。

CDJ-350

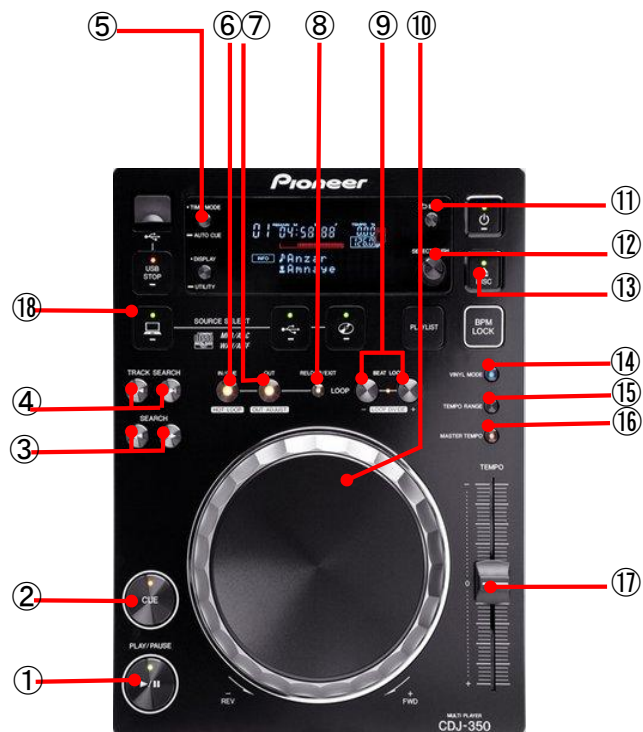

No.	CDJ-350	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	COMPUTER	CONNECT TO rekordbox