

Hardware Diagram for rekordbox

■ CDJ-1500X



No.	CDJ-1500X	rekordbox	
		FUNCTION	+SHIFT
1	PLAY / PAUSE	Play / Pause	
2	CUE	Set / Start playback from CUE / BackCue	Jump to track start
3	SHIFT	Shift	
4	BEAT LOOP	rotate: Adjust Loop size	
		press: Auto Loop On / Off	Reloop
5	HOT CUE DELETE	Delete HOT CUE	
6	HOT CUE A	Set / Play HOT CUE A	Delete HOT CUE A
7	HOT CUE B	Set / Play HOT CUE B	Delete HOT CUE B
8	HOT CUE C	Set / Play HOT CUE C	Delete HOT CUE C
9	HOT CUE D	Set / Play HOT CUE D	Delete HOT CUE D
10	HOT CUE E	Set / Play HOT CUE E	Delete HOT CUE E
11	HOT CUE F	Set / Play HOT CUE F	Delete HOT CUE F
12	HOT CUE G	Set / Play HOT CUE G	Delete HOT CUE G
13	HOT CUE H	Set / Play HOT CUE H	Delete HOT CUE H
14	BACK	Move hierarchy, move area (backward)	
15	TAG TRACK / REMOVE	Set / Delete to Tag List	
16	ROTARY SELECTOR	rotate: Browse (Select Track / Folder)	
		press: Move hierarchy / Load a selected track	
17	TEMPO	Adjust Tempo	
18	JOG DIAL (platter)	Scratch (Vinyl On)	Search
		Pitch bend (Vinyl Off)	
19	JOG DIAL (wheel side)	Pitch bend	



	LOOP	-
	LOOP IN	Loop In / during loop: Loop In Adjustment
	LOOP OUT	Loop Out / during loop: Loop Out Adjustment
20	RELOOP / EXIT	Reloop / Exit
	BEAT LOOP 1/2, 1, 2, 4, 8, 16	Beat Loop 1/2, 1, 2, 4, 8, 16
	BEAT LOOP 3/4, 1, 3/2, 3, 5, 7	Beat Loop 3/4, 1, 3/2, 3, 5, 7
	SLIP LOOP	Slip Loop 1/8, 1/4, 1/2, 1, 1/3, 3/4 *1
	SLIP REVERSE	Slip Reverse
21	NEEDLE POSITION (Overall waveform)	Needle Search
	MEMORY CUE	-
22	CUE / LOOP CALL NEXT / PREV	Cue / Loop Call
	CUE / LOOP DELETE	Cue / Loop Delete
	CUE / LOOP MEMORY	Cue / Loop Memory
	BEAT JUMP	-
23	BEAT JUMP FWD / REV (1/2),(1),(2),(4)	Beat Jump Fwd / Rev (1/2),(1),(2),(4)
	BEAT JUMP FWD / REV (8),(16),(32),(64)	Beat Jump Fwd / Rev (8),(16),(32),(64)
24	SLIP	Slip On / Off
25	QUANTIZE	Quantize On / Off
26	TEMPO RANGE	Tempo Range
27	MASTER TEMPO	Master Tempo On / Off
28	SYNC	Sync On / Off
		press and hold: INSTANT DOUBLES
29	MASTER	Master
30	VINYL SPEED ADJUST ON / OFF	No function assigned here
	VINYL SPEED ADJUST (GUI / SHORTCUT)	Vinyl Speed Adjust (Touch / Release)
31	JOG MODE	Vinyl On / Off

*1: On the rekordbox side, the number of beats for Beat Loop changes.