
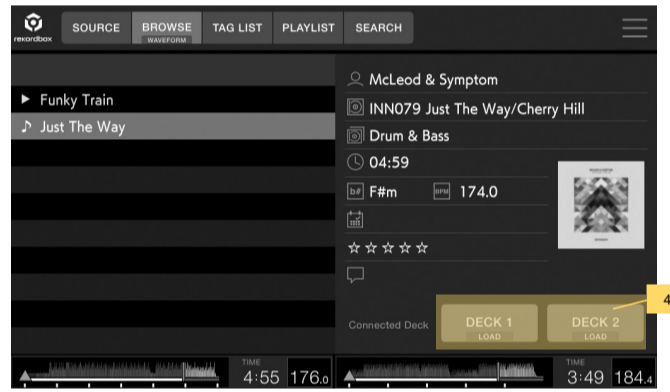
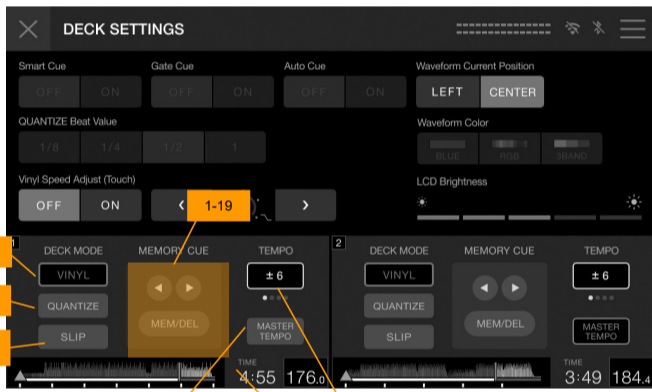


XDJ-AN

Hardware Diagram for rekordbox for Mac/Windows

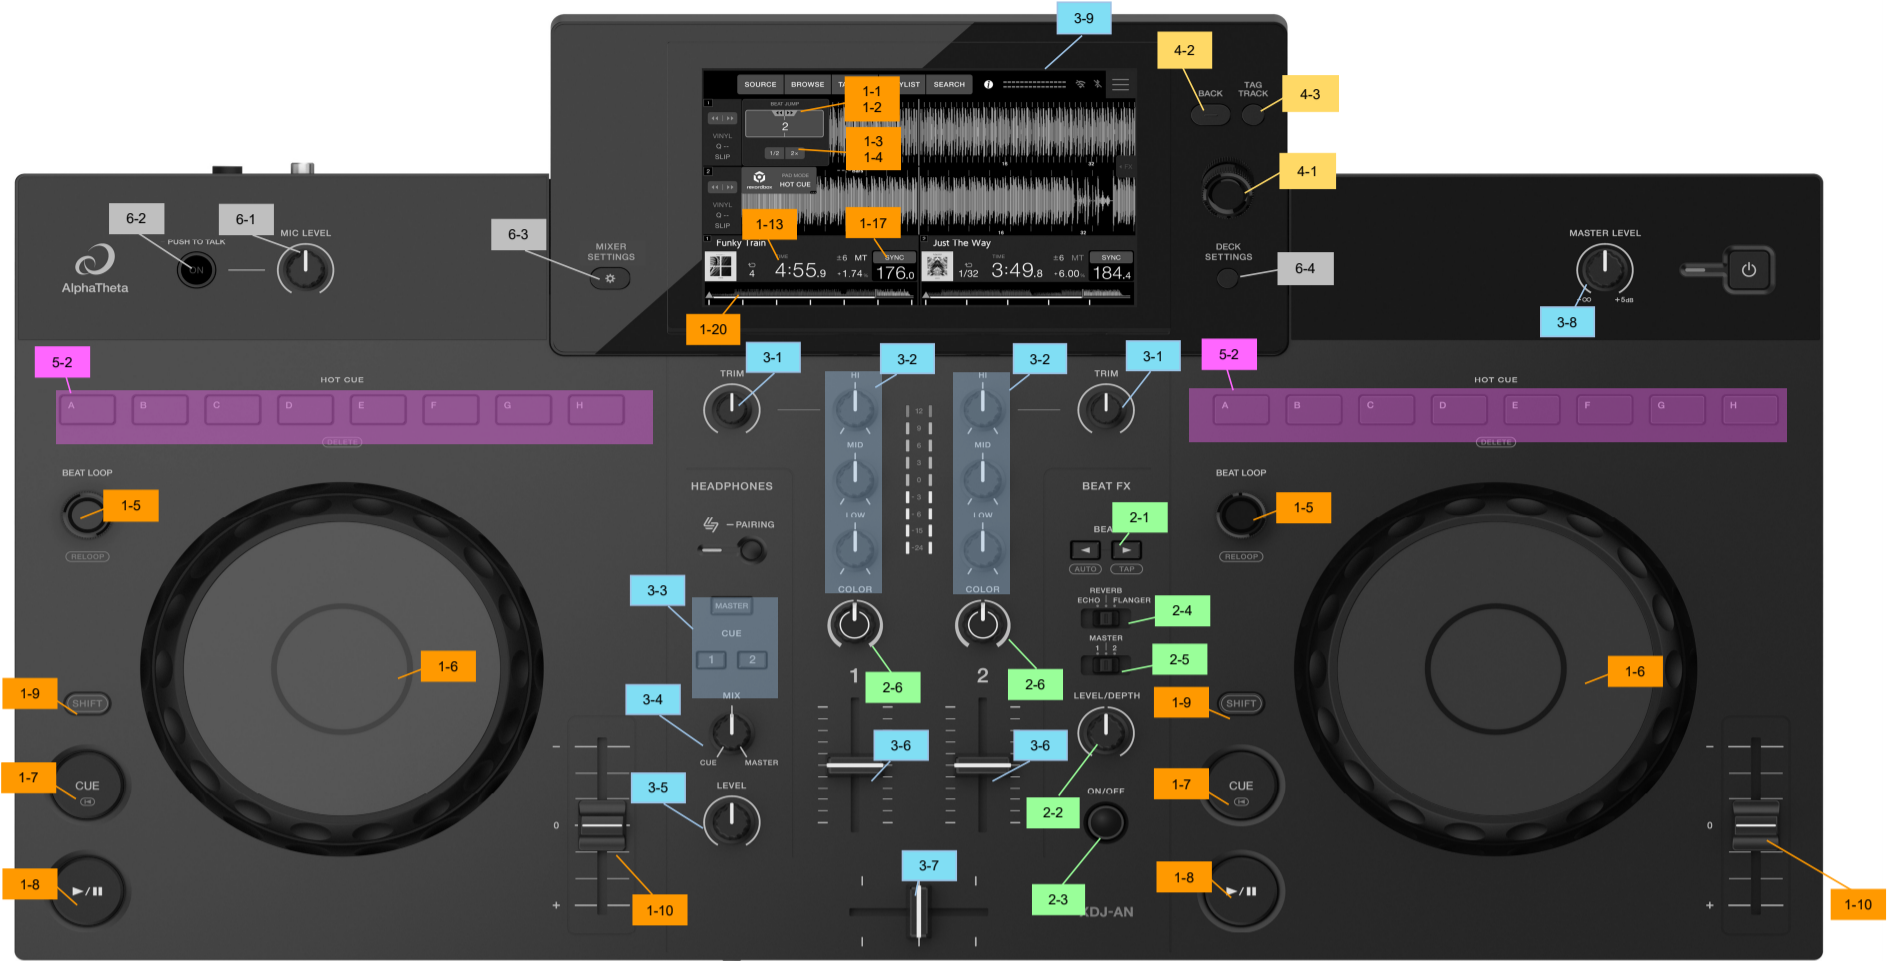


GROUP	No.	NAME	FUNCTION	+SHIFT	
1, DECK					
1	1	BEAT JUMP REV	LEFT	BEAT JUMP REV	
	2	BEAT JUMP FWD	RIGHT	BEAT JUMP FWD	
	3	BEAT JUMP BEAT VALUE 1/2	RIGHT	BEAT JUMP BEAT VALUE x2 * 1	
	4	BEAT JUMP BEAT VALUE 2x	LEFT	BEAT JUMP BEAT VALUE x1/2 * 1	
	5	BEAT LOOP	Turn	LOOP Size Adjustment	
			Press	AUTO LOOP ON	RELOOP
	6	JOG	Top	AUTO LOOP OFF	Search
			Side	Scratch (Vinyl On)	
				Pitch Bend (Vinyl Off)	
	7	CUE		CUE Set/Play, Back Cue	Move playback position to beginning of track
	8	PLAY/PAUSE		Play/Pause	
	9	SHIFT		Shift	
	10	TEMPO		Tempo Adjustment	
	12	JOG MODE		Vinyl On/Off	
	13	TIME MODE		TIME/REMAIN Display Toggle	
	14	QUANTIZE		Quantize on/off	
15	SLIP		SLIP mode On/Off		
16	MASTER TEMPO		Master Tempo On/Off		
17	SYNC		Sync On/Off		
2	18	TEMPO RANGE	Long Press	INSTANT DOUBLES	
				Tempo Range	
	19	CALL PREV		CUE/LOOP CALL, REV	
	19	CALL NEXT		CUE/LOOP CALL, FWD	
	19	MEMORY/DELETE		MEMORY/DELETE	
	20	NEEDLE SEARCH (GUI/Full Waveform Display)		NEEDLE SEARCH	
	2, EFFECT (MIXER MODE: MIDI CONTROL)				
1	1	BEAT	RIGHT	FX beat up	TAP
			LEFT	FX beat down	AUTO
	2	LEVEL DEPTH		FX1 level control	
				FX1 On/Off	FX1 Select
	4	EFFECT SELECT	ECHO	FX1: ECHO	
			REVERB	FX1: REVERB	
			FLANGER	FX1: FLANGER	
5	CH SELECT	MASTER	FX MASTER ON (Others OFF)		
		1CH	FX CH1 ON (Others OFF)		
2CH	FX CH2 ON (Others OFF)				
6	COLOR		SOUND COLOR FX parameter control		
7	SPACE		No function assigned here		
	DUB ECHO		No function assigned here		
	CRUSH		No function assigned here		
	SWEEP		No function assigned here		
	NOISE		No function assigned here		
	FILTER		No function assigned here		

GROUP	No.	NAME	FUNCTION	+SHIFT		
3, MIXER (MIXER MODE: MIDI CONTROL)						
3	1	TRIM		Gain		
			HI	EQ (High)		
			MID	EQ (Mid)		
	2	LOW		EQ (Low)		
				Headphone CUE On/Off		
	3	CUE (Headphone)	1/2	MASTER	No function assigned here	
	4	HEADPHONES MIXING			No function assigned here	
	5	HEADPHONES LEVEL			No function assigned here	
6	CH FADER			Channel Fader		
7	CROSSFADER			Crossfader		
8	BOOTH MONITOR LEVEL			No function assigned here		
9	MASTER LEVEL			No function assigned here		
4, BROWSER						
4	1	Rotary Selector	Turn	Browse(Track/Folder Select)	Waveform Zoom In/Out	
	2	BACK	Press	Area Navigation (Forward)	Layer Navigation, Area Navigation (Backward)	
	3	TAG TRACK		BACK	List View Toggle	
	4	DECK1,2	Press	TAG TRACK	Related Tracks View Toggle	
			LOAD 1	-		
			LOAD 2	-		
5, PERFORMANCE PADS						
1	PAD MODE	HOT CUE	PAD MODE HOT CUE			
		PAD FX1	PAD MODE PAD FX1			
		BEAT JUMP	PAD MODE BEAT JUMP			
		SAMPLER	PAD MODE SAMPLER			
		KEYBOARD	PAD MODE KEYBOARD			
		PAD FX2	PAD MODE PAD FX2			
		BEATLOOP	PAD MODE BEATLOOP			
		KEY SHIFT	PAD MODE KEY SHIFT			
		HOT CUE	HOT CUE Set/Play	Delete HOT CUE		
		PAD FX1	PAD FX On	PAD FX On		
2	PERFORMANCE PAD *3 (HOT CUE)	BEAT JUMP	Move Playback Position	Change Beat Jump Amount		
		SAMPLER	Sampler Slot Play	Sampler Slot Stop/Load		
		KEYBOARD	Play selected Hot Cue at specified pitch	Pitch Range Toggle		
		PAD FX2	PAD FX On	PAD FX On		
		BEATLOOP	Auto Beat Loop On/Off	-		
		KEY SHIFT	Track Key Change	Key Range Toggle		
		6, OTHER				
		1	MIC LEVEL		No function assigned here	
	No function assigned here					
	No function assigned here					
	No function assigned here					
2	MIC ON		No function assigned here			
3	MIXER SETTINGS		No function assigned here			
4	SHORTCUT		No function assigned here			

*1 Supported beats: 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64, 128 beats
*2 Toggle in UTILITY. No physical control

HOT CUE Mode

 When [SHIFT] button is NOT pressed



When [SHIFT] button IS pressed



PAD FX1 Mode

When [SHIFT] button is NOT pressed



When [SHIFT] button IS pressed



BEAT JUMP Mode

When [SHIFT] button is NOT pressed (Default)

1 Beat (REV)	1 Beat (FWD)	2 Beat (REV)	2 Beat (FWD)	4 Beat (REV)	4 Beat (FWD)	8 Beat (REV)	8 Beat (FWD)
--------------	--------------	--------------	--------------	--------------	--------------	--------------	--------------

When [SHIFT] button IS pressed

—	—	—	—	—	—	Beat Down	Beat Up
---	---	---	---	---	---	-----------	---------

SAMPLER Mode

Left DeCl When [SHIFT] button is NOT pressed

Slot 1 Play	Slot 2 Play	Slot 3 Play	Slot 4 Play	Slot 5 Play	Slot 6 Play	Slot 7 Play	Slot 8 Play
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

When [SHIFT] button IS pressed

Slot 1 Stop/Load	Slot 2 Stop/Load	Slot 3 Stop/Load	Slot 4 Stop/Load	Slot 5 Stop/Load	Slot 6 Stop/Load	Slot 7 Stop/Load	Slot 8 Stop/Load
------------------	------------------	------------------	------------------	------------------	------------------	------------------	------------------

Right De When [SHIFT] button is NOT pressed

Slot 9 Play	Slot 10 Play	Slot 11 Play	Slot 12 Play	Slot 13 Play	Slot 14 Play	Slot 15 Play	Slot 16 Play
-------------	--------------	--------------	--------------	--------------	--------------	--------------	--------------

When [SHIFT] button IS pressed

Slot 9 Stop/Load	Slot 10 Stop/Load	Slot 11 Stop/Load	Slot 12 Stop/Load	Slot 13 Stop/Load	Slot 14 Stop/Load	Slot 15 Stop/Load	Slot 16 Stop/Load
------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------	-------------------

KEYBOARD Mode

When [SHIFT] button is NOT pressed (Default, values change with page switch)

Semitone ±0	Semitone +1	Semitone +2	Semitone +3	Semitone +4	Semitone +5	Semitone +6	Semitone +7
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

When [SHIFT] button IS pressed

—	—	—	—	—	—	Page Switch	Page Switch
---	---	---	---	---	---	-------------	-------------

PAD FX2 Mode

When [SHIFT] button is NOT pressed

Effect 17	Effect 18	Effect 19	Effect 20	Effect 21	Effect 22	Effect 23	Effect 24
-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------

When [SHIFT] button IS pressed

Effect 25	Effect 26	Effect 27	Effect 28	Effect 29	Effect 30	Effect 31	Effect 32
-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------

BEAT LOOP Mode

1/4 Beat	1/2 Beat	1 Beat	2 Beat	4 Beat	8 Beat	16 Beat	32 Beat
----------	----------	--------	--------	--------	--------	---------	---------

KEY SHIFT Mode

When [SHIFT] button is NOT pressed (Default, values change with page switch)

Semitone ±0	Semitone +1	Semitone +2	Semitone +3	Semitone +4	Semitone +5	Semitone +6	Semitone +7
-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

When [SHIFT] button IS pressed

—	—	—	—	—	—	Page Switch	Page Switch
---	---	---	---	---	---	-------------	-------------