

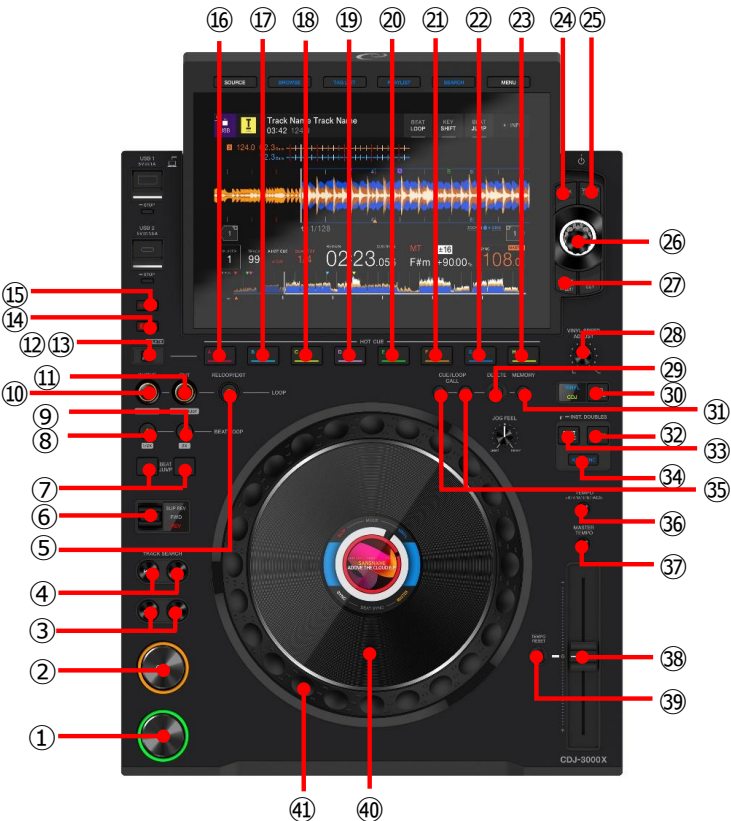


Hardware Diagram for rekordbox

CDJ-3000X

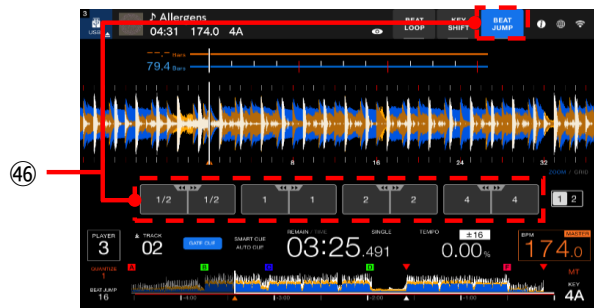

No.	CDJ-3000X	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	Set / Start playback from Cue, BackCue
3	SEARCH FWD / REV	While Playing: SEARCH While Pause: SEARCH (Fine adjustment)
4	TRACK SEARCH FWD / REV	PREV / NEXT TRACK
5	RELOOP / EXIT	Reloop / Exit
6	DIRECTION	SLIP REVERSE / REVERSE
7	BEAT JUMP FWD / REV	BEAT JUMP
8	4 BEAT	4 BEAT Loop During loop: Select Loop Size (Half)
9	8 BEAT	8 BEAT Loop During loop: Select Loop Size (Double)
10	LOOP IN	Loop in / Loop in adjustment Press and hold: 4 BEAT Loop
11	LOOP OUT	Loop out / Loop out adjustment
12	HOT CUE CALL / DELETE	HOT CUE CALL / DELETE
13	HOT CUE CALL / DELETE + BEAT JUMP FWD / REV	BEAT JUMP BEAT VALUE *1
14	SLIP	SLIP ON/OFF
15	QUANTIZE	Quantize on/off
16	HOT CUE A	Set / play HOT CUE A
17	HOT CUE B	Set / play HOT CUE B
18	HOT CUE C	Set / play HOT CUE C
19	HOT CUE D	Set / play HOT CUE D
20	HOT CUE E	Set / play HOT CUE E
21	HOT CUE F	Set / play HOT CUE F
22	HOT CUE G	Set / play HOT CUE G
23	HOT CUE H	Set / play HOT CUE H

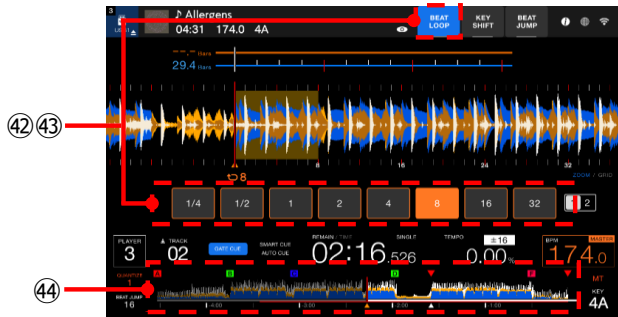


24	BACK	Move hierarchy, move area
25	TAG TRACK / REMOVE	Set to/ Delete from Tag List
26	ROTARY SELECTOR	Rotate: Browse (Select Track/Folder) Press: Move hierarchy / Load a selected track
27	TRACK FILTER	TRACK FILTER OPEN/CLOSE
28	VINYL SPEED ADJUST	VINYL SPEED ADJUST
29	CUE/LOOP DELETE	CUE/LOOP DELETE
30	JOG MODE	Vinyl On/Off
31	CUE/LOOP MEMORY	CUE/LOOP MEMORY
32	MASTER	Master
33	SYNC	Sync On/Off Press and hold: INSTANT DOUBLES
34	KEY SYNC	Key Sync On/Off
35	CUE/LOOP CALL NEXT/prev	CUE/LOOP CALL During loop: Select Loop Size (Double/Half)
36	TEMPO RANGE	Tempo Range
37	MASTER TEMPO	Master Tempo On/Off
38	TEMPO	Adjust Tempo
39	TEMPO RESET	Tempo Reset
40	Jog dial (Platter)	Scratch (Vinyl On) Pitch bend (Vinyl Off)
41	Jog dial (Wheel side)	Pitch bend
42	BEAT LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32	BEAT LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
43	BEAT LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9	BEAT LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9
44	SLIP LOOP	SLIP LOOP 1/16, 1/8, 1/4, 1/2, 1, 2, 1/3, 3/4 *2
45	NEEDLE POSITION (Overall waveform)	NEEDLE SEARCH
46	KEY SHIFT +1/ -1	KEY SHIFT +1/ -1
47	KEY RESET	KEY RESET
48	BEAT JUMP FWD/REV (1/2),(1),(2),(4)	BEAT JUMP FWD/REV (1/2),(1),(2),(4)
49	BEAT JUMP FWD/REV (8),(16),(32),(64)	BEAT JUMP FWD/REV (8),(16),(32),(64)


*1 Number of beats: 1/8, 1/4, 1/2, 1, 2, 4, 8, 16, 32, 64, 128 beats

*2 On the rekordbox side, the number of beats for Beat Loop changes. (1/16, 1/8, 1/4, 1/2, 1, 2)

CDJ-3000

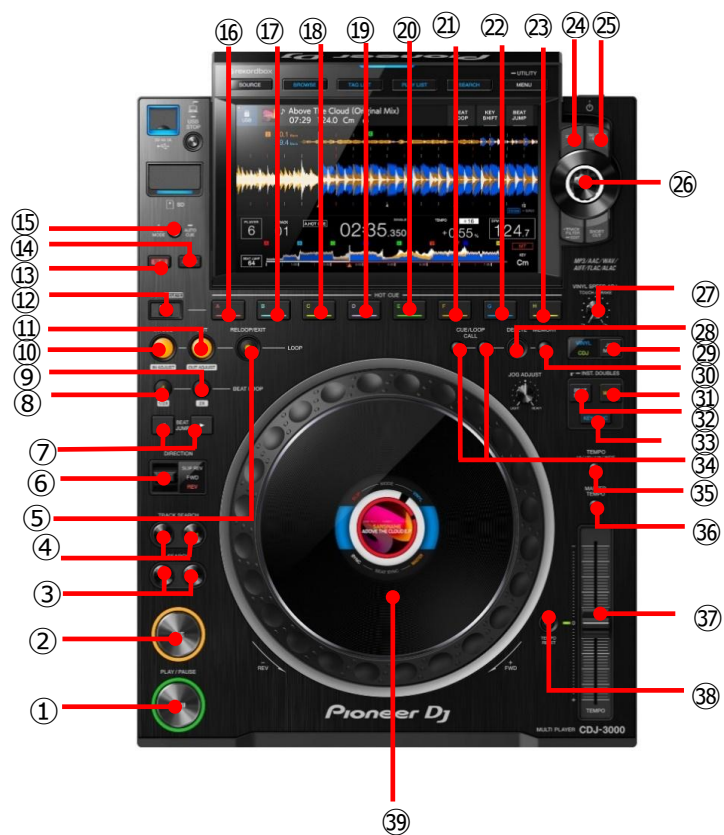


No.	CDJ-3000	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: SEARCH While Pause: FRAME SEARCH
4	TRACK SEARCH	PREV / NEXT TRACK
5	RELOOP / EXIT	RELOOP / EXIT
6	DIRECTION	FWD. / REV. / SLIP REV
7	BEAT JUMP	BEAT JUMP(16)
8	4 BEAT / LOOP CUTTER	AUTO LOOP 4 / LOOP CUTTER
9	8 BEAT / LOOP DOUBLE	AUTO LOOP 8 / LOOP DOUBLE
10	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	CALL / DELETE	CALL / DELETE
13	SLIP	SLIP
14	QUANTIZE	QUANTIZE
15	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
16	HOT CUE A	HOT CUE A
17	HOT CUE B	HOT CUE B
18	HOT CUE C	HOT CUE C
19	HOT CUE D	HOT CUE D
20	HOT CUE E	HOT CUE E
21	HOT CUE F	HOT CUE F
22	HOT CUE G	HOT CUE G
23	HOT CUE H	HOT CUE H
24	BACK	BACK
25	TAG TRACK / REMOVE	TAG TRACK / REMOVE
26	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED

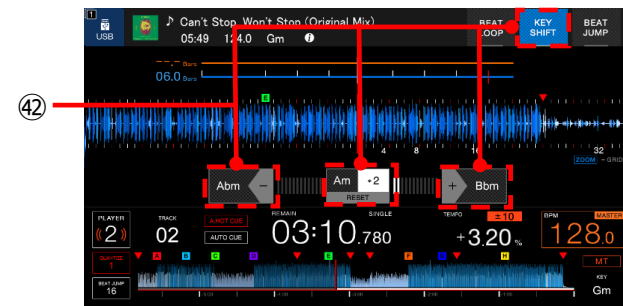

27	VINYL SPEED ADJUST	VINYL SPEED ADJUST
28	DELETE	DELETE
29	JOG MODE	JOG MODE
30	MEMORY	MEMORY
31	BEAT SYNC MASTER	BEAT SYNC MASTER
32	BEAT SYNC / INST. DOUBLES	BEAT SYNC Press and hold: INST. DOUBLES
33	KEY SYNC	KEY SYNC
34	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
35	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
36	MASTER TEMPO	MASTER TEMPO
37	TEMPO	TEMPO
38	TEMPO RESET	TEMPO RESET
39	JOG DIAL	JOG DIAL
3+39	Press 3 and turn 39 simultaneously	SEARCH
	BEAT LOOP	-
40	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
	AUTO LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9	AUTO LOOP 3/4, 1, 3/2, 3, 5, 6, 7, 9
41	WAVEFORM	Needle Search
	KEY SHIFT	KEY SHIFT
42	KEY +	KEY +
	KEY -	KEY -
	KEY RESET	KEY RESET
	BEAT JUMP	-
43	1/2, 1, 2, 4 BEAT	BEAT JUMP (1/2), (1), (2), (4)
	8, 16, 32, 64 BEAT	BEAT JUMP (8), (16), (32), (64)

CDJ-TOUR1

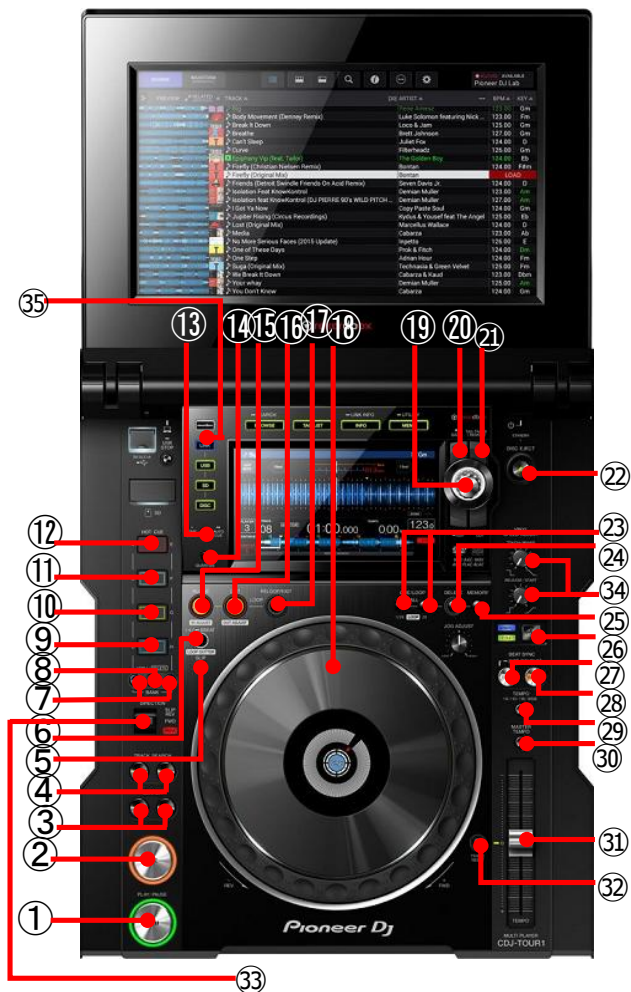


No.	CDJ-TOUR1	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 18 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE



22	DISC EJECT	PLAYER UNLOAD
23	CUE / LOOP CALL	CUE/ LOOP CALL
24	DELETE	DELETE
25	MEMORY	MEMORY
26	JOG MODE	JOG MODE
27	BEAT SYNC / INST. DOUBLES	BEAT SYNC
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST
35	LINK	CONNECT TO rekordbox dj
36	LOOP MODE	-
37	AUTO LOOP 1/4, 1/2, 1, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
38	1 BEAT	BEAT JUMP (1)
39	BEAT JUMP	-
	2, 4, 8, 16 BEAT	BEAT JUMP (2),(4),(8),(16)
	WAVEFORM	Needle Search

CDJ-2000NXS2

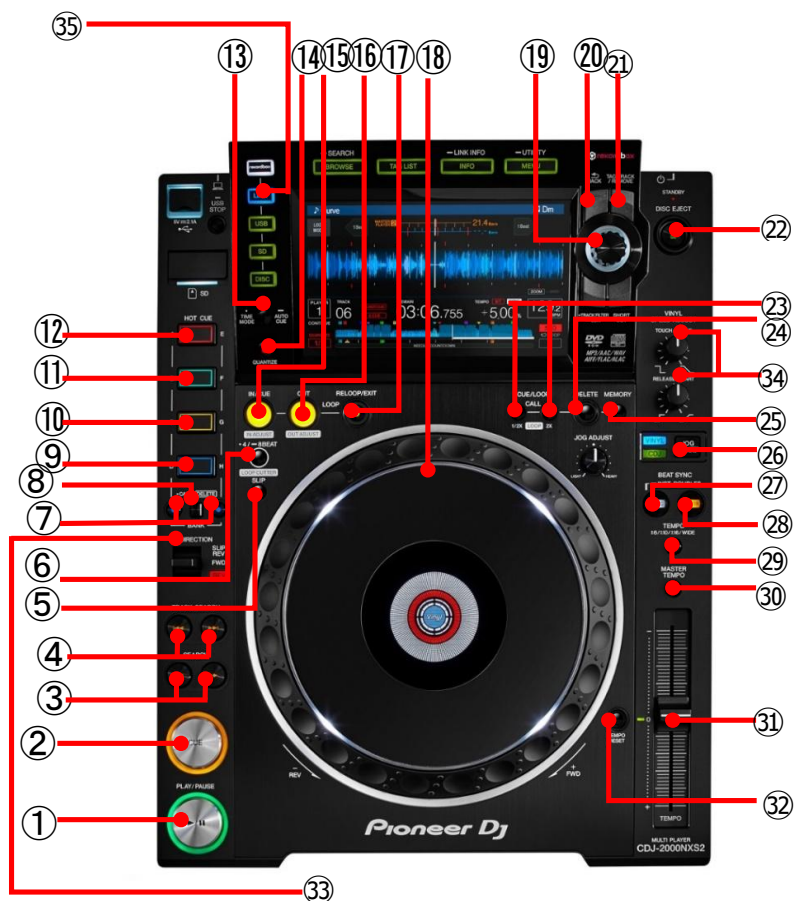


No.	CDJ-2000NXS2	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	4 / 8 BEAT / LOOP CUTTER	AUTO LOOP 4 / 8 / LOOP CUTTER
7	BANK	BANK
8	CALL / DELETE	CALL / DELETE
9	HOT CUE D / H	HOTCUE D / H
10	HOT CUE C / G	HOTCUE C / G
11	HOT CUE B / F	HOTCUE B / F
12	HOT CUE A / E	HOTCUE A / E
13	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
14	QUANTIZE	QUANTIZE
15	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
16	LOOP OUT	LOOP OUT / OUT ADJUST
17	RELOOP / EXIT	RELOOP / EXIT
18	JOG DIAL	JOG DIAL
3+18	Press 3 and turn 18 simultaneously	SEARCH
19	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
20	BACK	BACK
21	TAG TRACK / REMOVE	TAG TRACK / REMOVE
22	DISC EJECT	PLAYER UNLOAD
23	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
24	DELETE	DELETE
25	MEMORY	MEMORY



26	JOG MODE	JOG MODE
27	BEAT SYNC / INST. DOUBLES	BEAT SYNC Press and hold: INST. DOUBLES
28	BEAT SYNC MASTER	BEAT SYNC MASTER
29	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
30	MASTER TEMPO	MASTER TEMPO
31	TEMPO	TEMPO
32	TEMPO RESET	TEMPO RESET
33	DIRECTION	FWD. / REV.
34	VINYL SPEED ADJUST	VINYL SPEED ADJUST
35	LINK	CONNECT TO rekordbox
36	LOOP MODE	-
37	AUTO LOOP 1/4, 1/2, 1, 4, 8, 16, 32	AUTO LOOP 1/4, 1/2, 1, 2, 4, 8, 16, 32
38	1 BEAT	BEAT JUMP (1)
39	BEAT JUMP	-
	2,4,8,16 BEAT	BEAT JUMP (2),(4),(8),(16)
	WAVEFORM	Needle Search

CDJ-2000NXS

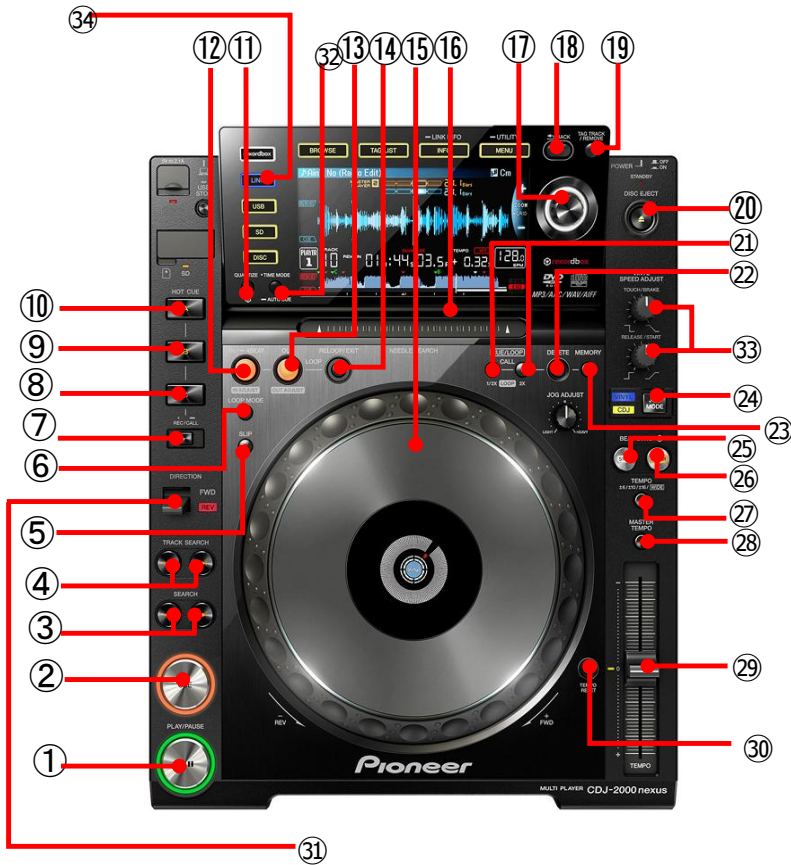


Note:
Enlarged waveform is not displayed while controlling rekordbox.

No.	CDJ-2000NXS	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	SLIP	SLIP
6	LOOP MODE	AUTO LOOP 4
7	HOT CUE REC/CALL	HOT CUE REC / CALL
8	HOT CUE C	SELECT / SET + STORE HOTCUE C
9	HOT CUE B	SELECT / SET + STORE HOTCUE B
10	HOT CUE A	SELECT / SET + STORE HOTCUE A
11	QUANTIZE	QUANTIZE
12	LOOP IN / CUE, 4 BEAT LOOP	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
13	LOOP OUT	LOOP OUT / OUT ADJUST
14	RELOOP / EXIT	RELOOP / EXIT
15	JOG DIAL	JOG DIAL
3+15	Press 3 and turn 15 simultaneously	SEARCH
16	NEEDLE SEARCH	NEEDLE SEARCH
17	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
18	BACK	BACK
19	TAG TRACK / REMOVE	TAG TRACK / REMOVE
20	DISC EJECT	PLAYER UNLOAD
21	CUE / LOOP CALL	CUE / LOOP CALL During loop: Loop Size 1/2, 2x
22	DELETE	DELETE
23	MEMORY	MEMORY
24	JOG MODE	JOG MODE

25	BEAT SYNC	BEAT SYNC
		Press and hold: INST. DOUBLES
26	BEAT SYNC MASTER	BEAT SYNC MASTER
27	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
28	MASTER TEMPO	MASTER TEMPO
29	TEMPO	TEMPO
30	TEMPO RESET	TEMPO RESET
31	DIRECTION	FWD. / REV.
32	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Press and hold: Auto Cue
33	VINYL SPEED ADJUST	VINYL SPEED ADJUST
34	LINK	CONNECT TO rekordbox

CDJ-900NXS

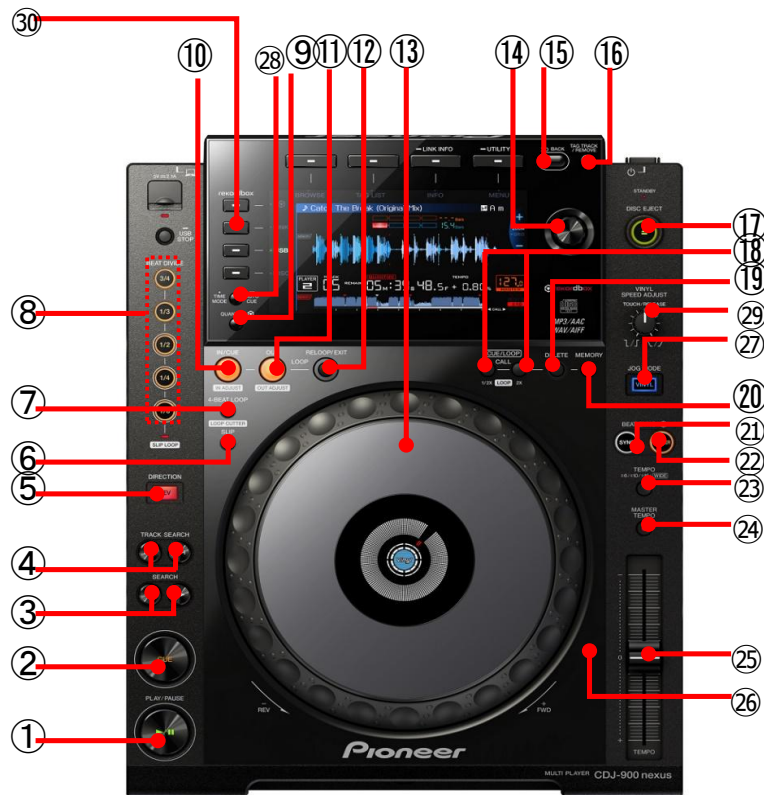


Note:
Enlarged waveform is not displayed while controlling rekordbox.



No.	CDJ-900NXS	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	DIRECTION	FWD. / REV.
6	SLIP	SLIP
7	4-BEAT LOOP	4 BEAT AUTO LOOP
8	BEAT DIVIDE 3/4	AUTO BEAT LOOP 3/4
	BEAT DIVIDE 1/3	AUTO BEAT LOOP 1/3
	BEAT DIVIDE 1/2	AUTO BEAT LOOP 1/2
	BEAT DIVIDE 1/4	AUTO BEAT LOOP 1/4
	BEAT DIVIDE 1/8	AUTO BEAT LOOP 1/8
9	QUANTIZE	QUANTIZE
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 and turn 13 simultaneously	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	BEAT SYNC	BEAT SYNC Press and hold: INST. DOUBLES

22	BEAT SYNC MASTER	BEAT SYNC MASTER
23	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE ± 16 /WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	JOG MODE	JOG MODE
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox dj

■ XDJ-1000MK2

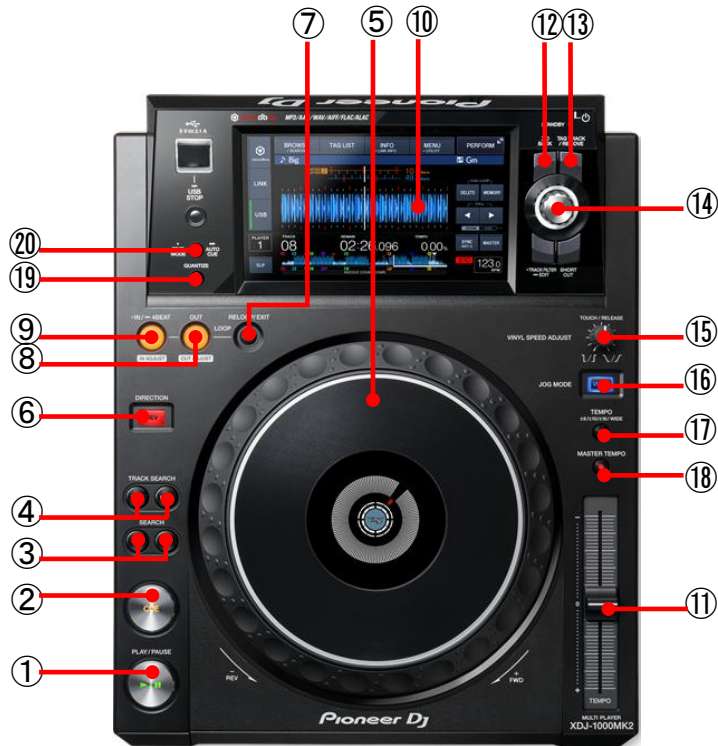

No.	XDJ-1000mk2	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO
19	QUANTIZE	QUANTIZE
20	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue

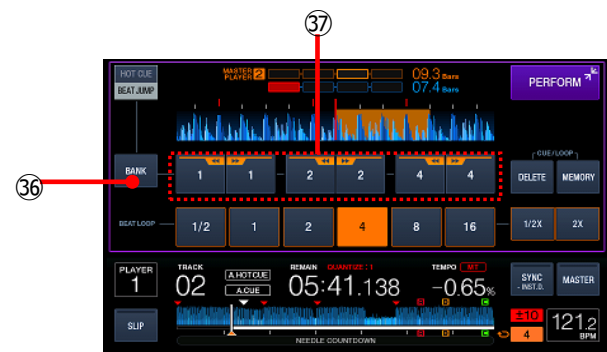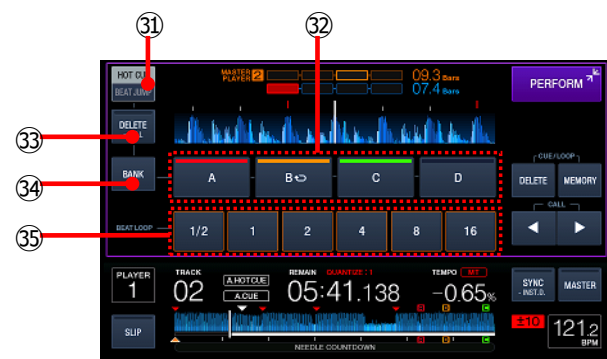

21	PERFORM	PERFORM
22	BROWSE	BROWSE
23	INFO	INFO
24	SOURCE SELECT - LINK	CONNECT TO rekordbox
25	SLIP	SLIP
26	BEAT SYNC	BEAT SYNC
27	BEAT SYNC MASTER	BEAT SYNC MASTER
28	CUE / LOOP CALL	CUE/ LOOP CALL
29	MEMORY	MEMORY
30	DELETE	DELETE
31	HOT CUE/BEAT JUMP	HOT CUE/BEAT JUMP
32	HOT CUE A/E HOT CUE B/F HOT CUE C/G HOT CUE D/H	SELECT HOTCUE A~H/ SET + STORE HOTCUE A~H
33	DELETE / CALL	HOT CUE DELETE
34	BANK	HOT CUE BANK
35	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8, 16
36	BANK	BEAT JUMP BANK
37	BEAT JUMP	BEAT JUMP 1, 2, 4, 8, 16, 32


■ XDJ-1000



Note:

Enlarged waveform is not displayed while controlling rekordbox.

No.	XDJ-1000	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	DIRECTION	FWD. / REV.
7	RELOOP / EXIT	RELOOP / EXIT
8	LOOP OUT	LOOP OUT / OUT ADJUST
9	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
10	TOUCH DISPLAY	---
11	TEMPO	TEMPO
12	BACK	BACK
13	TAG TRACK / REMOVE	TAG TRACK / REMOVE
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED Press and hold: ---
15	VINYL SPEED ADJUST	VINYL SPEED ADJUST
16	JOG MODE	JOG MODE
17	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
18	MASTER TEMPO	MASTER TEMPO

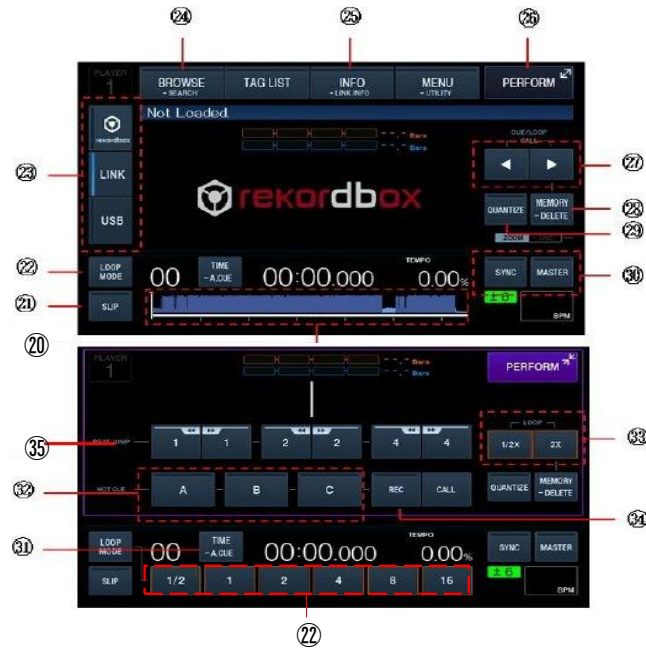

20	WAVEFORM	Needle Search
21	SLIP	SLIP
22	LOOP MODE	LOOP MODE
	AUTO LOOP 1/2, 1, 2, 4, 8, 16	AUTO LOOP 1/2, 1, 2, 4, 8, 16
23	SOURCE SELECT - LINK	CONNECT TO rekordbox
24	BROWSE	BROWSE
25	INFO	INFO
26	PERFORM	PERFORM
27	CUE / LOOP CALL	CUE/ LOOP CALL
		During loop: Loop Size 1/2, 2x
28	MEMORY / DELETE	MEMORY /
		Press and hold: DELETE
29	QUANTIZE	QUANTIZE
30	BEAT SYNC	BEAT SYNC
		Press and hold: INST. DOUBLES
	BEAT SYNC MASTER	BEAT SYNC MASTER
31	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Press and hold: Auto Cue
32	HOT CUE C	SELECT / SET + STORE HOTCUE C
	HOT CUE B	SELECT / SET + STORE HOTCUE B
	HOT CUE A	SELECT / SET + STORE HOTCUE A
33	HALF / DOUBLE LOOP	HALF / DOUBLE LOOP
34	HOT CUE REC	HOT CUE REC
35	BEAT JUMP	BEAT JUMP (1, 2, 4)



■ XDJ-700



Note:

Enlarged waveform is not displayed while controlling rekordbox.

No.	XDJ-700	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	JOG DIAL	JOG DIAL
3+5	Press 3 and turn 5 simultaneously	SEARCH
6	RELOOP / EXIT	RELOOP / EXIT
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
9	TOUCH DISPLAY	---
10	TEMPO	TEMPO
11	BACK	BACK
12	TAG TRACK / REMOVE	TAG TRACK / REMOVE
13	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
14	VINYL MODE	JOG MODE
15	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO

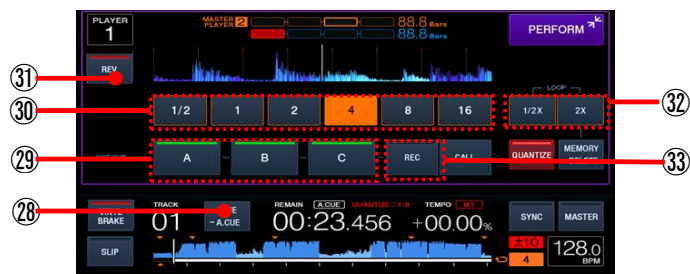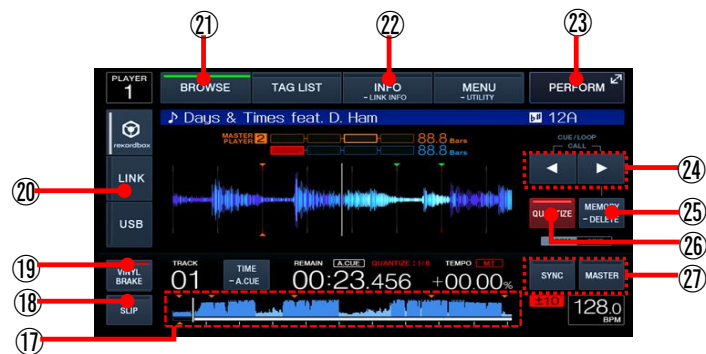

17	WAVEFORM	Needle Search
18	SLIP	SLIP
19	VINYL BRAKE	VINYL SPEED ADJUST - TOUCH/BRAKE
20	SOURCE SELECT - LINK	CONNECT TO rekordbox
21	BROWSE	BROWSE
22	INFO	INFO
23	PERFORM	PERFORM
24	CUE / LOOP CALL	CUE/ LOOP CALL
		During loop: Loop Size 1/2, 2x
25	MEMORY / DELETE	MEMORY / Press and hold: DELETE
26	QUANTIZE	QUANTIZE
27	BEAT SYNC	BEAT SYNC
		Press and hold: INST. DOUBLES
	BEAT SYNC MASTER	BEAT SYNC MASTER
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME
		Press and hold: Auto Cue
29	HOT CUE C	SELECT / SET + STORE HOTCUE C
	HOT CUE B	SELECT / SET + STORE HOTCUE B
	HOT CUE A	SELECT / SET + STORE HOTCUE A
30	AUTO LOOP 1/2, 1, 4, 8, 16	AUTO LOOP 1/2, 1, 4, 8, 16
31	REV	REV
32	HALF / DOUBLE LOOP	HALF / DOUBLE LOOP
33	HOT CUE REC	HOT CUE REC

Note:


Enlarged waveform is not displayed while controlling rekordbox.

CDJ-2000




No.	CDJ-2000	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	4 BEAT LOOP / LOOP CUTTER	AUTO LOOP 4 LOOP SIZE /2
6	HOT CUE REC/CALL	HOT CUE REC / CALL
7	HOT CUE C	SELECT / SET + STORE HOTCUE C
8	HTO CUE B	SELECT / SET + STORE HOTCUE B
9	HOT CUE A	SELECT / SET + STORE HOTCUE A
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE Press and hold: AUTO LOOP 4
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	NEEDLE SEARCH	NEEDLE SERACH
3+14	Press 3 and turn 14 simultaneously	SEARCH
14	JOG DIAL	JOG DIAL
15	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
16	BACK	BACK
17	TAG TRACK / REMOVE	TAG TRACK / REMOVE
18	DISC EJECT	PLAYER UNLOAD
19	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
20	DELETE	DELETE
21	MEMORY	MEMORY
22	JOG MODE	JOG MODE
23	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	TEMPO RESET	TEMPO RESET
27	DIRECTION	FWD. / REV.
28	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
29	VINYL SPEED ADJUST	VINYL SPEED ADJUST
30	LINK	CONNECT TO rekordbox

CDJ-900

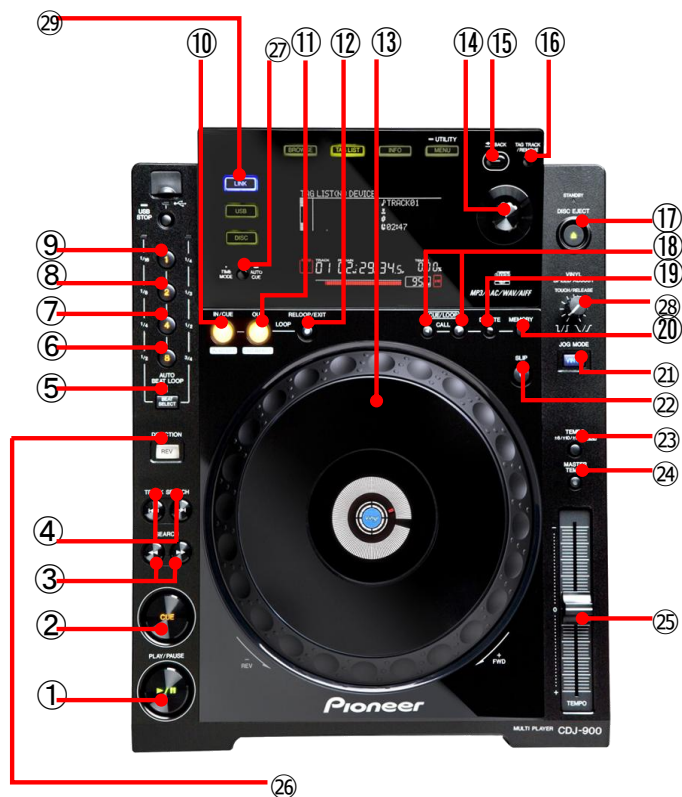


No.	CDJ-900	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2, 8, 3/4
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4, 4, 1/2
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8, 2, 1/3
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16, 1, 1/4
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	SLIP	SLIP
23	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
24	MASTER TEMPO	MASTER TEMPO
25	TEMPO	TEMPO
26	DIRECTION	FWD. / REV.
27	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
28	VINYL SPEED ADJUST	VINYL SPEED ADJUST
29	LINK	CONNECT TO rekordbox

■ CDJ-850

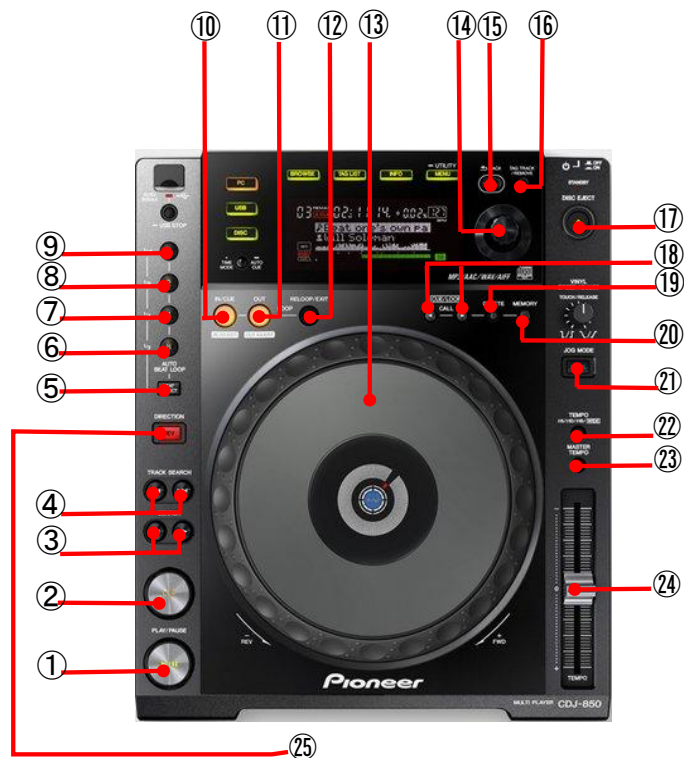

No.	CDJ-850	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	BEAT SELECT	LOOP/ROLL SIZE SWITCH
6	AUTO BEAT LOOP 8	AUTO BEAT LOOP 1/2, AUTO BEAT LOOP 8
7	AUTO BEAT LOOP 4	AUTO BEAT LOOP 1/4, AUTO BEAT LOOP 4
8	AUTO BEAT LOOP 2	AUTO BEAT LOOP 1/8, AUTO BEAT LOOP 2
9	AUTO BEAT LOOP 1	AUTO BEAT LOOP 1/16, AUTO BEAT LOOP 1
10	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
11	LOOP OUT	LOOP OUT / OUT ADJUST
12	RELOOP / EXIT	RELOOP / EXIT
13	JOG DIAL	JOG DIAL
3+13	Press 3 while turning 13.	SEARCH
14	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
15	BACK	BACK
16	TAG TRACK / REMOVE	TAG TRACK / REMOVE
17	DISC EJECT	PLAYER UNLOAD
18	CUE / LOOP CALL	CUE/ LOOP CALL During loop: Loop Size 1/2, 2x
19	DELETE	DELETE
20	MEMORY	MEMORY
21	JOG MODE	JOG MODE
22	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
23	MASTER TEMPO	MASTER TEMPO
24	TEMPO	TEMPO
25	DIRECTION	FWD. / REV.

CDJ-400

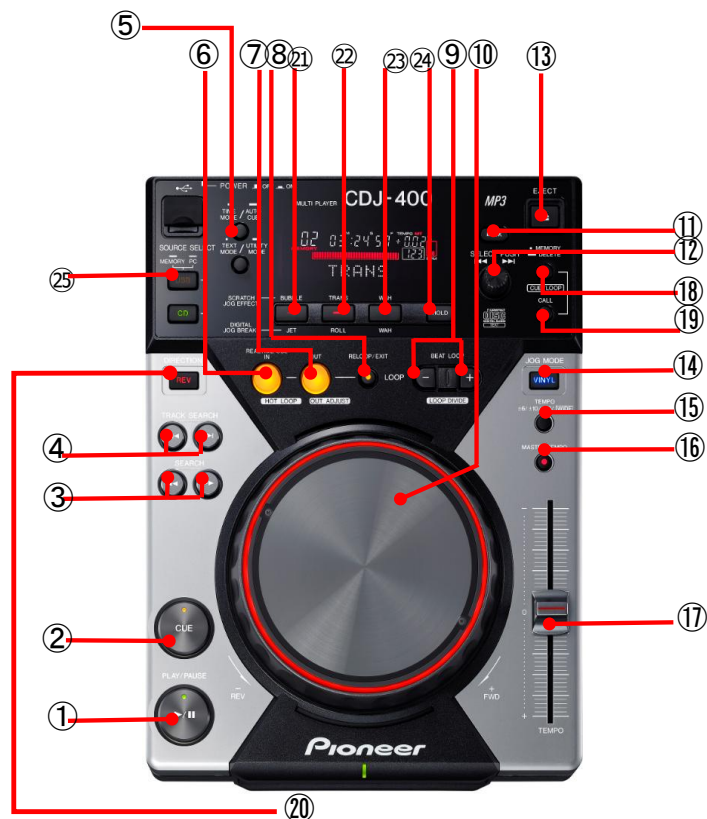


Note:

*1 Call next Memory Cue. Previous Memory Cue cannot be called.
To call multiple Memory Cues, press TRACK SEARCH (PREV) to jump to the beginning of the track and then press CUE/LOOP CALL.
You can call the Cues one by one.

*2 CDJ connected to DECK1/DECK3 controls FX1.
CDJ connected to DECK2/DECK4 controls FX2.

No.	CDJ-400	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO $\pm 6/\pm 10/\pm 16$ /WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	MEMORY / DELETE	MEMORY Press and hold:DELETE
19	CUE / LOOP CALL ^(※1)	Call Next Memory Cue/Loop
20	DIRECTION	FWD. / REV.
21	BUBBLE/JET ^(※2)	FX1 ON/OFF
22	TRANS/ROLL ^(※2)	FX2 ON/OFF
23	WAH/WAH ^(※2)	FX3 ON/OFF
24	HOLD ^(※2)	RELEASE FX
25	USB SELECT (PC)	CONNECT TO rekordbox

CDJ-350

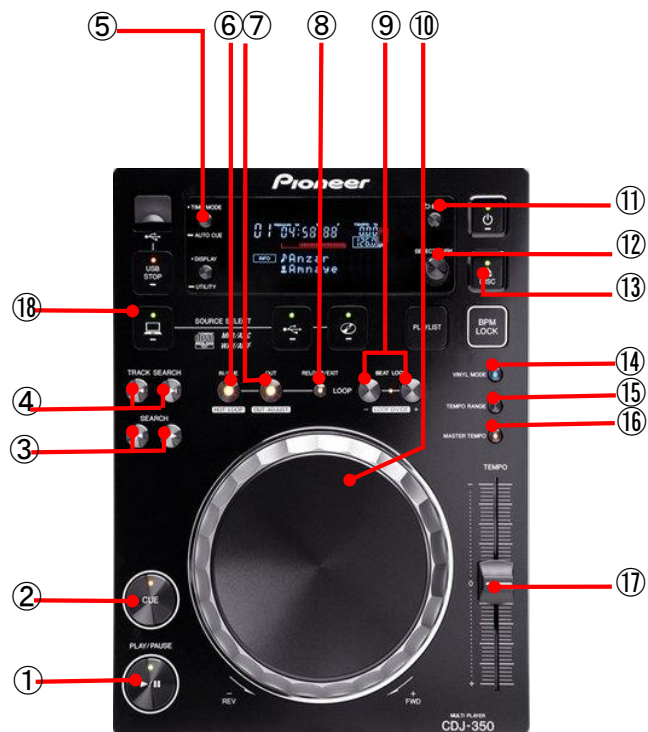

No.	CDJ-350	rekordbox
1	PLAY / PAUSE	PLAY / PAUSE
2	CUE	CUE
3	SEARCH	While Playing: BEAT JUMP 8 While Pause: BEAT JUMP FINE
4	TRACK SEARCH	PREV / NEXT TRACK
5	TIME MODE / AUTO CUE	REMAINING / ELAPSED TIME Press and hold: Auto Cue
6	LOOP IN / CUE	LOOP IN / IN ADJUST / CUE
7	LOOP OUT	LOOP OUT / OUT ADJUST
8	RELOOP / EXIT	RELOOP / EXIT
9	BEAT LOOP - / +	HALF / DOUBLE LOOP
10	JOG DIAL	JOG DIAL
3+10	Press 3 while turning 10.	SEARCH
11	BACK	BACK
12	Rotary selector	Turn: TREE / LIST SELECT UP / DOWN Press: LOAD SELECTED
13	DISC EJECT	PLAYER UNLOAD
14	VINYL MODE	VINYL MODE
15	TEMPO ±6/±10/±16/WIDE	TEMPO RANGE
16	MASTER TEMPO	MASTER TEMPO
17	TEMPO	TEMPO
18	COMPUTER	CONNECT TO rekordbox