

OneLibrary Compatible USB Device Export Guide

Target version: rekordbox 7.2.11 or later

■ Please read before you begin

Purpose of this guide	This guide walks you through the steps needed to use your tracks and playlists on OneLibrary compatible players such as the CDJ-3000X.
Target version	rekordbox 7.2.11 or later (If you are on an earlier version, please update first.)
Who this applies to	Users using a mix of OneLibrary compatible players (CDJ-3000X / XDJ-AZ / OPUS-QUAD) and legacy players (CDJ-3000 / XDJ-AX / CDJ-2000NXS2).
Overview	<ul style="list-style-type: none">■ PHASE 1 (everyone): Respond to the caution dialog on first launch.■ PHASE 2 (some users): Resolve any mismatch between your libraries.<ul style="list-style-type: none">→ Step 1: Check whether a mismatch exists.→ Step 2: Sync OneLibrary and Device Library.■ Exporting to a brand-new USB drive with both OneLibrary and Device Library.

⚠ This guide requires rekordbox 7.2.11 or later. If your version is older, please update to the latest version from the official rekordbox website before proceeding.


rekordbox version check:

- Mac: Click "rekordbox" to the right of the Apple logo > "About rekordbox"
- Windows : Click "Help" in the top menu bar > "About rekordbox"


PHASE 1 First Launch — All Users

[Purpose] Respond to the confirmation dialog that appears after updating and launch rekordbox in OneLibrary ready mode.

① When you launch rekordbox, the following caution will appear.

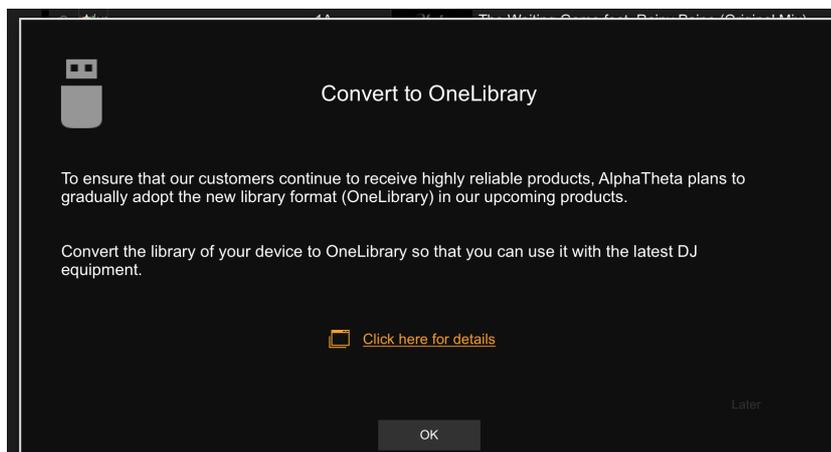


② Press OK to continue.

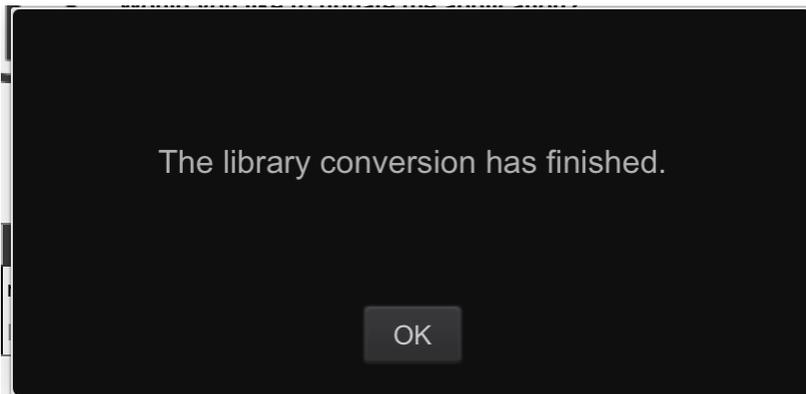

💡 If you use the History feature, we strongly recommend the following settings to ensure smooth syncing between OneLibrary and Device Library:

Settings > DJ System > Device > History


- "Import the play history automatically" > ON
- "Delete from the device after importing the play history" > OFF

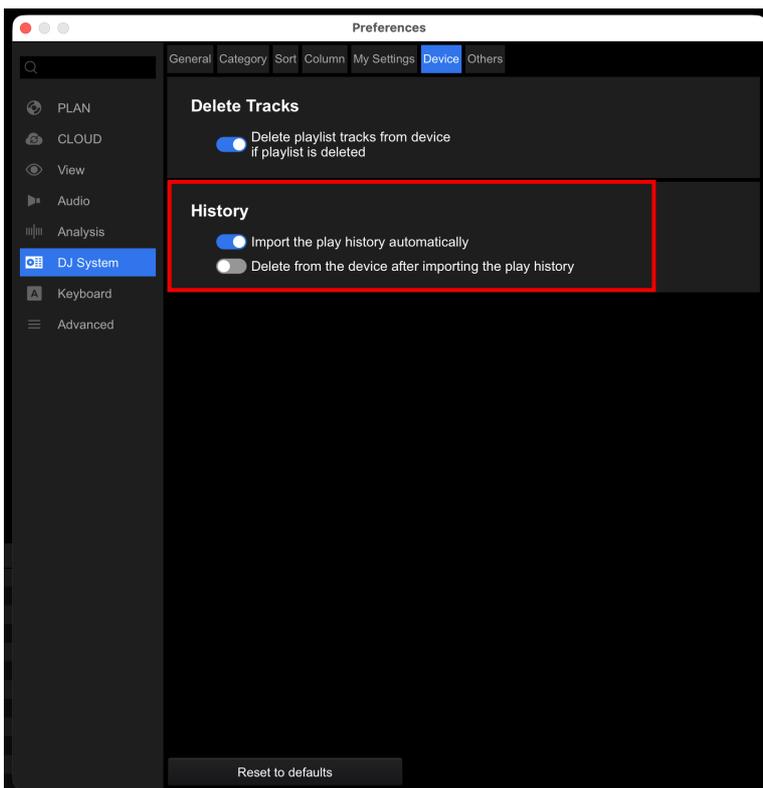

PHASE 2 Matching OneLibrary and Device Library — Some Users Only

[Purpose] If the contents of OneLibrary and Device Library on your USB drive do not match, this phase will bring them into alignment.

After pressing OK in PHASE 1, proceed with this phase only if the following additional caution appears.

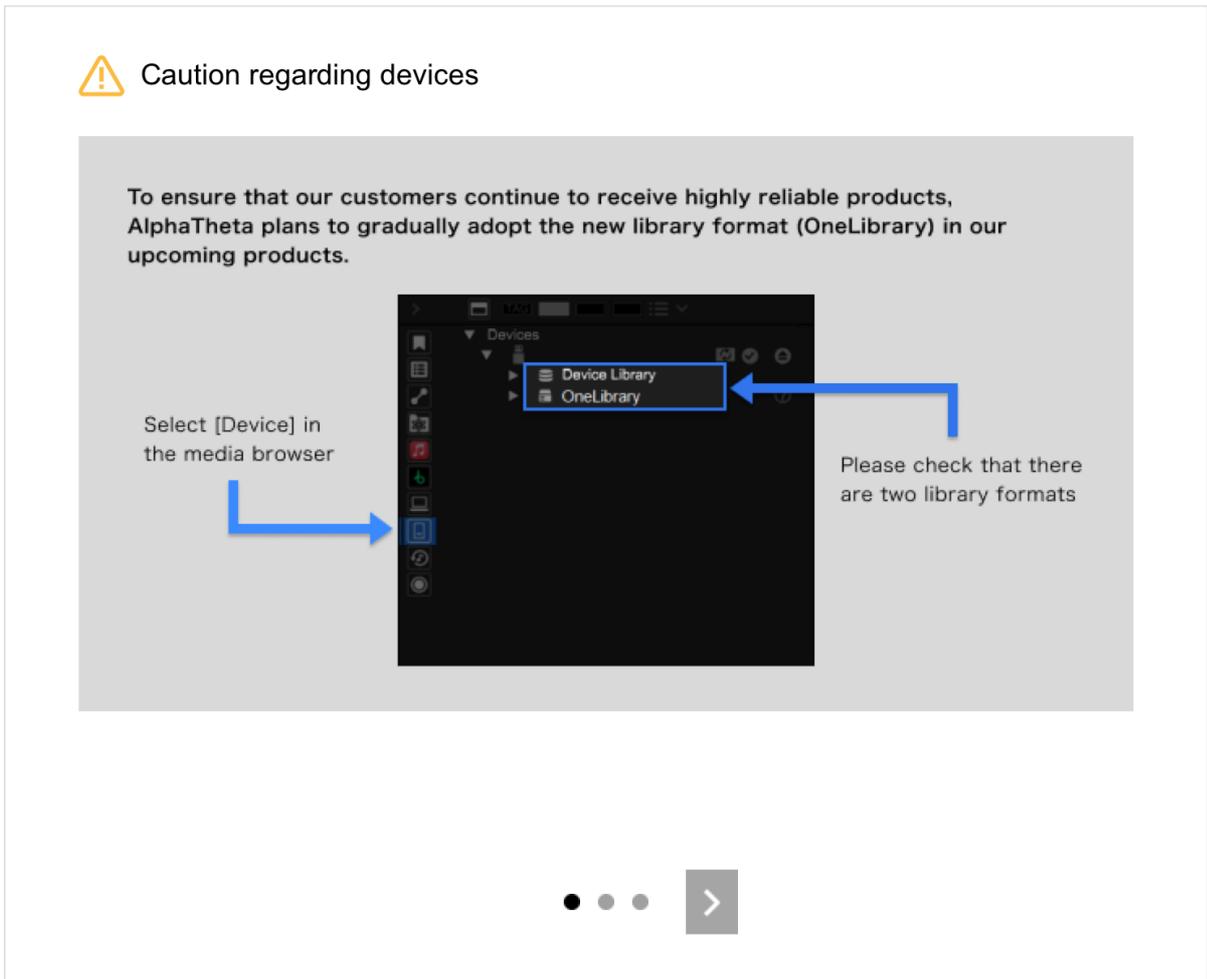

This caution appeared	It did not appear
Please complete Step 1 and Step 2 below.	No action is needed. This guide ends here. You can use rekordbox as normal.

This caution indicates that OneLibrary and Device Library on your USB drive are out of matching.


<p>Device Library For legacy players: CDJ-3000, XDJ-AX, CDJ-2000NXS2, etc.</p>	<p>OneLibrary For next-generation players: CDJ-3000X, XDJ-AZ, OPUS-QUAD, etc.</p>
---	--

Please complete the following two steps to bring OneLibrary and Device Library into sync.

Step 1	<p>Identify the mismatch between OneLibrary and Device Library</p> <p>→ Compare the playlists and track counts in Device Library and OneLibrary. If they differ, proceed to Step 2.</p>
---------------	--

A. Check playlists


Compare the names and number of playlists exported to Device Library and OneLibrary.

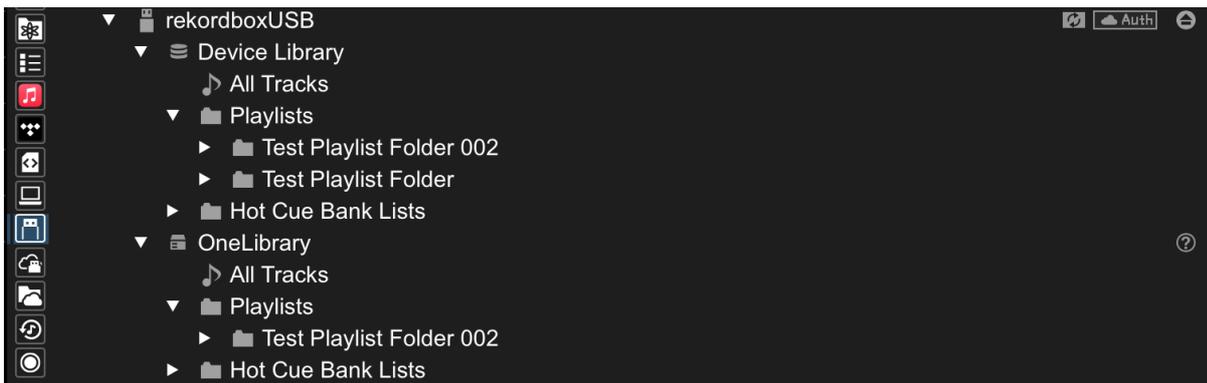


Device Library has more playlists	Playlists exist only in OneLibrary
OneLibrary and Device Library need to be matched. Proceed to Step 2.	There is a discrepancy between Device Library and OneLibrary. Please refer to the "USB Export Guide" for details.

B. Check track counts

① Select your USB → Open "Device Library" → "All Tracks" and note the track count shown in the top-left of the track list.

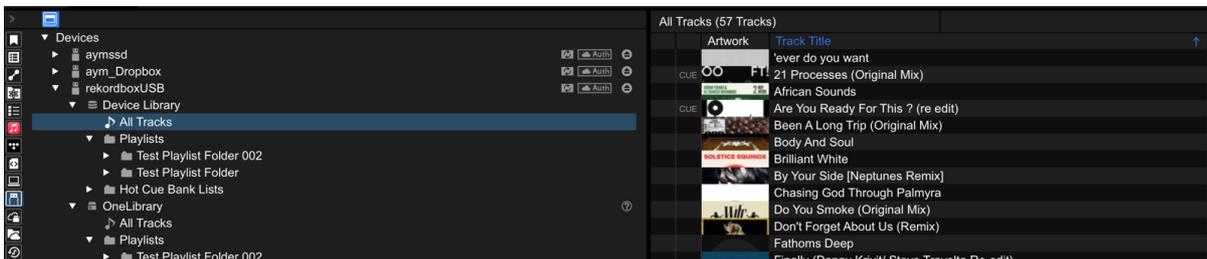

② Do the same for "OneLibrary" → "All Tracks" and check the track count.

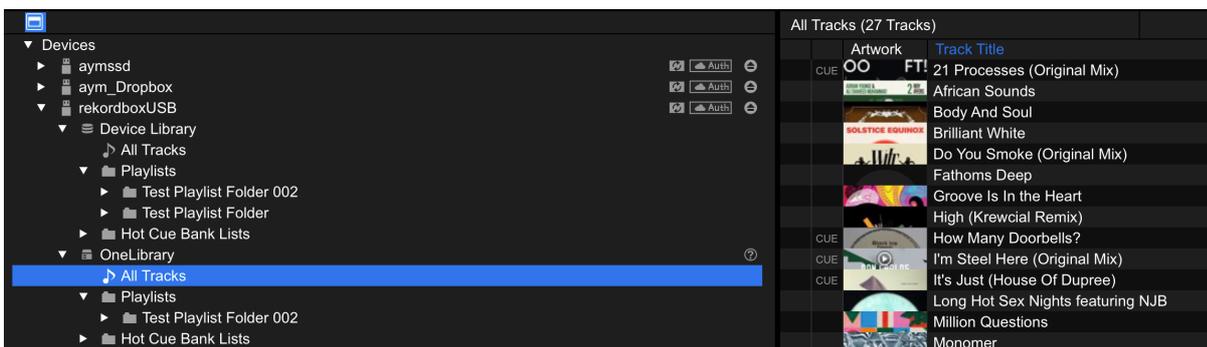


The two counts match	The counts differ
OneLibrary and Device Library are already in sync. No further action is needed.	There is a discrepancy. Proceed to Step 2 to bring both libraries into sync.


Step 2 Match Device Library and OneLibrary

Merge Device Library into OneLibrary so that both libraries on your USB drive contain matching content.


- ① Select your USB > Right-click "OneLibrary" > Select "Convert from Device Library."

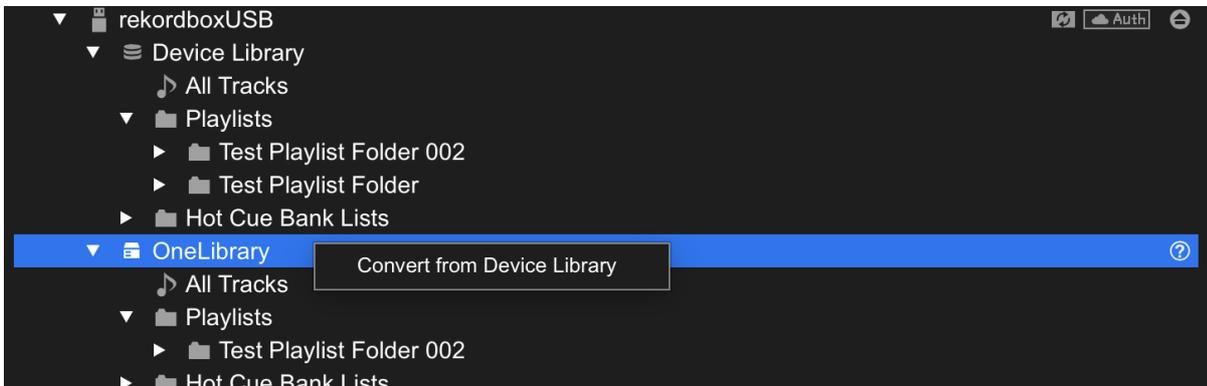

- ② A caution will appear. Review it and press YES.

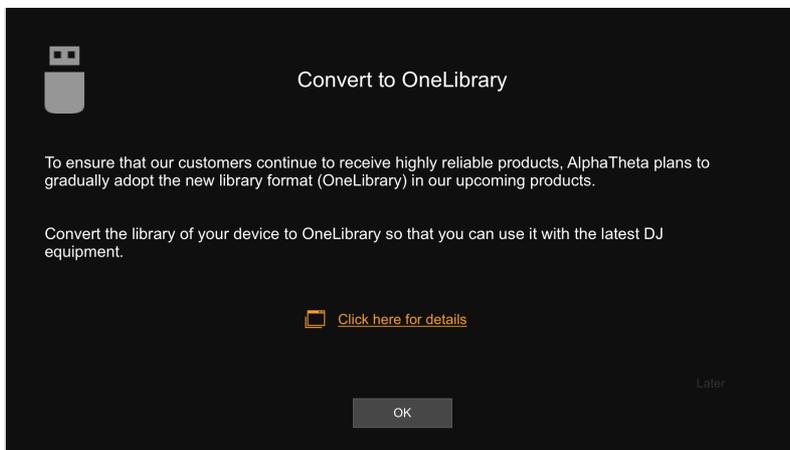

- ③ Press YES on the next caution as well.

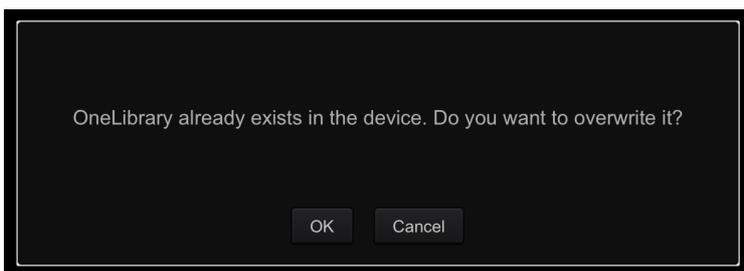

You're all done! OneLibrary and Device Library are now matched.

Exporting to a brand new USB Drive with Both OneLibrary and Device Library

[Purpose] This section explains how to export your library to a brand new USB drive so that it is compatible with both OneLibrary and Device Library.

We recommend importing any playlist data from your current USB drive into your rekordbox library before proceeding.

Step 1 Update rekordbox to the latest version

Download the latest version of rekordbox for free from rekordbox.com. (This guide uses version 7.2.5.)

Step 2 NewUSB drive

Format the USB drive you wish to use.

*Formatting will erase all data, including non-rekordbox files. Please back up any important data beforehand.


This can be done using Disk Utility on Mac or Explorer on Windows. Supported USB formats for our DJ players are as follows.

- Windows: FAT32, exFAT
 - Mac: FAT32, exFAT, HFS+ (Mac OS(Mac OS only))
- *exFAT is now supported only : CDJ-3000X, CDJ-3000, XDJ-AZ, OPUS-QUAD, OMNIS-DUO, XDJ-XZ and XDJ-RX3.


Step 3 Export your playlists

Open rekordbox and select Export Mode from the menu in the top-left corner.


① Select the new USB drive you want to use from the tree. Press OK on the caution that appears.

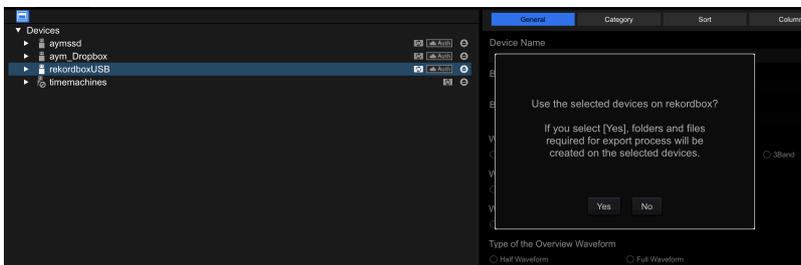

Select a playlist from the left-hand panel, right-click the playlist you want to export, choose "Export Playlist," and export it to your formatted USB drive.

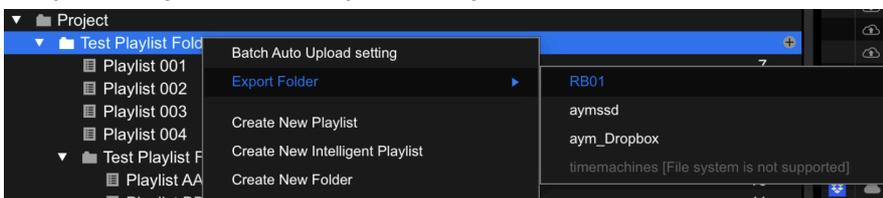

If the "Convert to OneLibrary" screen appears during this process, press OK.

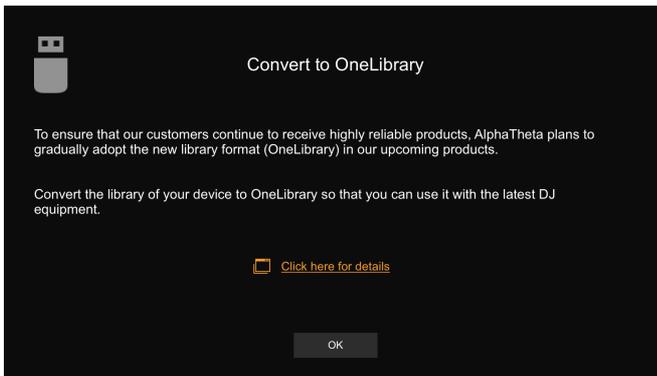

Once the export is complete, you are all set.

Your USB drive will now be fully compatible with the CDJ-3000X as well as all other DJ multi players and all-in-one DJ systems.